

VALCOM

Pro II



Sound Level Meter

CE

Instruction Manual

V-9992

Contents

	<u>Title</u>	<u>Page</u>
I.	Safety Information.....	1
II.	General Description	1-2
III.	Specifications.....	2-3
IV.	Name and Functions.....	4-5
V.	Calibration Procedures	6-7
VI.	Measurement Preparation	7
VII.	Operating Precautions	7
VIII.	Measurement.....	8

I. Safety Information

Read the following safety information carefully before attempting to operate or service the meter.

Use the meter only as specified in this manual; otherwise, the protection provided by the meter may be impaired.

- Environmental Conditions
 - ❶ Altitude up to 2000 meters
 - ❷ Relative humidity 90% max
 - ❸ Operation Ambient 0 - 40°C
- Maintenance & Cleaning
 - ❶ Repairs or servicing not covered in this manual should only be performed by qualified personnel.
 - ❷ Periodically wipe the case with a dry cloth. Do not use abrasives or solvents on this instrument.
- Safety Symbols
 - Comply with EMC
 - ⚠ When servicing, use only specified replacement parts.

II. General Description

Thank you for using our Sound Level Meter. To ensure that you can get the most from it, we recommend that you read and follow the manual carefully before use.

This unit conforms to the IEC651 type 2, ANSI S1.4 type 2 for Sound Level Meters.

This Sound Level Meter has been designed to meet the measurement requirements of safety Engineers, Health, Industrial safety offices and sound quality control in various environments.

- ☐ Range is from 32dB to 130dB at frequencies between 31.5Hz and 8kHz.

SOUND LEVEL METER

- Display with 0.1dB steps on a 4-digit LCD.
- Two equivalent weighted sound pressure levels, A and C.
- AC signal output is available from standard 3.5mm coaxial socket suitable for a frequency analyzer, level recorder, FFT analyzer, graphic recorder, etc.

III. Specifications

Standard Applied: IEC651 Type 2, ANSI S1.4 Type 2.

Frequency Range: 31.5Hz - 8kHz

Measuring Level Range: 32dB - 130 dB

Frequency Weighting: A and C scale

Microphone: ½ inch electret condenser microphone

Display: LCD

Digital Display: 4 digit

Resolution: 0.1dB

Display Update: 0.5 sec.

Time Weighting: FAST (125 mS), Slow (1 sec.)

Level Ranges: Lo: 32dB – 80dB
Med: 50dB – 100dB
Hi: 80dB – 130dB

Accuracy: ± 1.5 dB (under reference conditions, 94dB @ 1kHz)

Dynamic Range: 50dB

Alarm Function: “**OVER**” is shown when input is more than upper limit of range.
“**UNDER**” is shown when input is less than lower limit or range.

MAX/MIN Hold: Hold readings at Maximum and Minimum Value.

SOUND LEVEL METER

AC Output: 1 Vrms at FS (full scale)
Output impedance: Approx 100 Ohms
FS: means the upper limit of each level range

Power Supply: One 9V battery, 006P or IEC 6F22 or NEDA 1604

Power Life: Approximately 70 hours (alkaline battery)

Operation Temperature: 0 to 40°C (32 to 104°F)

Operation Humidity: 10 to 90% Relative

Storage Temperature: -10 to 60°C (14 to 140°F)


Storage Humidity: 10 to 75% Relative

Dimensions: 9.1" L x 2.1" W x 1.3" H
(23.1 cm x 5.3 cm x 3.3 cm)

Weight: .75 lbs (.34 kg) (including battery)

Accessories: 9V alkaline battery, instruction manual, carrying case, screwdriver, and windscreen


IV. Name And Functions

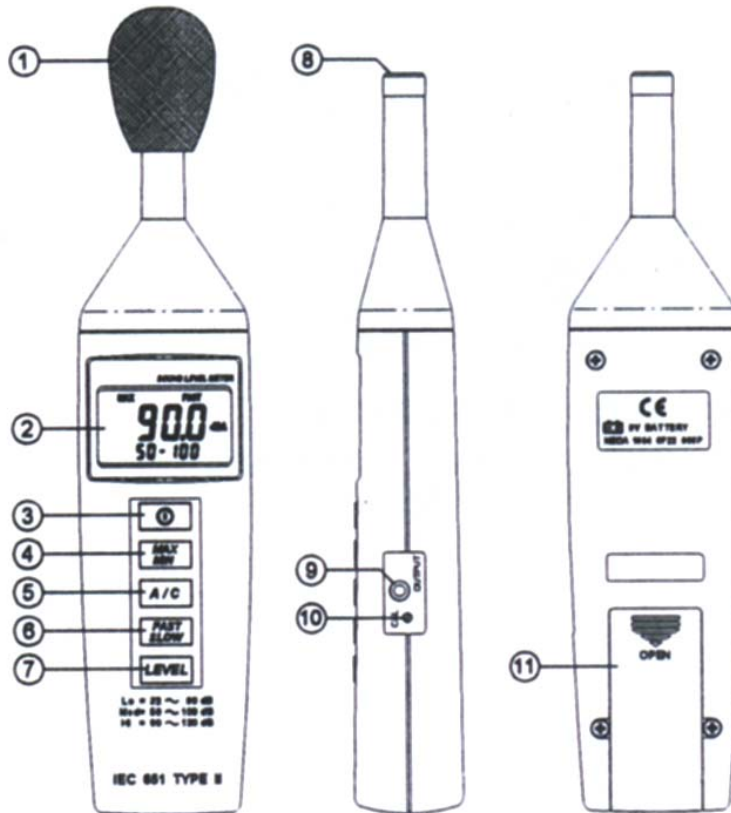

① Windscreen

If you operate at wind speed over 10m/sec (22 mph), please use protective accessory.


② Display

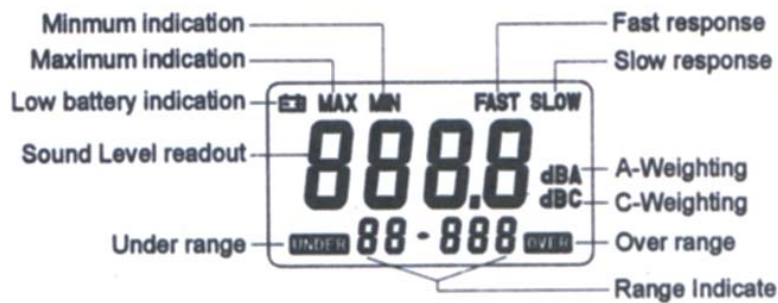


③ Power Button

The ① key turns the sound level meter ON or OFF.

④ MAX / MIN Hold Button

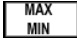Press  button to enter the maximum and minimum recording mode. Select the proper Level range before using MAX/MIN to ensure that reading value will not exceed the measurement range. Press once to select MAX value. Press again to select MIN value, and press again to select current Value with “ MAX /MIN “ annunciator blinking.

Press  and hold down button for 2 seconds to exit the MAX/MIN mode.

Note: If change sound level range or change A-C weight, the MAX/MIN mode will clear.

⑤ Frequency Weighting Select Button

A - Weighting. For general sound level measurements.

C - Weighting. For checking the low-frequency content of noise.

(If the C-weighted level is much higher than the A-weighted level, then there is a large amount of low-frequency noise.)

⑥ Time Weighting Select Button

FAST: for measuring peak sound levels

SLOW: for measuring average or nominal sound levels

⑦ Level Range Control Button

Each time the level button is pressed, the level range will change between “Lo” level (32 to 80 dB), “Med” level (50 to 100 dB) and “Hi” level (80 to 130 dB) in the circular manner.

⑧ Microphone

1/2 inch Electret Condenser microphone


⑨ CAL Potentiometer

Calibration control, for level calibration adjustment.

SOUND LEVEL METER

⑩ AC output terminal


- 1 Vrms Corresponding to each range step.
- Output impedance = 100 ohms
- Output signal by standard 3.5 mm coaxial socket signal on pin.

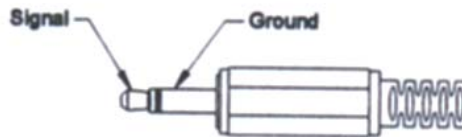

⑪ Battery Cover


V. Calibration Procedures

Using a standard Acoustic Calibrator (94dB, 1kHz sine wave).

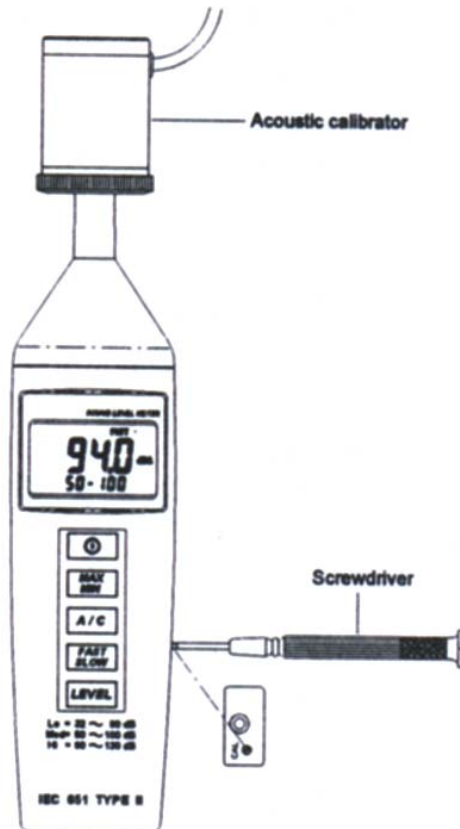

- (1) Make the following switch settings.
Display: dBA
Time Weighting: FAST
Measurement Mode: MAX/MIN Mode function disable
Level Range: 50 to 100 dB
- (2) Insert the microphone housing carefully into the insertion hole of the calibrator.
- (3) Turn on the switch of calibrator and adjust the CAL potentiometer of the unit.
The level display will indicate the desired level.
Our products are all well calibrated before shipment.
Recommended Recalibration cycle: 1 year.

VI. Measurement Preparation

- (1) **Battery Loading**
Remove the battery cover on the back and put in one 9V Battery.
- (2) **Battery Replacement**
When the battery voltage drops below the operating voltage, mark  appears. If it appears, battery should be replaced with new one.

VII. Operating Precautions

- (1) Wind blowing across the microphone would bring additional extraneous noise. When using the instrument in the presence of wind, it is a must to mount the windscreen to not pick up undesired signals.
- (2) Calibrate the instrument before operation if the instrument was not in use for a long time or operated in bad environment.
- (3) Do not store or operate the instrument at high temperature and high humidity environment.
- (4) Keep microphone dry and avoid severe vibration.
- (5) Please take out the battery and keep the instrument in low humidity environment when not in use.

VIII. Measurement

- (1) Open battery cover and install a 9V battery in the battery compartment.
- (2) Turn power ON and select the desired response time and weighting. If the sound source consists of short bursts or only catching sound peak, set response to FAST. To measure average sound level, use the slow setting. Select A-weighting for general noise sound level and C-weighting for measuring sound level of acoustic material.
- (3) Select desired level.
- (4) Hold the instrument comfortably in hand and point the microphone at the suspected noise source, the sound pressure level will be displayed.
- (5) When MAX/MIN (maximum, minimum hold) mode is chosen, the instrument captures and holds the maximum and minimum noise level for a long period using any of the time weightings and ranges. Press the MAX/MIN button 2 seconds to clear the MAX/MIN reading. "MAX/MIN" symbol disappears.
- (6) Turn OFF the instrument.