

PARTS LIST

FOR



131-6001 FOUR WIRE LOCAL BATTERY WALL TELEPHONE
W/BLANK FACE PLATE

131-1007	Hookswitch Assembly With Base Plate (Modified).....
131-1005	Dial Mounting Bracket Assembly (TT Pad Holder).....
131-5029	Face Plate Blank.....
131-1008	Transformer.....
131-1009	Number Card.....
131-1010	Number Card Retainer.....
131-1011	Terminal Block.....
131-1012	Housing Black/Brown.....
131-1013	Capacitor Kit-.47MFD 400V with special grade blue seal
131-1801	Handset (Push to Talk).....
131-5011	Transmitter Element.....
131-5004	Receiver Element.....
131-1016	Coil Cord (Standard Length).....
131-5030	Coil Cord (Extended Length).....
131-5023	Push to Talk Switch for Handset.....
131-5003	Receiver Cap.....
131-5009	Transmitter Cap.....
131-5039	Resistor 1/4 Watt Carbon.....

Burco Simplex Adapter

Transmit T Yellow to Pin 1
 Transmit R Yellow to Pin 2
 Receive T Blue to Pin 5
 Receive R Blue to Pin 6
 Negative to Negative black 4
 Positive to Positive red 3

☐ Low Current Setting (24vdc 29ma. 48vdc 58ma no loop resistance.)
☐ High Current Setting (24vdc 72ma. 48vdc 145ma.no loop resistance.)

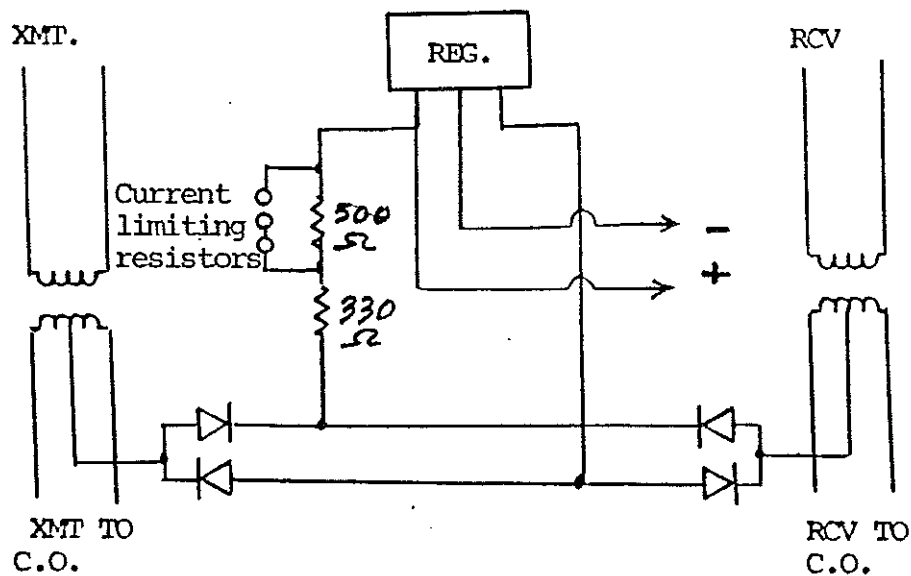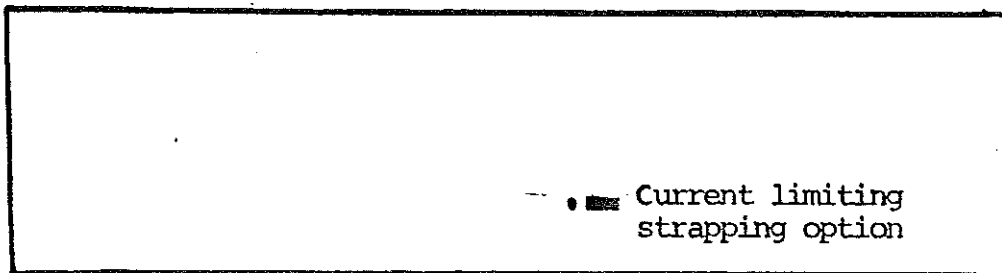

SCHEMATIC DIAGRAM

BURCO MAG SET

