


Step-by-step instructions for easy installation and use of your new Stromberg-Carlson telephone

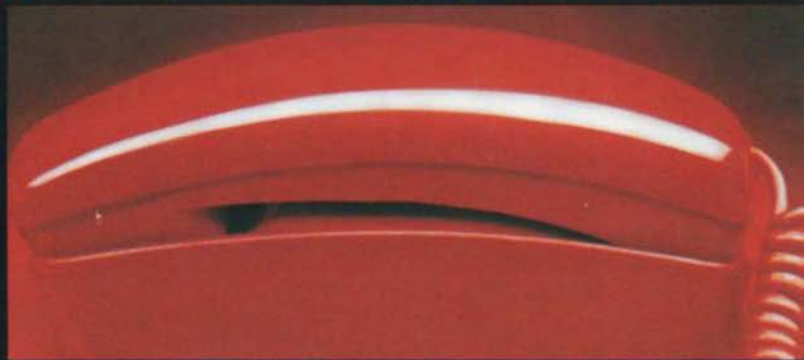



Colorful, personal communications

Congratulations!

You have selected a sophisticated piece of communications equipment. Your Stromberg-Carlson telephone is simply beautiful and beautifully simple to install and use. Follow the installation instructions for years of reliable, dependable service.

Inserting the Slenderet® Coil Cord:

The Slenderet coil cord has a plug on both ends. The only noticeable difference between these plugs is the length of the plastic tab on the top of each one. The plug with the longer tab should be inserted into the handset *tab down*. The plug with the shorter tab should be inserted into the base (see drawing on right) *tab up*.

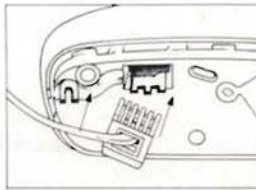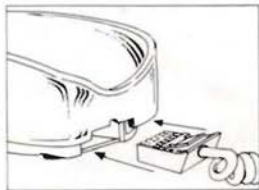

Inserting the Slenderet Silver Satin Line Cord:

Your new Slenderet phone includes a plug-ended silver satin line cord which must be inserted into the base of the phone. (see illustration). Be sure to thread the line through the restraining channel as shown.

How to Install Your Telephone

The installation procedures for all Stromberg-Carlson telephones in this group are simple and easy to follow. The plug-ended silver satin line cord quickly and simply connects to typical outlets in your home or office (see Figures 1, 2, or 3), and enables you to install your new phone in a matter of minutes.

Fig.
1



Fig.
2



Fig.
3



How to install your telephone

Figure B: A four-prong adapter, which can be purchased separately, is required.

1. Insert adapter into outlet, making sure that adapter groove and outlet ridge are in proper alignment.
2. Insert plug at end of silver satin line cord into adapter.
3. Be sure to allow enough slack. The plug will not disconnect from the adapter or outlet unless you press the *clip*. Too much tension in the silver satin line cord creates strain on the wires and may result in damage or malfunction.

Figure C: Follow the same procedures as for Outlet B.

Figure A: The plug at the end of the silver satin line cord simply inserts into the outlet.

Fig. A

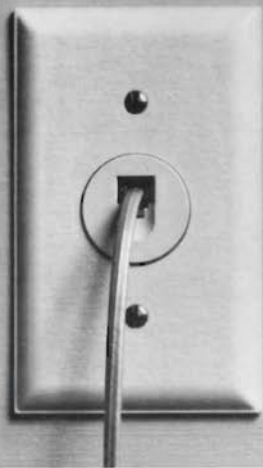


Fig. B



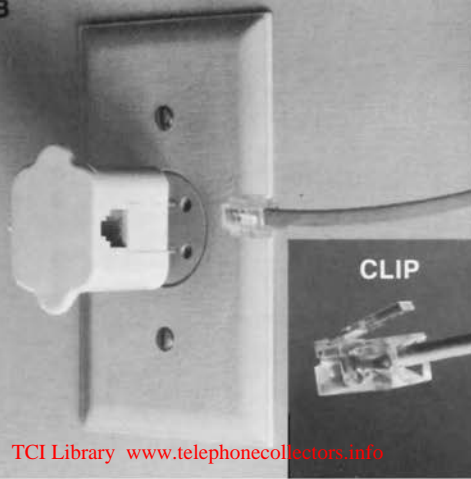


Fig. C

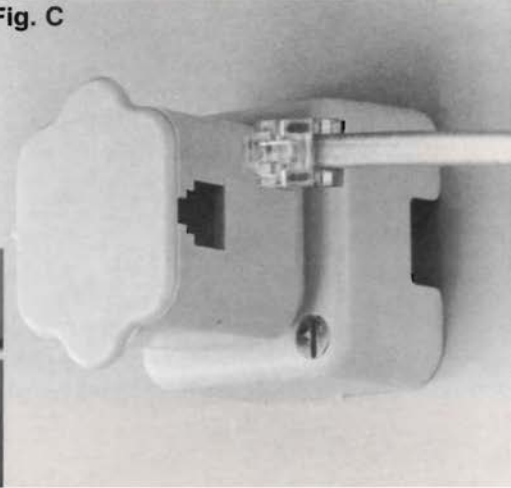


Depending on the type of telephone you select,
it will come with one of two kinds of number cards:

Rotary-Dial—the card fits under
the fingerwheel

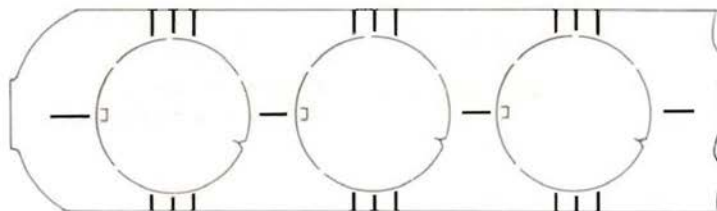

Tone-Dial—the card fits under
the rectangular plastic window

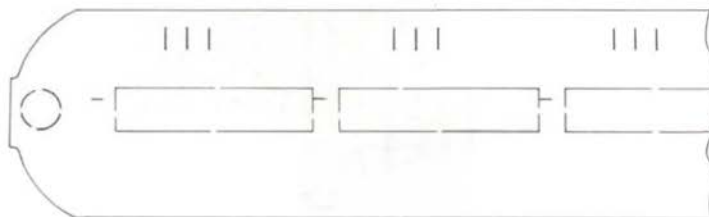

PUNCH OUT NUMBER CARDS

In either case, type or print your area code and telephone
number horizontally on one of the cards. Then, follow
the appropriate procedure on the next 2 pages.

How to install the number cards

Rotary-Dial (except dial-in-handset models)

- 1** Rotate fingerwheel clockwise as far as possible, and hold in this position. (see fig. 1)
- 2** With other hand, insert a straightened paper clip or other tool in the tab release hole between the #9 and #0.
- 3** Press down with tool to release the locking tabs below hole while continuing to rotate the fingerwheel clockwise. The fingerwheel will release and allow the dial to return to its normal position.

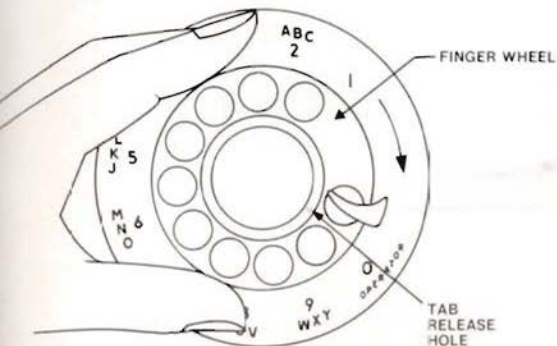


Fig. 1

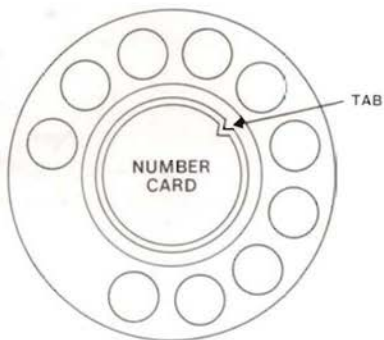


Fig. 2

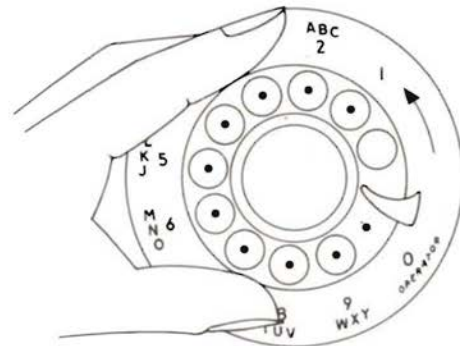


Fig. 3


- 4** Insert the number card in the fingerwheel, making certain that the "V" in the card is aligned with its corresponding tab inside the fingerwheel. (see fig. 2)
- 5** With dial in the normal position, place the fingerwheel on the dial with the operator hole opposite the #9 on the dial. (see fig. 2)
- 6** Press down slightly on the fingerwheel while rotating it counterclockwise until the locking tab snaps into place.

How to install the number cards

Tone-Dial (including dial-in-handset models)

1 Insert a straightened paper clip or other tool into the hole in the right end of the plastic cover. Push left until the cover is bowed up enough to grasp with your thumb and forefinger as shown.

2 Insert number card and replace the plastic window. Insert the left end of the plastic window. Slightly bow the window and snap the right end into place.

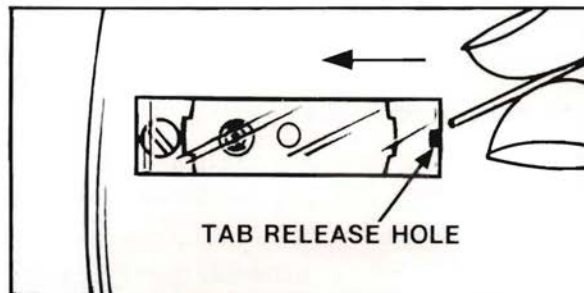


How to keep your telephone working well

Your new Stromberg-Carlson telephone is a quality product that will give you years of reliable service if you follow these few simple procedures:


- During installation, be certain not to pierce the silver satin line cord with staples, tacks, or other sharp objects. Allow, if possible, the cord to flow freely and loosely from the location of the telephone to the outlet.
- If your telephone should malfunction, do not attempt to service it yourself. Phones equipped with a bell volume control, may be turned up or down, but any other adjustments, particularly those involving the opening of the case, should be returned to place of purchase.
- Your telephone is an electrical instrument and can cause shock if placed in contact with water. Do not install near bathtubs, sinks, or other areas where contact with water is likely or frequent.
- Keep your new telephone looking attractive. Clean surfaces with soft, damp cloth and non-abrasive detergent. To prevent fading of colors, avoid placing in direct sunlight.
- If you misdial, simply depress the convenient dial tone recall button and dial again.
- NOTE: For Slenderet dial light illumination, consult your local telephone company.

STANDARD PHONE

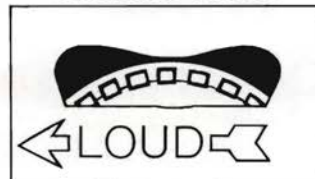


VOLUME CONTROL

SLENDERET PHONE

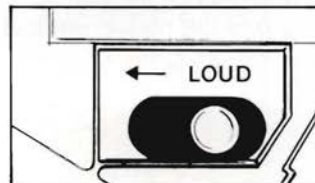

VOLUME CONTROL

RECALL BUTTON

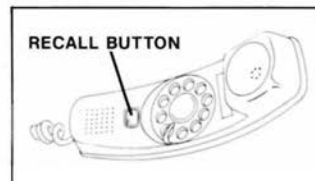

**SLENDERET
RECALL BUTTON**

A great choice of colors...

White (WHT)	Ivory (IVY)	Ash (ASH)	Beige (BGE)	Harvest Gold (HGD)	Orange (ORG)	Cherry Red (CRD)	Cocoa Brown (CBR)	Lime Green (LGR)	Green (GRN)	Blue (BLU)	Black (BLK)
----------------	----------------	--------------	----------------	-----------------------	-----------------	---------------------	----------------------	---------------------	----------------	---------------	----------------

Butterscotch Swirl (BSS)	Cherry Swirl (CRS)	Chocolate Swirl (CHS)	Mint Swirl (MTS)
-----------------------------	-----------------------	--------------------------	---------------------



SLENDERET ONLY

Stromberg-Carlson

A SUBSIDIARY OF GENERAL DYNAMICS CORPORATION

P.O. BOX 7266, CHARLOTTESVILLE, VA., 22906

ATTENTION

In compliance with Federal Communication Commission (FCC) Rules and Regulations, the user of this telephone is advised of the following requirements:

- Notification to the telephone company;
Unless the telephone utility company provides and installs this set for you, notice must be given to the telephone company before a connection is made. Information as to which particular line (telephone number) the connection is to be made, FCC registration number, and the ringer equivalence must be given. The registration number and ringer equivalence can be found on the label located on the base of the telephone. The user is also obligated to give notice to the telephone utility company upon the final disconnection of this telephone.
 - Compatibility with the telephone network;
Where necessary the telephone utility company will inform you of the maximum number of telephones or ringers that can be connected to one line as well as other applicable technical information. Also, the telephone company may make future equipment changes that would render your equipment incompatible. In such cases the telephone company must give you adequate notice in writing.
 - Installation;
Connection of this telephone to the telephone lines must be through a Universal Service Order Code (USOC) jack supplied by the telephone company. If your installation does not already have telephone outlets or they are of the wrong type, simply call your telephone utility business office for ~~outlet installation or adapters for your present ones.~~
- The appropriate "USOC Jack" for this telephone is RJ11C
- Party Lines;
FCC regulations do not permit connections to party lines or coin lines by anyone except the telephone utility company.
 - Troubleshooting;
If any problem with telephone service occurs, first try to determine if the trouble is with telephone company property or with your own telephone. Disconnect all telephones which are not telephone company property. If disconnection of your equipment ends the problem, further determine which telephone is the source of trouble by reconnecting them one at a time. Faulty equipment must remain disconnected until the problem has been corrected. In the event of trouble causing improper operation of the telephone network the telephone company may temporarily disconnect your service upon notification to you the nature of the trouble.
 - Repair;
FCC regulations do not permit repair of customer owned telephone equipment by anyone except the manufacturer or his authorized agent. Should repair of this telephone be required, consult the place of purchase.

PLACE
STAMP
HERE

**STROMBERG-CARLSON
P.O. BOX 7266
CHARLOTTESVILLE, VA., 22906**

ATTN: CUSTOMER SERVICE DEPT.

TCI Library www.telephonecollectors.info

PLEASE PRINT

Name_____

Street_____

City_____

State_____ Zip Code_____

Purchased from:_____

Address_____

Date of purchase:_____

(or receipt, if a gift)

Model number from end of box_____

Purchased for self ☐

Received as a gift ☐

Reason for purchase:

prefer style ☐ extension ☐

prefer color ☐ save money ☐

special features ☐ other ☐

Which color did you select_____

WARRANTY REGISTRATION CARD

Congratulations on choosing your STROMBERG-CARLSON telephone. Please mail this preaddressed postcard to us to confirm your date of purchase with our warranty department. Return of this card is not a condition precedent to warranty coverage.

CUSTOMER WARRANTY

The Stromberg-Carlson telephone you have just purchased has been built by skilled American craftsmen who take pride in the fact that their products are used and appreciated all over the world. Installation and maintenance instructions have been included with your new Stromberg-Carlson telephone, and you should read these carefully, along with our customer service policy, described below.

Customer Service Policy—Limited Warranty

At their option, Stromberg-Carlson will repair or replace this telephone, or any portion thereof, should any mechanical or electrical failure result from normal use. The period of this limited warranty is for one (1) year from the date of purchase. The warranty does not apply to damage to the telephone (or its cord) resulting from faulty installation or operation, abuse, misuse, or neglect. It also does not apply to exterior color or appearance. The warranty is likewise void if attempts at repair or installation are undertaken by any person or persons not specifically authorized by the Stromberg-Carlson Corporation. Federal Communications Commission regulations prohibit repair of any customer-owned telephone instruments by anyone except the manufacturer or his expressly authorized agent. If and when failure occurs within the warranty period, the product should be returned promptly to the point of purchase, with proof of purchase. Should the telephone fail after the warranty period, the instrument should be returned, prepaid, for repair, to Stromberg-Carlson, P.O. Box 7266, Charlottesville, Va. 22906, Attention: Repair Dept. Stromberg-Carlson will then repair the phone and return it to the customer, COD.

Under no circumstances shall the manufacturer be liable for special or consequential damages. Implied warranties hereunder shall be coextensive in time with the period of the express warranty described above. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

*The exclusion or limitation of incidental or consequential damages is not allowed in certain states, and so the above limitation may not apply to you.

*Some states also do not allow limitations on the length of implied warranties, and so the limitation described above may not apply to you.

Telephone operating companies may use equipment which varies, and the manufacturer does not warrant this instrument to be compatible with the equipment of any particular company. If the equipment is incompatible, the manufacturer does not accept responsibility to modify this product so as to make it compatible with the equipment of any particular operating company.

Although it is not a condition of warranty, please return the enclosed warranty card so as to confirm your date of purchase.

TCI Library www.telephonecollectors.info

CUT ALONG LINE AND RETURN POST CARD