


WIRING DIAGRAM (591BW)

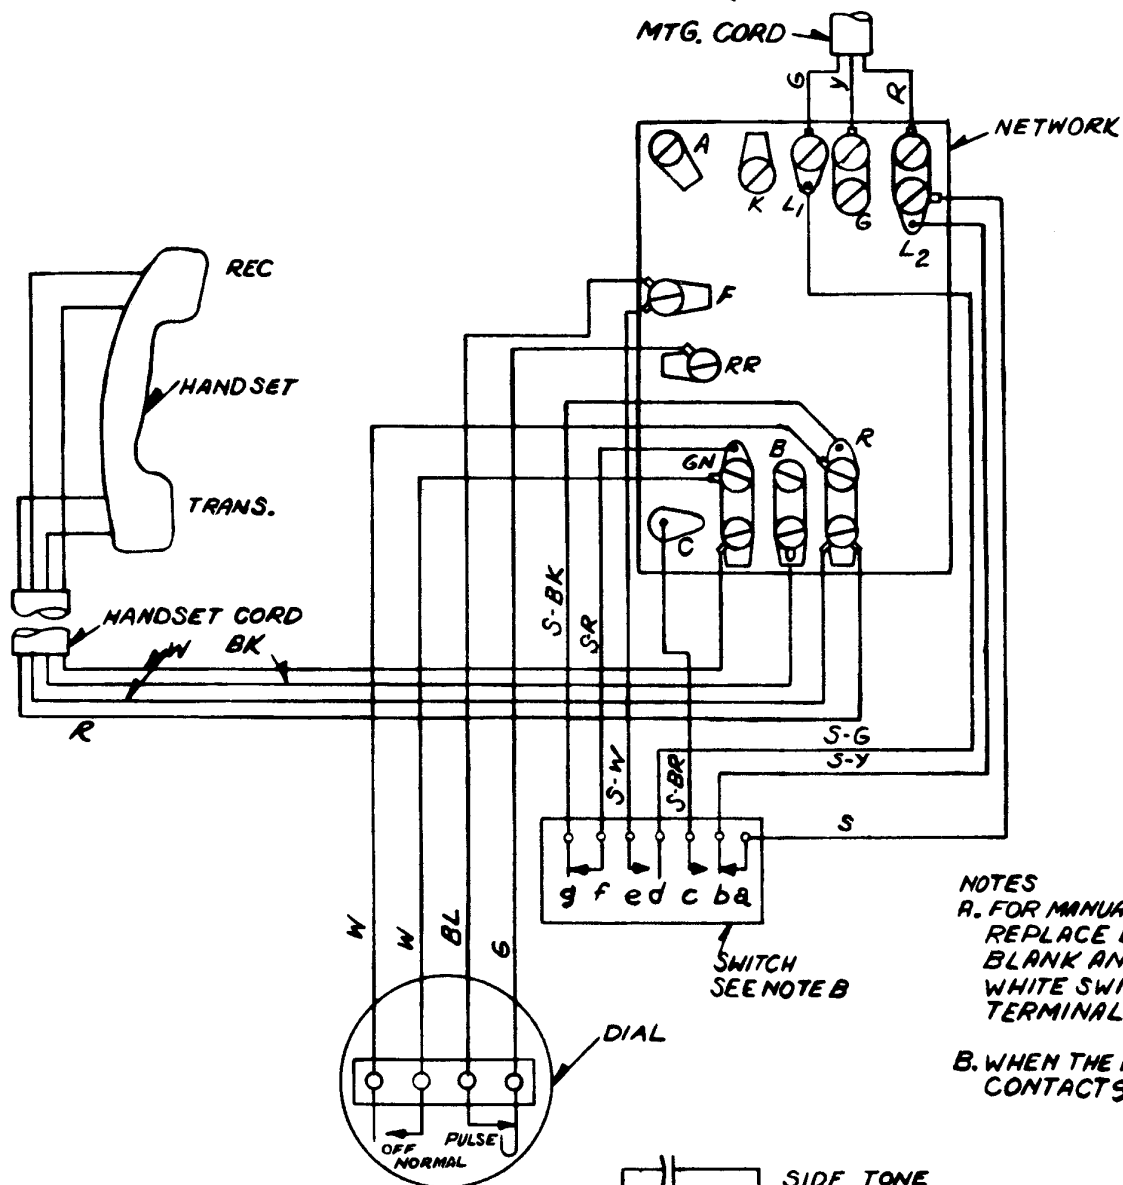

NOTES

A. FOR MANUAL SERVICE (591AW)
REPLACE DIAL WITH APPARATUS
BLANK AND TRANSFER SLATE.
WHITE SWITCH LEAD TO (RR)
TERMINAL ON NETWORK.

B. WHEN THE HANDSET IS REMOVED
CONTACT g-f BREAKS LAST.

CIRCUIT SCHEMATIC
591BW