


RINGER FREQ.



CODE NO _____

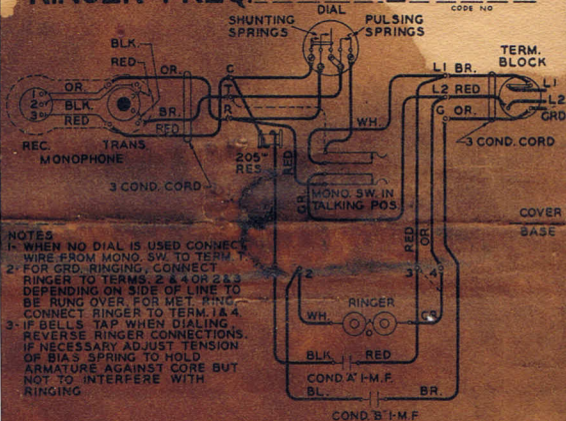

NOTES

- 1- WHEN NO DIAL IS USED CONNECT WIRE FROM MONO. SW. TO TERM. T.
- 2- FOR GRD. RINGING, CONNECT RINGER TO TERMS. 2 & 4 OR 2 & 3 DEPENDING ON SIDE OF LINE TO BE RUNG OVER. FOR MET. RING CONNECT RINGER TO TERM. 1 & 4.
- 3- IF BELLS TAP WHEN DIALING, REVERSE RINGER CONNECTIONS. IF NECESSARY ADJUST TENSION OF BIAS SPRING TO HOLD ARMATURE AGAINST CORE BUT NOT TO INTERFERE WITH RINGING.