


RINGER OPTIONS

BIASED	GAS TUBE	FREQ SELECTIVE	PARTY IDENTIFICATION
136(BA) 470	136(TBA) 470	137(-)470	--
BRIDGED RINGING 	-BIAS 	BRIDGED RINGING 	1000 OHM GROUND BIASED RINGER
DIVIDED RINGING 	+BIAS 	DIVIDED RINGING 	2600 OHM GROUND BIASED RINGER
4 1 5 6 2 7 3 L2 LI D	4 1 5 6 2 7 3 L2 LI D	4 1 5 6 2 7 3 L2 LI D	4 1 5 6 2 7 3 B L2 LI D


RINGER NOTES

1. Party Identification: Connect yellow mounting cord lead as shown by dashed lines. Mounting cord connections shown for ring party. For tip party reverse red and green cord conductors on ringer terminal board and use ring party station wiring.
2. 6-Conductor Mounting Cord: Yellow and black leads connected in parallel except for party identification - see note 1.

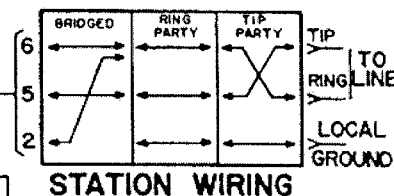

MOUNTING CORD
 SEE NOTES 1 AND 2

For Manual Service:
 Replace dial with dummy plug and transfer WH-SL cradle switch lead from F to RR on network.

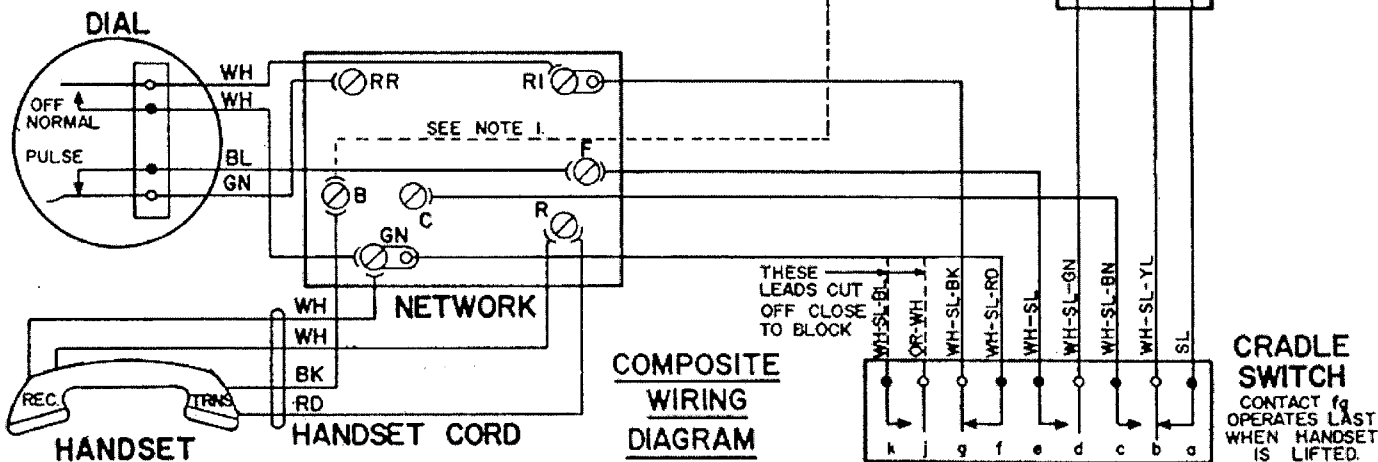

See page 245.05 for instructions on connecting frequency selective ringers.

CIRCUIT DIAGRAM
 (INSTRUMENT ONLY)

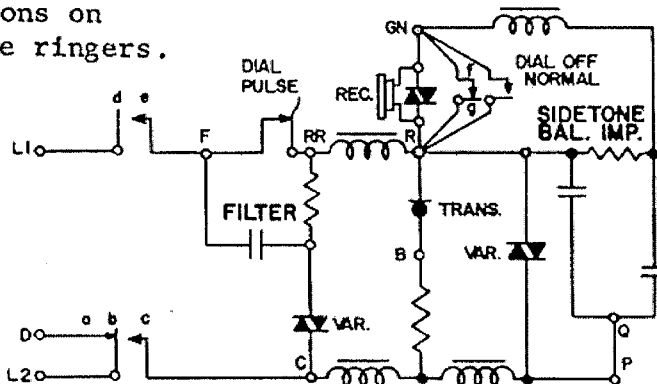


Fig. 2 DIAGRAMS 703--(LR)30- TELEPHONE