



NOTE-1

TABLE OF RINGER CONNECTIONS

FREQUENCY	COND. MFD.	CONNECT BROWN RINGER LEAD TO TERMINAL
SL, 16, 16-2/3, 20	.45	A
25	.27	P82 K
30, 33-1/3	.18	Cond. K
40, 42, 50	.10	Equipped K
54, 60	.07	On K
66, 66-2/3	.05	Ringer K
SU		See Fig. 5

NOTE-2 For manual service replace dial with dial blank and transfer slate lead from F to RR.

NOTE-3 For bridged ringing, connect yellow line cord lead to L1 at wall terminal block.

Wiring Diagram and Table of Ringer Connections