


# 1245 C-8 & C-4 HAND SET TELEPHONE

PUSH BUTTONS.

IN FOUR BUTTON SETS, THE CONDUCTORS COLORED WHITE, DOUBLE-BLUE, DOUBLE-YELLOW AND DOUBLE-RED IN CORD CONNECTING PUSH BUTTONS TO CONNECTING BLOCK, ARE OMITTED.

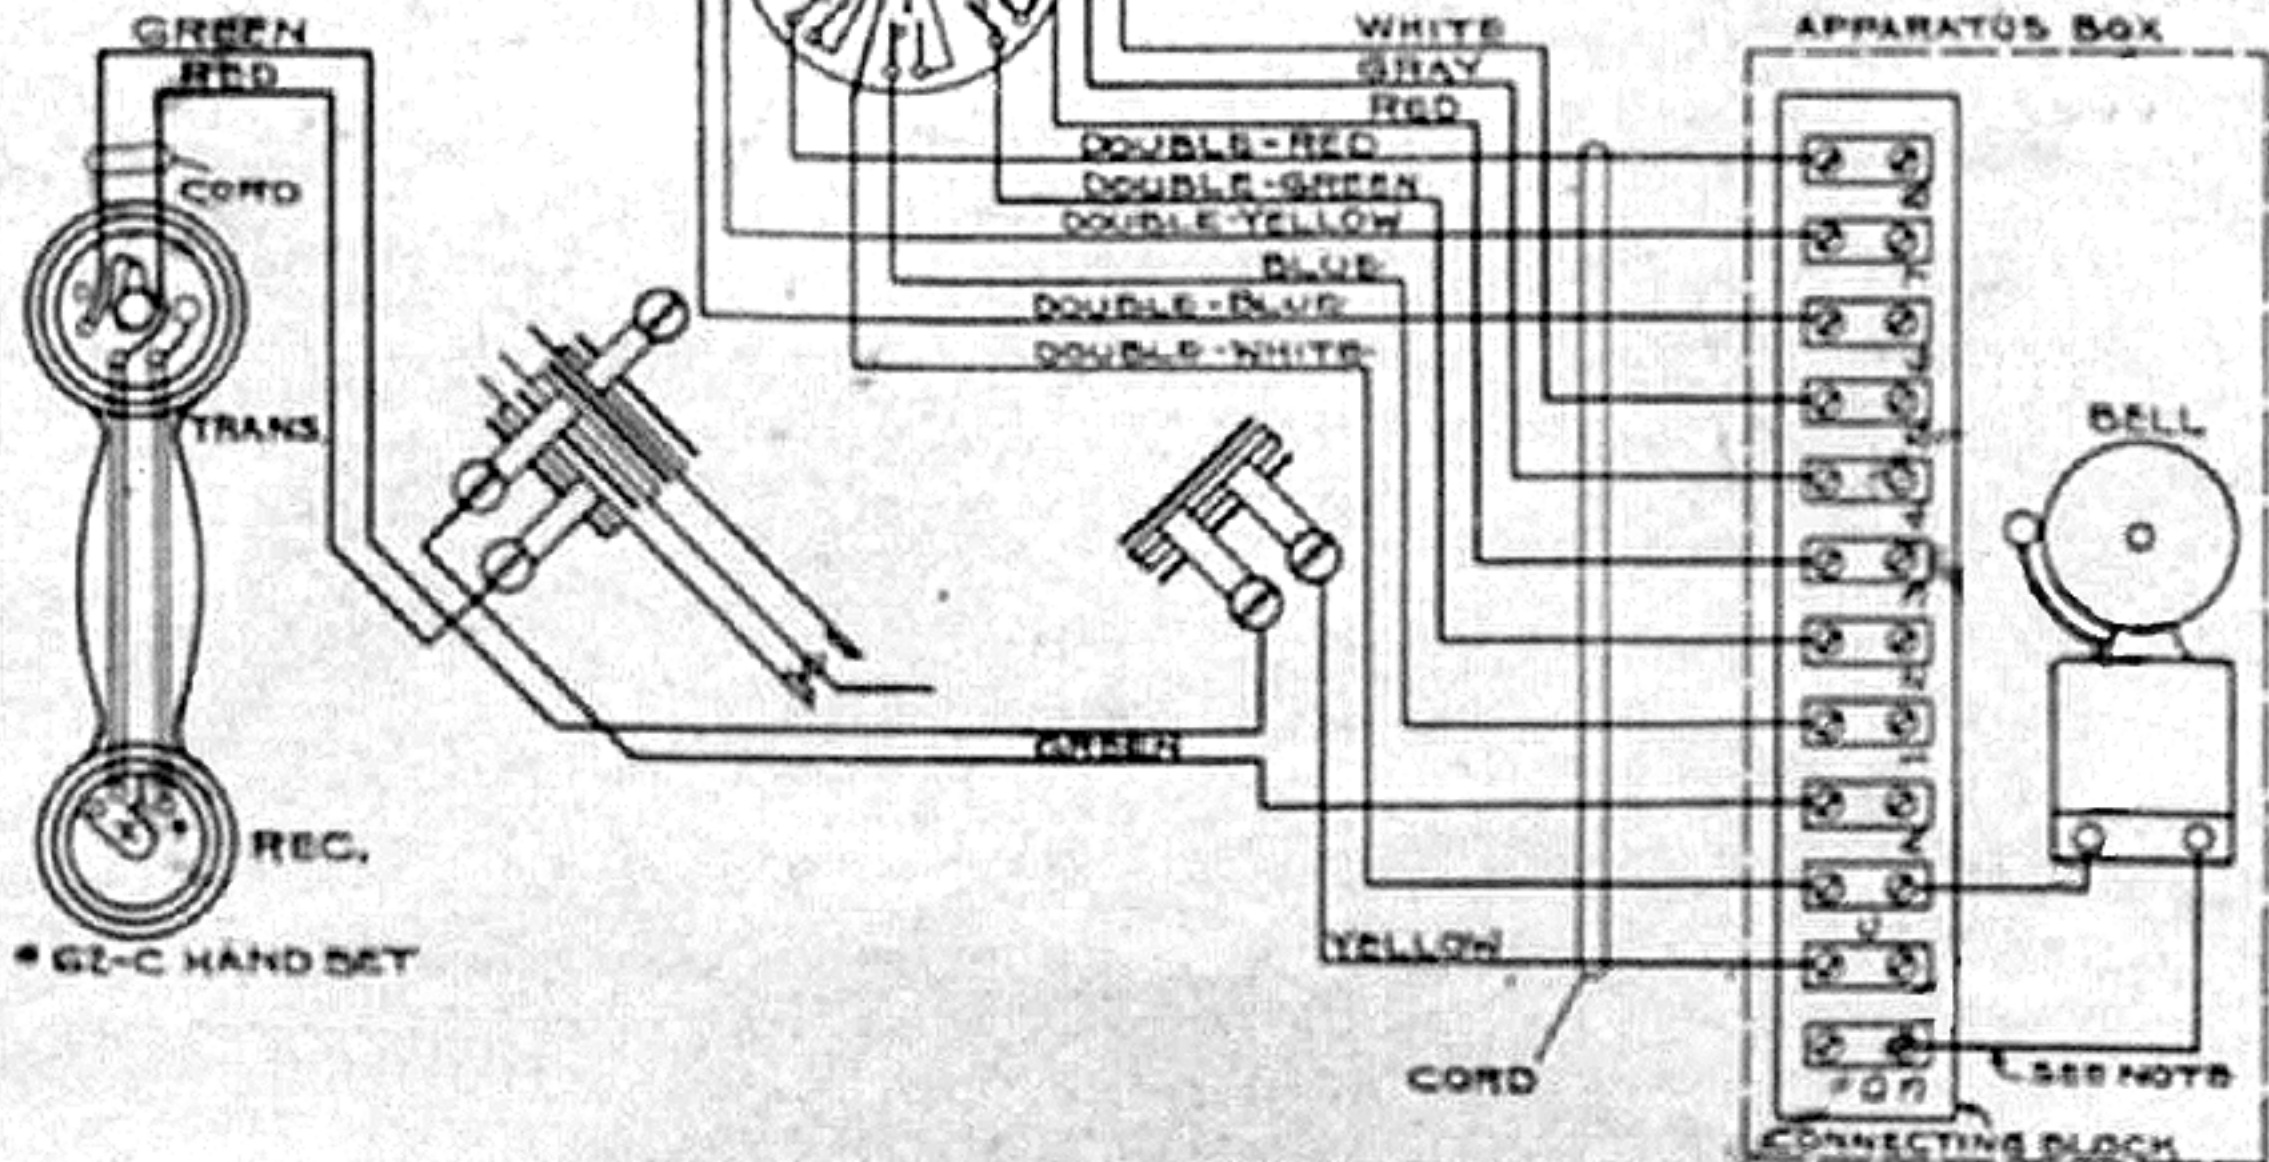

NOTE: WIRED FOR SYSTEM NO. 12. FOR SYSTEM NO. 11 CONNECT BELL WIRE TO 5 INSTEAD OF 10 AND CONNECT THE DOUBLE-WHITE WIRE TO 3 INSTEAD OF 12.