SERVICE

702B AND 702BM TELEPHONE SETS

CONNECTIONS


1. GENERAL

- 1.01 This section contains information on the 702B (MD) and 702BM telephone sets (Fig. 1, 2, and 3).
- 1.02 The reasons for reissuing this section are listed below. Revision arrows are used to emphasize the more significant changes.
 - Revise grounding information (Note 1, Fig. 1 and 2)

- Show new line switch contacts (d', e') in Fig. 2
- Add D-181059 Kit of Parts (dial illumination, Fig. 3).
- 1.03 Refer to Tables A, B, and C for line and ringer connections.
- 1.04 Figure 4 or 5 indicates the termination of the D4BT mounting cord in sets equipped with 4010- or 4228-type networks, respectively.
- 1.05 Refer to Section 501-320-100 if conversion to four- or eight-party ringing is required.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

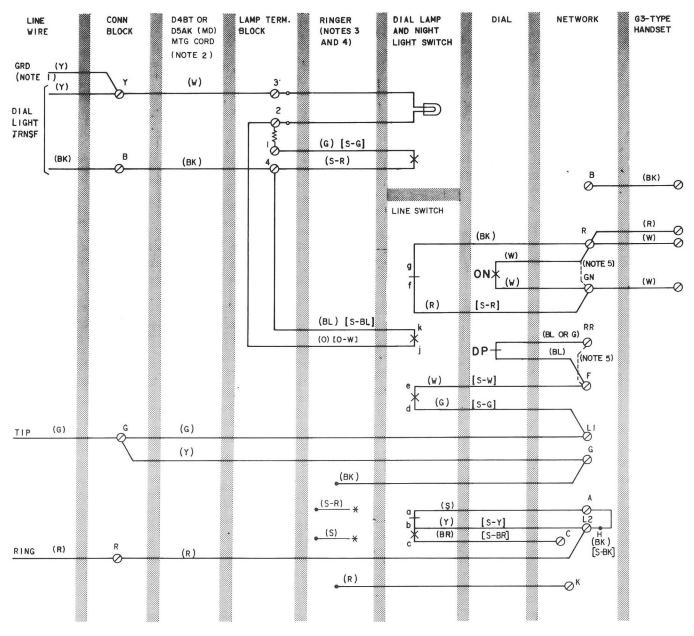

NOTES

- INSIDE WIRE CONDUCTOR SHALL BE CONNECTED TO THE GROUND TERMINAL AT THE PROTECTOR OR EQUIVALENT ONLY IF REQUIRED FOR SERVICE BEING INSTALLED.
- CONNECTIONS SHOWN FOR D5AK MOUNTING CORD. IF D4BT MOUNTING CORD. IS USED, REFER TO TABLE B.
- WIRED FOR BRIDGED RINGING, SEE TABLE A OR B FOR OTHER CLASSES OF SERVICE.
- TO SILENCE RINGER PERMANENTLY REFER TO THE APPROPRIATE RINGER SECTION IN DIVISION 501.
- 5. DASHED LINES INDICATE MANUAL SET CONNECTIONS.

- () CURRENT COLOR CODE
- [] MD COLOR CODE
- * INSULATED AND STORED
- DP-DIAL PULSE
- ON- OFF NORMAL

Fig. 1—₱702B (MD) Telephone Set, Connections ♥

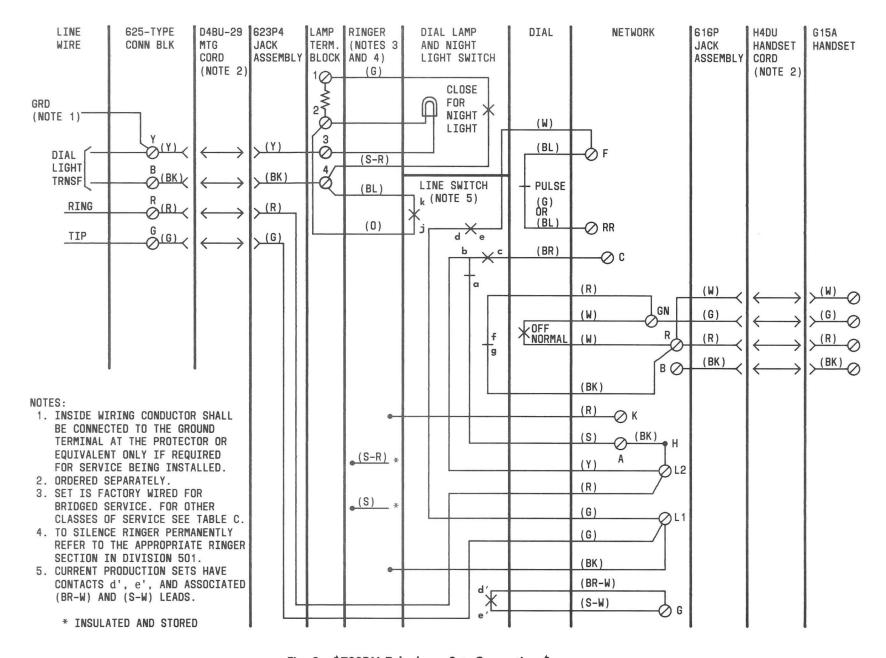


Fig. 2—♦702BM Telephone Set, Connections TCl Library | www.telephonecollectors.info

NOTES:

- 1. P/O D-181059 KIT OF PARTS.
- 2. INSIDE WIRE CONDUCTOR SHALL BE CONNECTED TO THE GROUND TERMINAL AT THE PROTECTOR OR EQUIVALENT ONLY IF REQUIRED FOR SERVICE BEING INSTALLED.
- 3. CORD FROM TELEPHONE SET AND TRANSFORMER CAN BE PLUGGED INTO EITHER JACK OF 338A ADAPTER.
- 4. ORDERED SEPARATELY.
- 5. SET IS FACTORY WIRED FOR BRIDGED SERVICE. FOR OTHER CLASSES OF SERVICE SEE TABLE C.
- 6. TO SILENCE RINGER PERMANENTLY REFER TO THE APPROPRIATE RINGER SECTION IN DIVISION 501.
- 7. CURRENT PRODUCTION SETS HAVE CONTACTS d', e' AND ASSOCIATED (BR-W) AND (S-W) LEADS.
 - * INSULATED AND STORED.

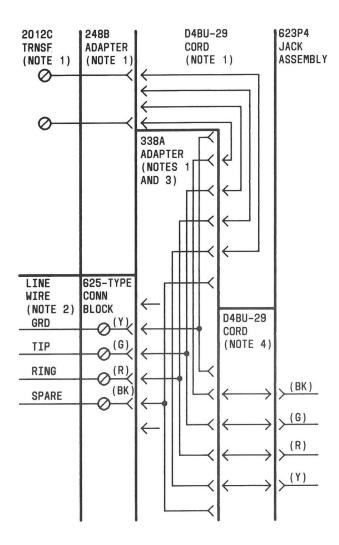


Fig. 3—₱702BM Telephone Set, Connections Using D-181059 Kit of Parts (Sheet 1 of 2)◀

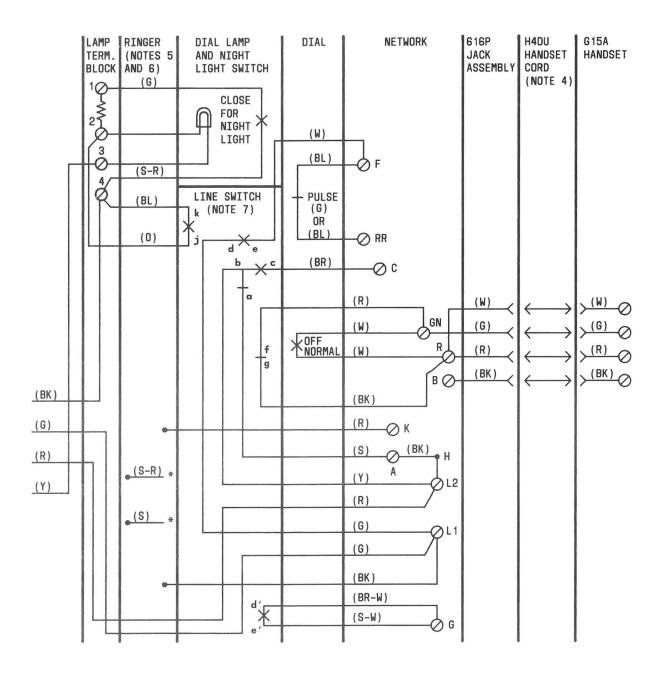


Fig. 3—₱702BM Telephone Set, Connections Using D-181059 Kit of Parts (Sheet 2 of 2)◀

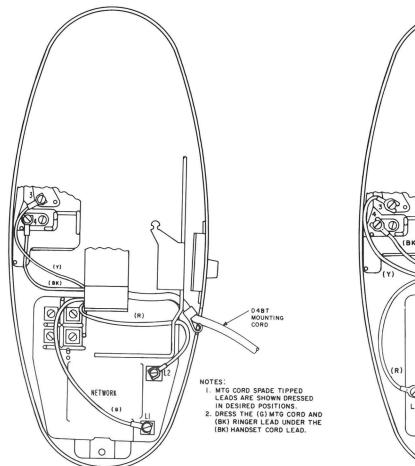


Fig. 4—Method of Terminating D4BT Mounting Cord on Sets With 4010-Type Network (See Notes I and 2)

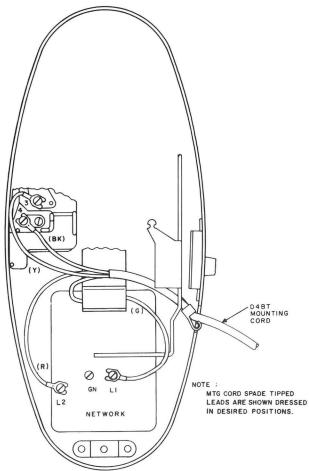


Fig. 5—Method of Terminating D4BT Mounting Cord on Sets With 4228-Type Network (See Note)

TABLE A

LINE AND RINGER CONNECTIONS

702B (MD) TELEPHONE SET WITH D5AK (MD) MOUNTING CORD

WIRE OR LEAD		INDIVIDUAL OR	RING PARTY ‡	TIPPARTY			
				NO	IDENTIFYING GROUND		
		BRIDGED ‡	FARIT #	IDENT 1000 OHMS		2650 OHMS	
Inside Wire at Conn Block	Ring	R	R	R	R	R	
	Tip	G	G	G	G	G	
	Grd	Y	Y	Y	Y	Y	
Dial Light	1	Y	Y	Y	Y	Y	
Transformer	2	В	В	В	В	В	
	(R)	R	R	G	G	G	
D5AK Mtg Cord	(G)	G	G	R	R	R	
at	(Y)	G	Y	Y	Y	Y	
Conn Block	(BK)	В	В	В	В	В	
	(W)	Y	Y	Y	Y	Y	
	(R)	L2	L2	L2	L2	L2	
D5AK Mtg Cord	(G)	L1	· L1	L1	F	F	
at	(Y)	G	G	G	G	G	
Set Terminals	(BK)	4†	4†	4†	4†	4†	
(Note 2)	(W)	3†	3†	3†	3†	3†	
	(R)	K	K	K	K	К	
Ringer	(BK)	G	G	G	G	G	
Leads (Note 1)	(S)	*	*	*	L1	*	
	(S-R)	*	*	*	*	L1	
Line Switch	(W)	F	F	F	В	В	
Strap from H	(BK)	A	A	A	*	*	

Note 1: To silence ringer for all classes of service, refer to the appropriate ringer section in Division 501.

Note 2: When connecting the D5AK mounting cord leads for tip party identifying ground, use D-161488 connectors and M1W straps as required to extend conductor leads.

- * Insulated and stored.
- † Terminals on lamp terminal block.
- ‡ Factory-wired for bridged or ring party

TABLE B

LINE AND RINGER CONNECTIONS

702B (MD) TELEPHONE SET WITH D4BT MOUNTING CORD

WIRE OR LEAD		INDIVIDUAL OR	RING PARTY	TIPPARTY		
				NO	IDENTIFYING GROUND	
		BRIDGED	TANTI	IDENT 1000 GRD OHMS		2650 OHMS
Inside Wire at	Ring	R	R	R	R	R
	Tip	G	G	G	G	G
Conn Block	Grd	Y	Y	Y	Y	Y
Dial Light	1	Y	Y	Y	Y	Y
Transformer	2	В	В	В	В	В
D4BT Mtg Cord at Conn Block	(R)	R	R	G	G	G
	(G)	G	G	R	R	R
	(Y)	Y	Y	Y	Y	Y
	(BK)	В	В	В	В	В
D4BT	(R)	L2	L2	L2	L2	L2
Mtg Cord at Set Terminals	(G)	L1	L1	L1	F	F
	(Y)	3†	3†	3†	3†	3†
	(BK)	4†	4†	4†	4†	4†
	(R)	K	K	K	K	K
Ringer Leads (Note)	(BK)	L1	3†	3†	3†	3†
	(S)	*	*	*	L1	*
	(S-R)	*	*	*	*	L1
Line Switch	(W)	F	F	F	В	В
Strap from H	(BK)	A	A	A	*	*

Note: To silence ringer for all classes of service, refer to the appropriate ringer section in Division 501.

^{*} Insulated and stored.

[†] Terminals on lamp terminal block.

TABLE C
702BM TELEPHONE SET LINE AND RINGER CONNECTIONS

				TIP PARTY		
WIRE OR LEAD		INDIVIDUAL OR BRIDGED	RING PARTY	NO	IDENTIFYING GROUND (NOTE 1)	
		(NOTE 3)		IDENT GRD	1000 OHMS	2650 OHMS
Dial Light	1	Y	Y	Y	Y	Y
Transformer	2	В	В	В	В	В
	(R)	L2	L2	L1	F	F
623P4 Jack Assembly	(G)	L1	L1	L2	L2	L2
in Set	(BK)	4†	4†	4†	4†	4†
	(Y)	3†	3†	3†	3†	3†
	(R)	K	K	K	K	K
Ringer Leads	(BK)	L1	3†	3†	3†	3†
(Note 2)	(S)	*	*	*	L1	*
	(S-R)	*	*	*	*	L1
Line Switch	(W)	F	F	F	В	В
Strap from H of Net.	(BK)	A	A	A	*	*

Notes:

- 1. For tip party service with identifying ground, remove insulate and store (BK) strap between network terminals A and H.
- 2. To silence ringer for all classes of service, refer to the appropriate ringer section in Division 501.
- 3. Sets are factory-wired for bridged service.

†Terminals on lamp terminal block.

^{*}Insulated and stored.