

SERVICE

755A AND 755AM TELEPHONE SETS

1. GENERAL

1.01 This section contains connection information for the 755A (MD) and 755AM telephone set which is a manual panel-type telephone set.

1.02 Reissued to:

- Add 755AM (modular) telephone set, Fig. 1
- Show 755A telephone set MD

2. CONNECTIONS

2.01 Connect the central office tip and ring to the proper designated terminals, Fig. 1 and 2.

2.02 Due to the length of cord terminated on the plug, the door has to be partially closed before plug (P1) can be connected to jack (J1).

Caution: When making service calls on a 755A and 755AM telephone set, exercise caution in opening the door. Disconnect the plug from the jack before attempting to open the door to its fullest extent.

2.03 A ringer is not part of the factory supplied set. Should a ringer be required, provisions have been made to permit field installation of C4A or C4B ringer. Refer to Tables A or B for connections.

TABLE A

CONNECTIONS FOR (OPTIONAL) C4A RINGER
(SEE NOTE)

WIRE OR LEAD		REMOVE FROM TB1	CONNECT TO TB1
C4A Ringer	BK		T
	S		SL
	R		R
	S-R		SR
Strap	BK	R	SR
Resistor		T ↔ SL	

Note: Connections are for individual or bridged service.

TABLE B

CONNECTIONS FOR (OPTIONAL) C4B RINGER
(SEE NOTE)

WIRE OR LEAD		REMOVE FROM TB1	CONNECT TO TB1
C4B Ringer	BK		T
	R		SL
Resistor		T ↔ SL	

Note: Connections are for individual or bridged service.

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement


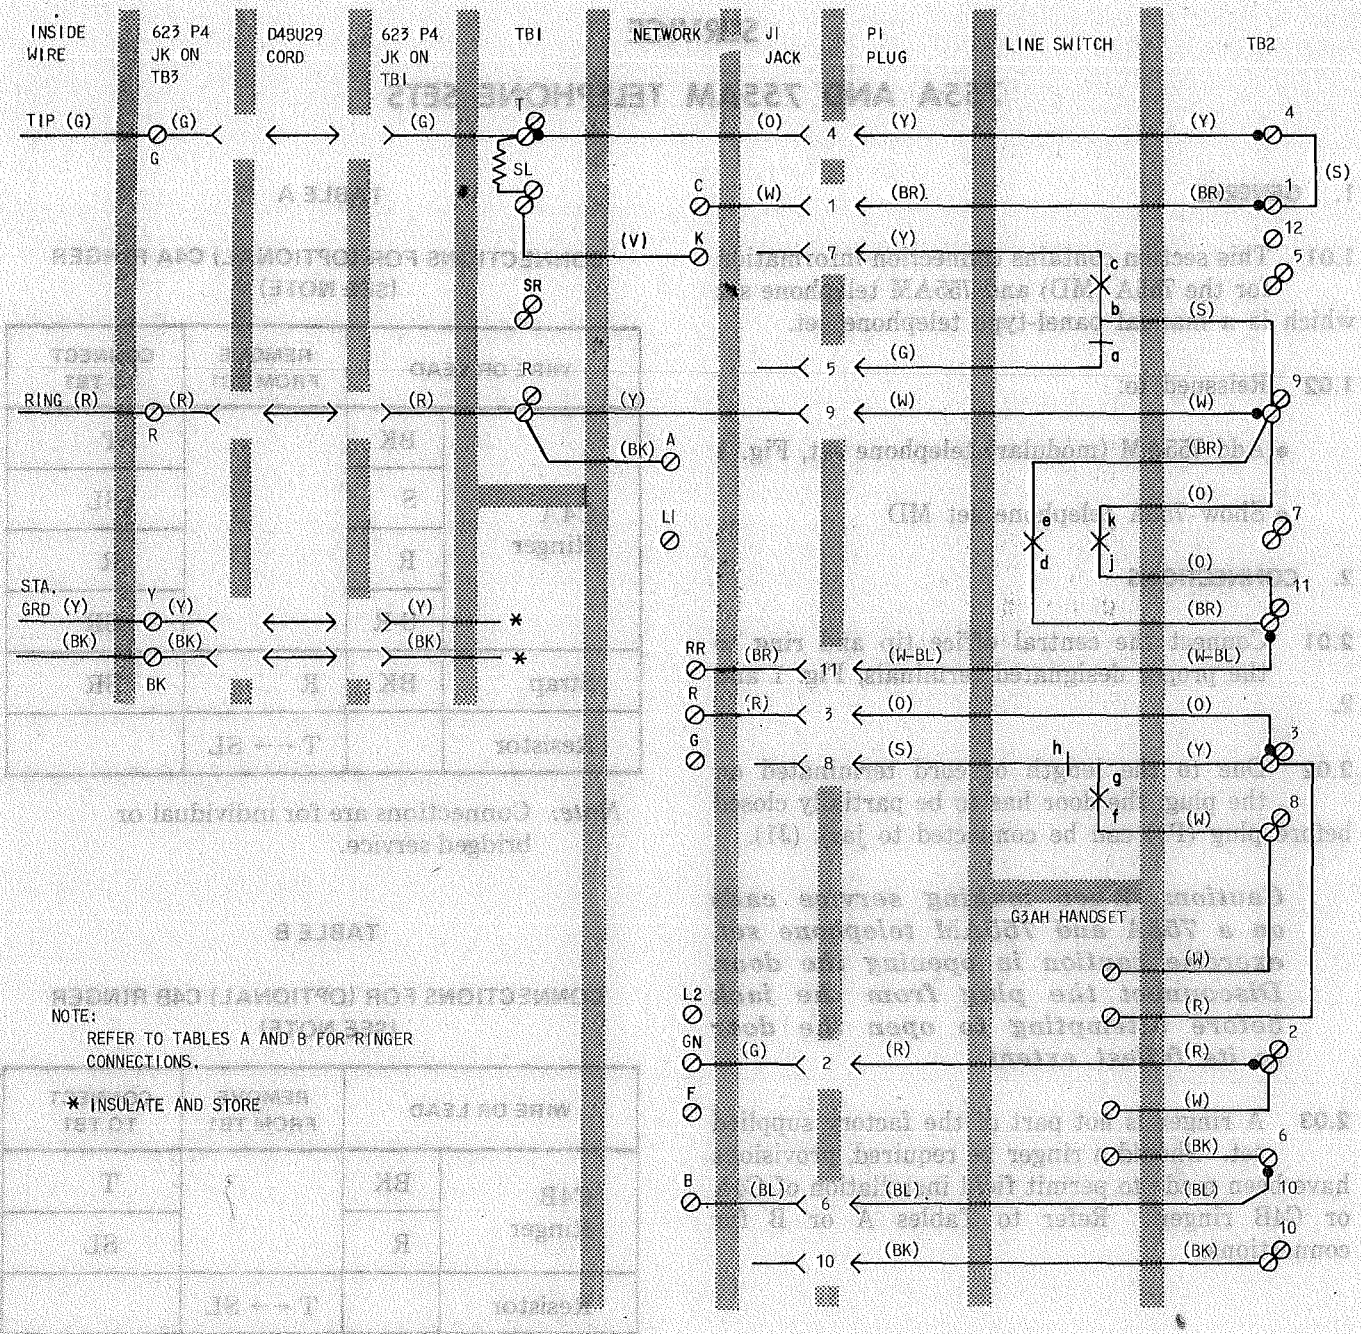


Fig. 1—755AM Telephone Set, Connections

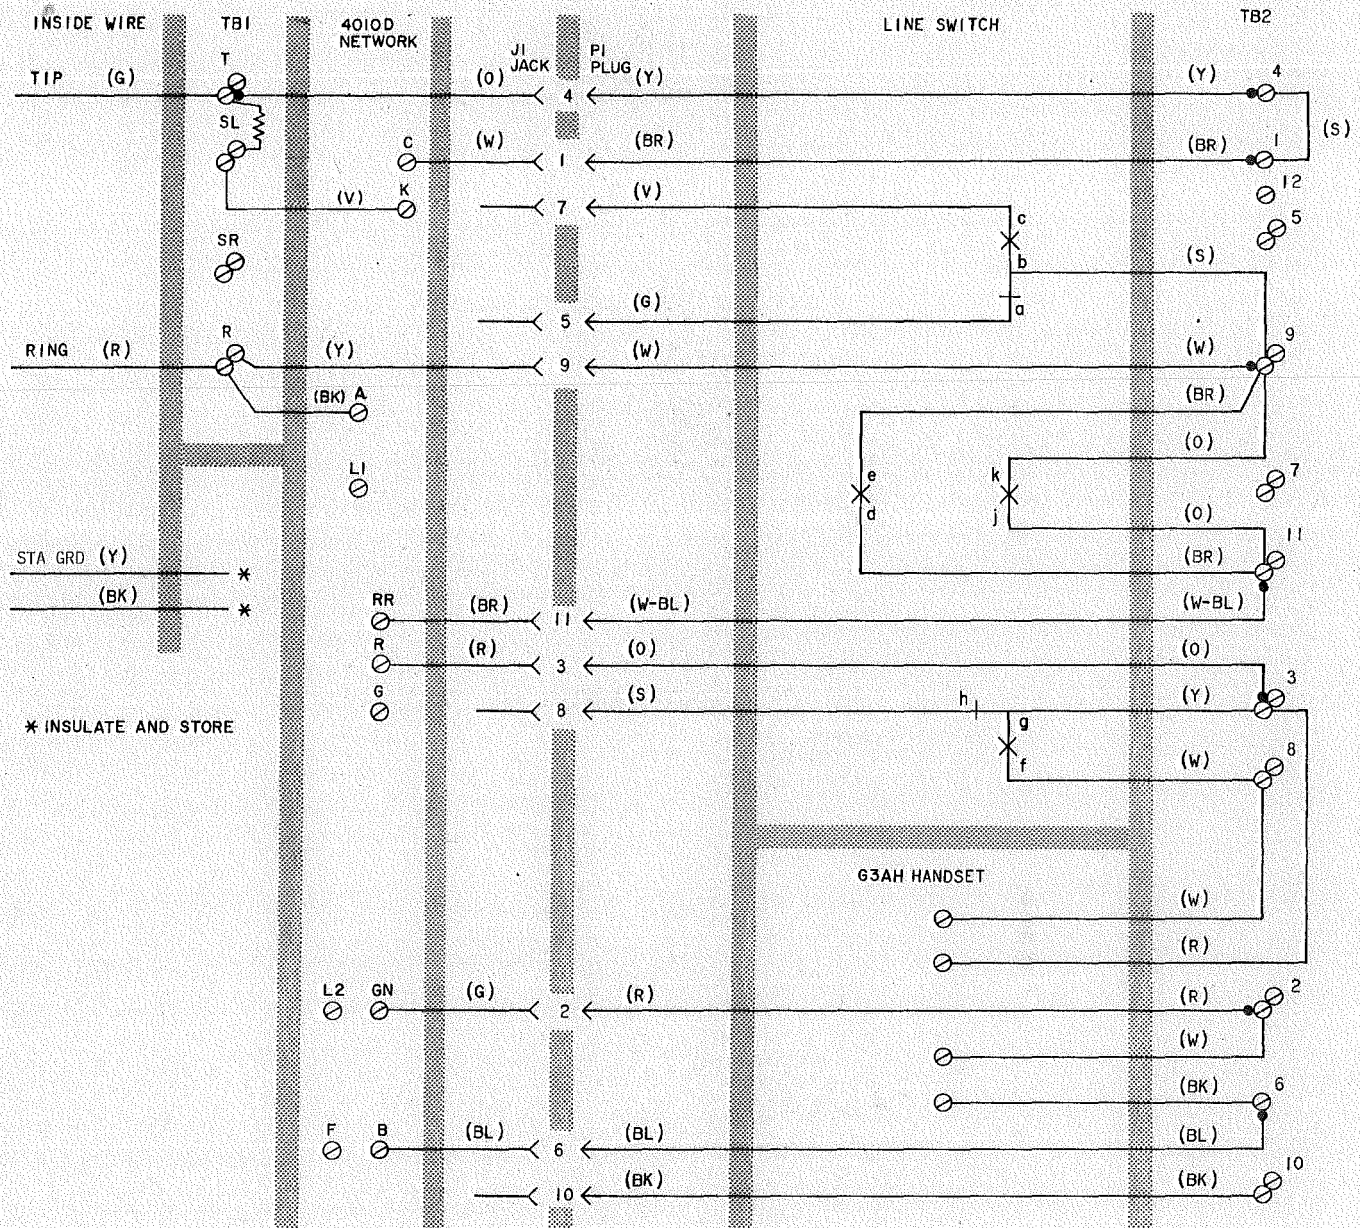

NOTE:
REFER TO TABLES A AND B FOR RINGER CONNECTIONS.

Fig. 2—755A (MD) Telephone Set, Connections