

**300-MEGABYTE MOVING HEAD DISK DRIVE**  
**KS-22072,L2**  
**PREVENTIVE MAINTENANCE**  
**3B20D MODEL 1 PROCESSOR**

	<b>CONTENTS</b>	<b>PAGE</b>
<b>1. GENERAL</b>	. . . . .	<b>1</b>
<b>Tables</b>		
<b>A. Preventive Maintenance Services</b>	. . . . .	<b>2</b>

**1. GENERAL**

**1.01** This section is a cover sheet for manufacturer operating and service manuals for the KS-22072,L2 moving head disk. This moving head disk is a component of the 3B20D Model 1 processor. Copies of manufacturer manuals are supplied with each

moving head disk. Additional copies can be ordered from parts lists by part number.

**1.02** Whenever this section is reissued, the reasons for reissue will be listed in this paragraph.

**1.03** Descriptive, theory of operation, installation, and operating information and maintenance instructions for the moving head disk are given in the manufacturer's manuals.

**1.04** Preventive maintenance services required by the manufacturer are provided in the manual and are recapitulated in Table A. Where a conflict exists, the preventive maintenance services in the manufacturer's manual shall take precedence.

**NOTICE**

Not for use or disclosure outside the  
Bell System except under written agreement

**TABLE A**  
**PREVENTIVE MAINTENANCE SERVICE**

TEST	TITLE	FREQUENCY
1	Clean External Cabinet Surfaces	2 Months
2	Clean Air Shroud	2 Months
3	Inspect, Clean, and Lubricate Spindle Surface	2 Months
4	Inspect Spindle Drive Belt	2 Months
5	Clean Intake Air Filter	2 Months
6	Clean Internal Cabinet Surfaces	6 Months
7	Inspect and Clean Carriage and Way Assembly	6 Months
8	Check Resistance of Spindle Brush Grounding	6 Months
9	Check Power Supply Voltages	6 Months
10	Check Positioning System Adjustment	6 Months
11	Check Spindle Drive System Operation	6 Months
12	Replace Absolute Air Filter	1 Year