# CONNECTING BLOCKS SELECTION

### 1. GENERAL

- 1.01 Information in this section was formerly contained in Sections 461-610-100, 461-615-101, 461-616-130, and 461-617-101.
- 1.02 See Section 461-600-101 for Designation Strips and Methods of Marking.

### 2. SELECTION

**2.01** For selection of connecting blocks, the following tables are provided:

- Table A Selection Screw-Type Connecting Blocks
- Table B Selection Binding Post-Type Connecting Blocks
- Table C Selection Clip-Type Connecting Blocks

## TABLE A

SCREW-TYPE CONNECTING BLOCKS

### SELECTION

CONNECTING BLOCK	NUMBER OF PAIR	NUMBER OF TERMINALS	PRINCIPAL USE	IDENTIFICATION SECTION REFERENCE
42A	2	4	Terminate or bridge in multiple	461-602-100
44A			spade tipped mounting cords,	
1044A	5	10	and/or wire and inside wiring cable conductors.	
47C	6	12	Terminate or bridge in multiple	
47D	2	4	spade tipped mounting cords, and/or wire and inside wiring	
47E	6	12	cable conductors at flush	
47F	2	4	mounted installations.	
71A(MD)	6	12	0 and 1 button panel tel sets.	
71B	0	12		
74A	0.1./0		Control of inductive noises in the 220A hand tel set and asso-	461-606-100
74B	2-1/2	5	ciated base.	
75A	25	50	Multibutton panel tel sets.	<u> </u>

TABLE B
BINDING POST-TYPE CONNECTING BLOCKS

### SELECTION

CONNECTING NO. BLOCK OF PAIR		NO. OF TERMINALS	PRINCIPAL USE	IDENTIFICATION SECTION REFERENCE
30A	6	12		461-601-100
30B	11	22		
30C	16	32	G 1	
30D	26	52	General Station	
31A	6	12	Systems	
31B	11	22	3,200	
31C	16	32		
31D	26	52		
		BINDING POST-TYPE	INSULATION-CRUSHING WASHERS	
30A2	6	12	1	
30B2	11	22	1	461-601-100
30C2	16	32	Building Terminals	
30D2	26	52	-	
57A2-10	10	20		461-603-100
57A2-16	16	32		
57A2A-6 *	6	12		
57A2B-6 *	6	12		
57A2B-10 *	10	20	Terminate drop and block wire	
57A2B-16 *	16	32	and PIC cable	
57B1A-10 *	10	20	7	
57B1A-16 *	16	32	7	
57B1A-25 *	25	50	.] 	
57B1A-50 *	50	100		
59A1-11	11	22		
59A1-16	16	32	Building Terminals	
59A1-25	25	50	Dunging Terminals	
59A1-50	50	100		
60A1-6	6	12	With B buried cable terminals	
60A1B-3 *	3	6	with b buried cable terminals	
60A2-6	6	12	Replaces 60A1-6	

<sup>\*</sup> Equipped with fuseless protection.

TABLE C
CLIP-TYPE CONNECTING BLOCKS

#### **SELECTION**

CONNECTING BLOCK	NO. OF PAIR	NO. OF CONNECTORS	TERMI- NATIONS PER CONNECTOR	PRINCIPAL USE	IDENTIFICATION SECTION REFERENCE*	
66A1-25(MD) 66A2-25(MD)	25	50		General Station Systems		
66A2-50(MD)	50	100	6			
66B1-25(MD)	25	50		General station systems —		
66B3-50	50	100	3	Furnished with 300- and 500-type key service units.		
66B4-25	<b>2</b> 5	50	6	6	General station systems when multipling capacities are required.	461-604-102
66B5-37	37	26		Furnished with 550 and 551		
18-6000	37	48	3	key units.		
66C1-16	16	00				
66C2-16		32	2	General Station Systems		
66C2-32	32	64				
66E1-32	32	64		Furnished with switching system No. 400.		
66E3-25	25			To connect and/or multiple plug ended tel sets and raw ended cable.	461-604-103	
66E4-25		50				
66L3-50	50	100	3	General station and outside		
66L3-100	100	200		plant applications.	461-604-102	
66M1-50	50	100	2	Terminating arrangements of cables and key telephone systems	401-004-102	
F-56999	25	50	C	With other plug-ended ca- bles for a quick-connect		
F-57000		50	6			
F-57001	50	100	3	distribution terminal.		

<sup>\*</sup> See Section 461-604-100 for Tools, Adapters, Terminating, and Maintenance; and Section 461-604-101 for Numbering, Wiring Plan, and Distribution Terminal Arrangements.