

SECTION C42.501 Issue 1, 1-29-34 Standard

SUBSCRIBER SETS 333, 533, AND 553 TYPES SIDETONE—CONNECTIONS

1. GENERAL

1.01 This section covers the connections for 333, 533, and 553 type subscriber sets (wall type sets) when such sets are used at regular manual or dial common battery or local battery talking, common battery signaling stations.

1.02 Circuit diagrams showing the connections for the above types of sets are arranged by class of service. Where possible, circuit diagrams for more than one set are combined and shown with the ringer leads disconnected. Where the ringer leads are shown disconnected they should, of course, be connected in accordance with the sections in Division C40 covering line and ringer connections.

C42.501 Page 1

2. MANUAL STATION CONNECTIONS

2.01 All manual stations except:
Four-Party Selective,
Eight-Party Semi-Selective,
Local Battery Talking, Common Battery Signaling,
No. 1 Residence System

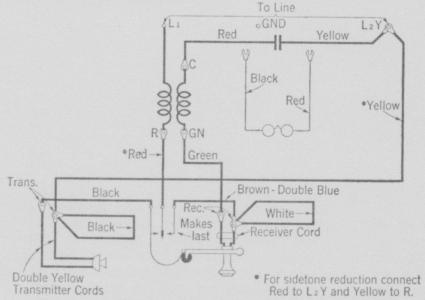


Fig. 1-553A Subscriber Set

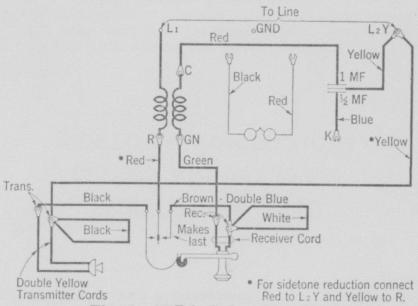


Fig. 2-553BA Subscriber Set

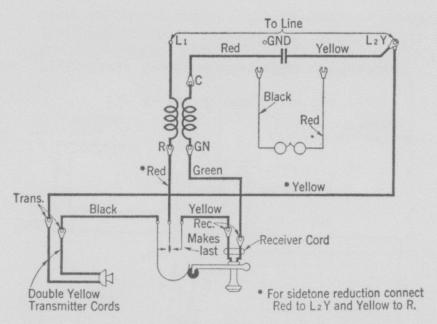


Fig. 3-533A Subscriber Set

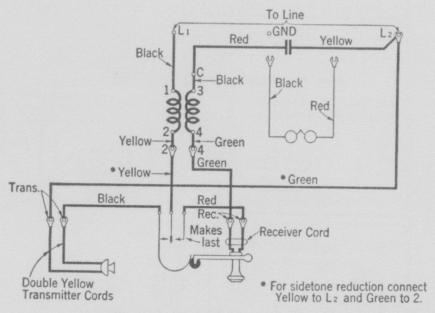


Fig. 4-333B Subscriber Set

2.02 Four-Party Selective-Manual Stations

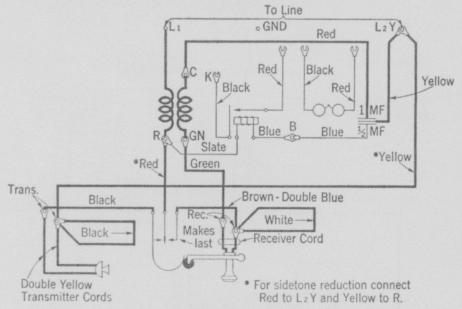


Fig. 5-553AR Subscriber Set

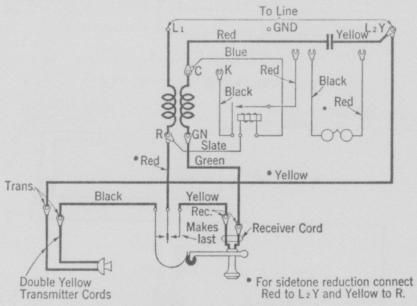


Fig. 6-533AR Subscriber Set

2.03 Eight-Party Semi-Selective—Manual Stations
Use anti-sidetone equipment. See the section in Division C40 covering anti-sidetone subscriber set connections.

2.04 Local Battery Talking, Common Battery Signaling— Manual Stations

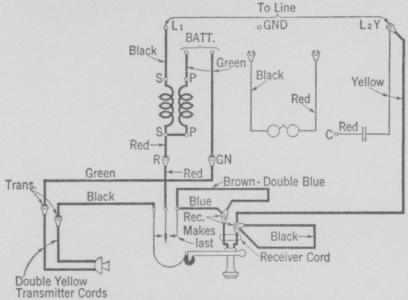


Fig. 7-553Y or BF Subscriber Set

Note: For new installations use anti-sidetone equipment.

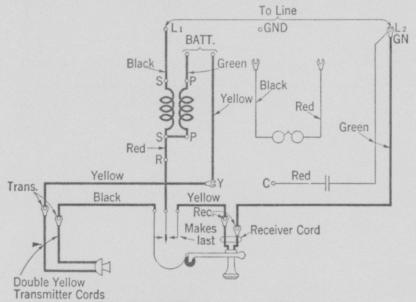


Fig. 8-533Y Subscriber Set

Note: For new installations use anti-sidetone equipment.

2.05 No. 1 Residence System Stations
See Handbook Specifications 4466 or replacing information.

C42.501

Page 5

3. DIAL STATION CONNECTIONS

3.01 All dial stations except:
Two-Party Selective Message Rate,
Four-Party Selective,
Eight-Party Semi-Selective,
No. 750-A P.B.X. Key and Control
Local Battery Talking, Common Battery Signaling,
No. 1 Residence System

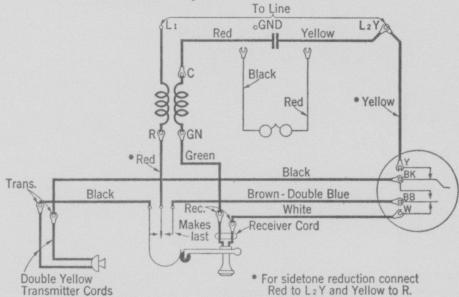


Fig. 9-553A Subscriber Set


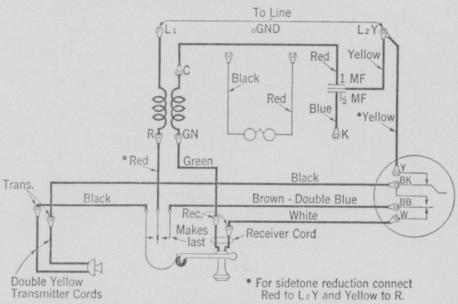


Fig. 10-553BA Subscriber Set

3.02 Two-Party Selective Message Rate-Dial Stations

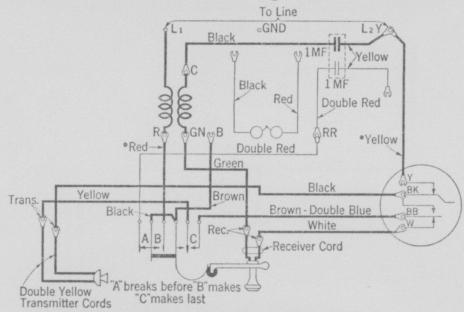

For sidetone reduction on ring party connect Red to L₂Y and Yellow to R.
 For sidetone reduction on tip party connect Red to L₂Y and Yellow to R, connect tip of line to L₂Y and ring of line to L₁ and transfer yellow

Fig. 11-553C Subscriber Set

3.03 Four-Party Selective-Dial Stations

ringing condenser lead from L1 to L2Y.

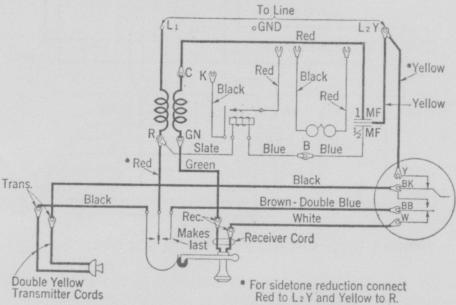



Fig. 12-553AR Subscriber Set

C42.501

Page 7

3.04 Eight-Party Semi-Selective—Dial Stations
Use anti-sidetone subscriber set. See the section in Division C40 covering anti-sidetone subscriber set connections.

3.05 No. 750A P.B.X. Key and Control-Dial Stations

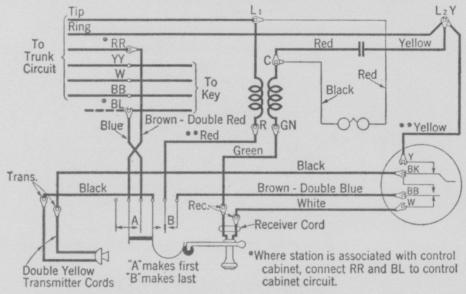

** For sidetone reduction connect Red to L2Y and Yellow to R.

Fig. 13-553J Subscriber Set

3.06 Local Battery Talking, Common Battery Signaling— Dial Stations

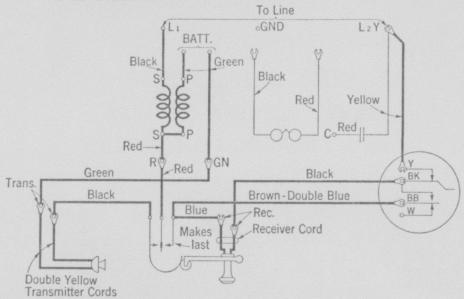


Fig. 14-553Y or BF Subscriber Set

Note: For new installations use anti-sidetone equipment.

3.07 No. 1 Residence System Stations
See Handbook Specifications 4466 or replacing information.

C42.501

Page 9 9 Pages