

SUBSCRIBER SET 691A
COMMON BATTERY
NETWORK TYPE
CONNECTIONS

D50H-* MOUNTING CORD

KEY TERMINAL
STRIP
K


589S KEY

LAMPS

17	(BR-R)	G
18	(R-BR)	B
26	(BR-BK)	F
27	(BK-BR)	RR
30	(BL-Y)	C
31	(Y-BL)	GN
33	(Y-O)	L1
34	(G-Y)	L2
44	(G-V)	L2
49	(V-S)	R


1	(BL-W)	1
2	(W-BL)	2
3	(O-W)	4
4	(W-O)	15
5	(G-W)	5
6	(W-G)	16
7	(BR-W)	18
8	(W-BR)	7
9	(S-W)	8
9	(W-S)	9
10	(BL-R)	19
11	(R-BL)	10
12	(O-R)	12
13	(R-O)	21
14	(G-R)	11
15	(R-G)	20
19	(S-R)	13
19	(R-S)	26
20	(BL-BK)	3
22	(BK-BL)	14
23	(O-BK)	27
24	(BK-O)	28
24	(G-BK)	23
25	(S-BK)	29
28	(BK-S)	30
29	(O-Y)	22
32	(Y-G)	25
35	(BR-V)	17
46	(V-BR)	6
47	(BK-G)	24
50		

36	(BR-Y)	1LG
37	(Y-BR)	1L
38	(S-Y)	2L
39	(Y-S)	3L
40	(BL-V)	4LG
41	(V-BL)	4L
42	(O-V)	5LG
43	(V-O)	5L
48	(S-V)	6L
45	(V-G)	

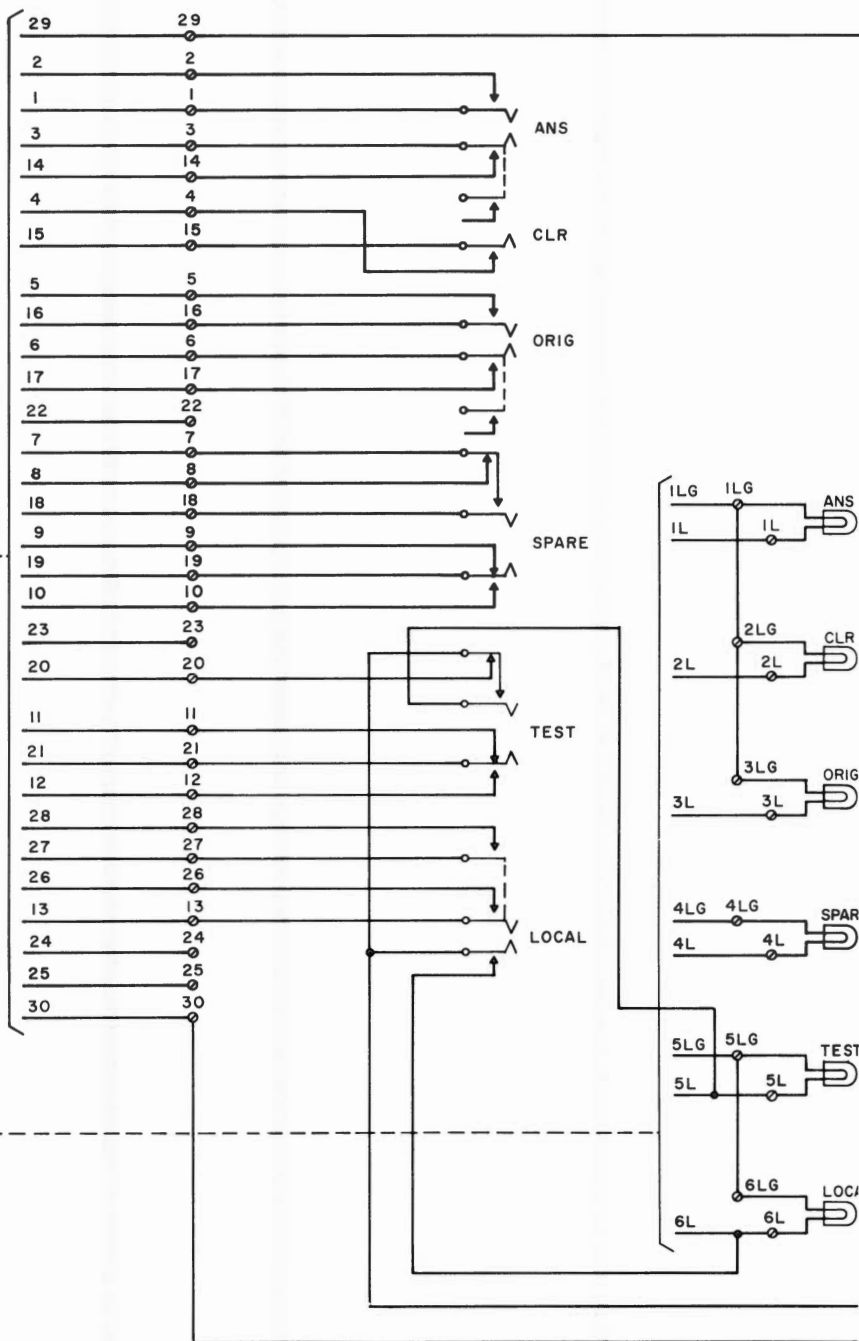

7L DIAL

C4A RINGER

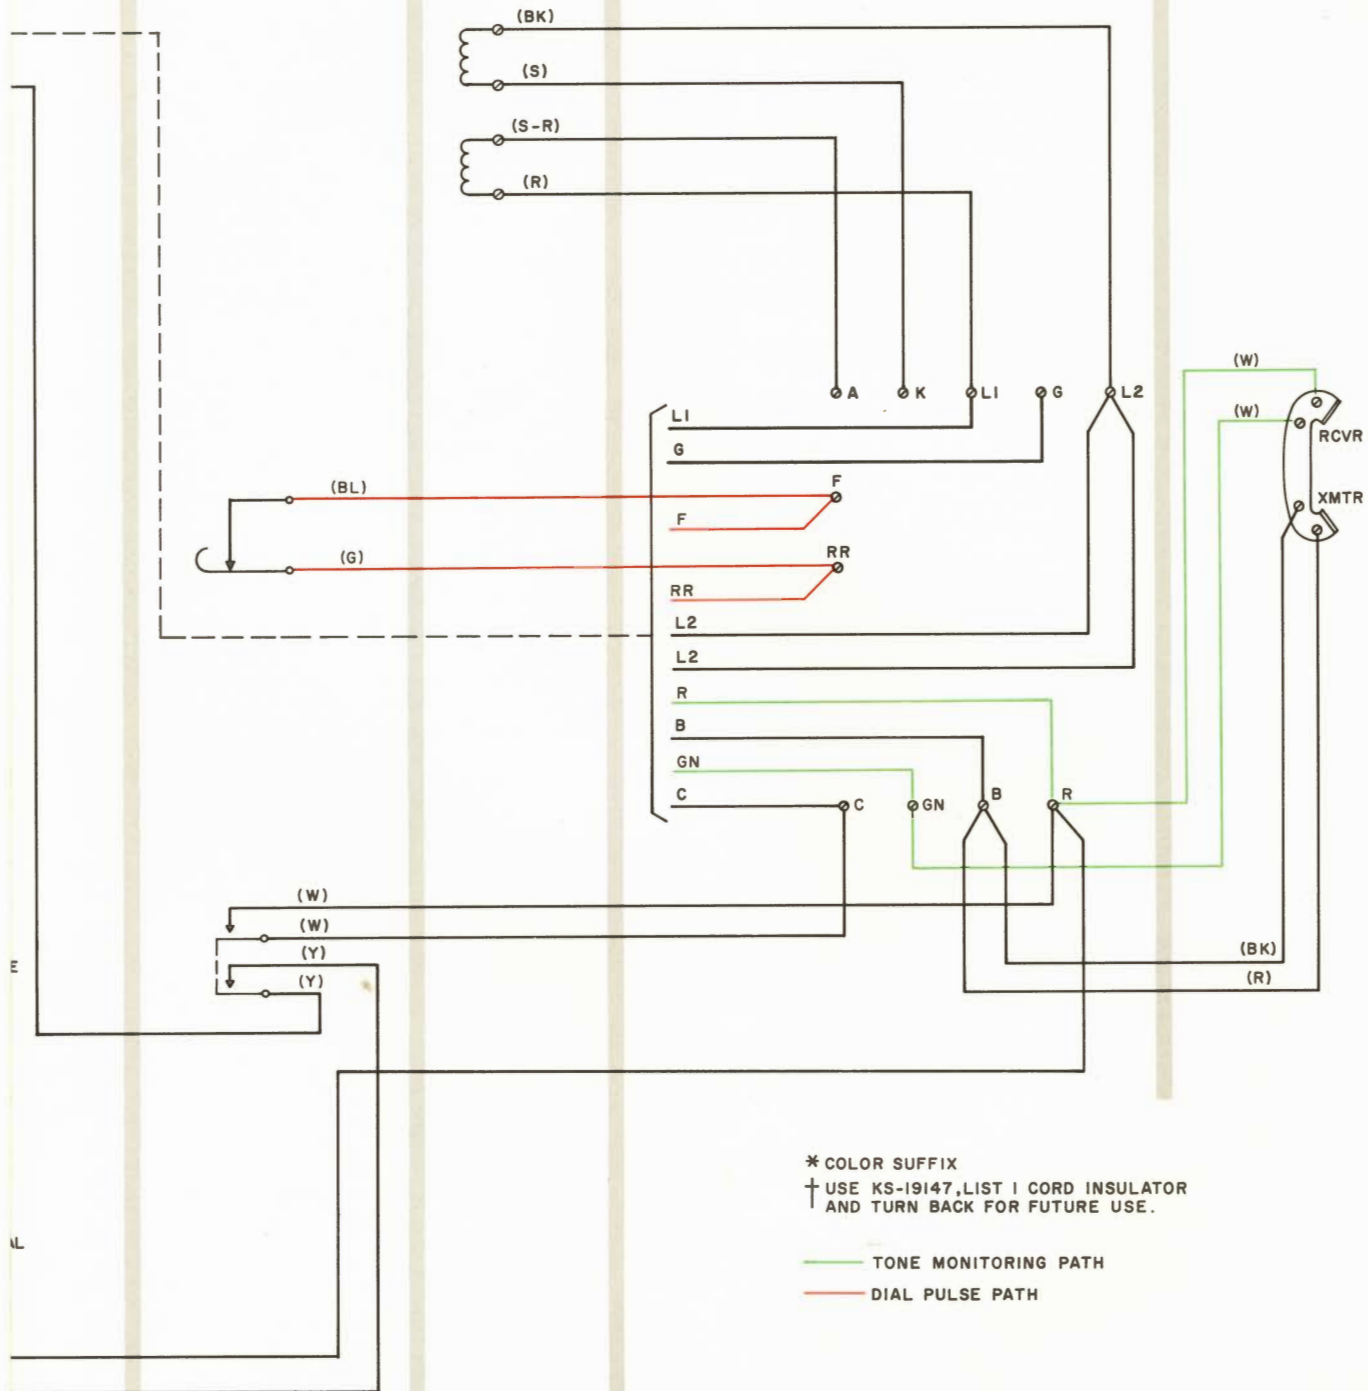425F NETWORK
T732A-*
RECEIVERFig. 1 - 691A-Type Subscriber Set
Connections