# **SERVICE**

## **1663-TYPE TELEPHONE SETS**

### 1. GENERAL

1.01 These sets are supplied factory-wired with a 242B amplifier for headset operation. A 52- or 53-type headset must be ordered separately.

1.02 Connection information contained in this section was formerly found in Section 502-660-413 which will be canceled.

#### TABLE A

### POLARITY GUARD CONNECTIONS (P-90D095 GUARD ASSEMBLY 1663A-TYPE) (P-90D012 GUARD ASSEMBLY 1663B-TYPE)

LEAD		REMOVE FROM	CONNECT TO		
	COLOR	NET.	POLARITY GUARD	NET.	
Dial	вк	RR	т		
Line Switch	w		2		
Headset Key	V-S	C	S		
Polarity Guard	w	-		C	
	G			RR	

**Note:** For use when specified by local instructions for end-to-end signaling installations.

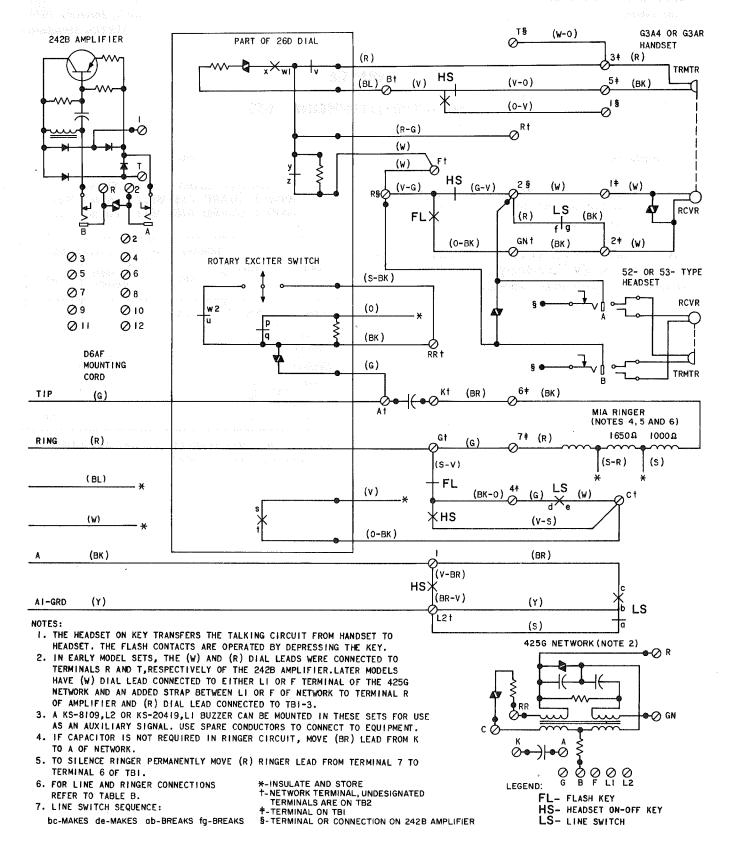


Fig. 1—1663A1 (MD) Telephone Set Connections

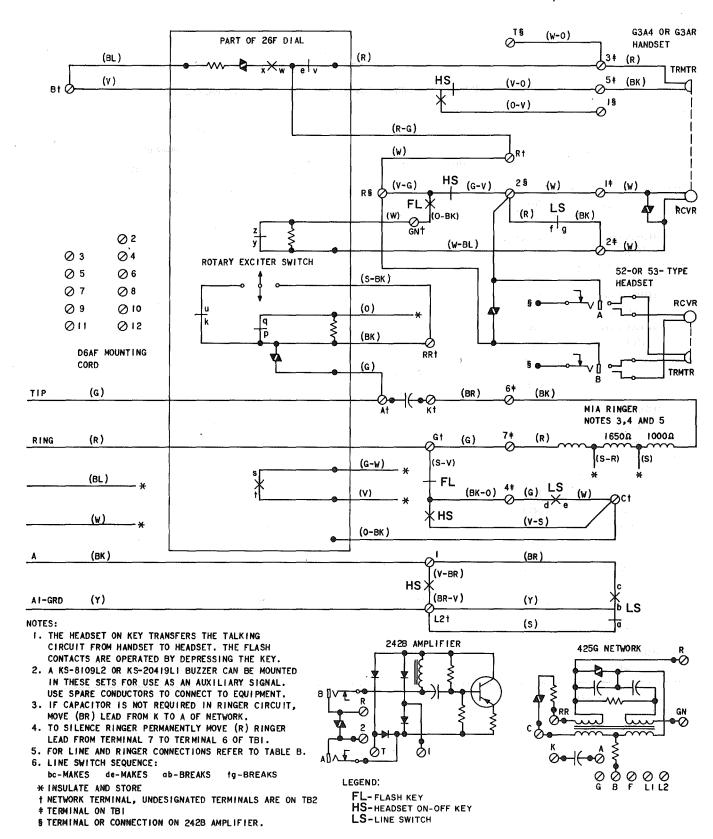


Fig. 2—1663B1 (MD) Telephone Set Connections

TABLE B

LINE AND RINGER CONNECTIONS — 1663-TYPE TELEPHONE SET

WIRE OR LEAD		INDIV OR BRIDGED	RING PARTY	TIP PARTY			
				IDENT GROUN		GROUND	1A1 OR 1A2 KEY TEL
				NO IDENT GROUND	1000 Ω	<b>2650</b> Ω	SYSTEM
Line Wire	Tip	1	1	1	1	1	1
at	Ring	2	. 2	2	2	2	2
Connecting Block	Grd A1 A	4	4	4	4	4	4 5
programme and the control of the con	(G)	1	1	1	1	1	1
Mounting	(R)	2	2	2	2	2	2
Cord at	(Y)	4	4	4	4	4	4
Connecting	(BK)	5	5	5	5	5	5
Block	(BL)	6	6	6	6	6	6
YARRAMAN IN AND AND AND AND AND AND AND AND AND AN	(W)	7	7	7	7	7	7
	(G)	A	G	A	A	A	A
Mounting	(R)	G	$\mathbf{A}$	G	G	G	G
Cord in	(Y)	L2	L2	L2	L2	L2	L2
Set	(BK)	1	1	1	1	1	1.
DC1	(BL)	* :	*	*	*	aje	*
	(W)	*	*	*	*	*	*
	(R)	7	7	7	6	6	7
Ringer	(BK)	6	6	6	7	7 .	6
Leads	(S)	*	*	*	В	*	*
	(S-R)	* '	*	a)e	*	В	*
Ringer	(BR)	K	K	K	K	K	K
Straps	(G)	G	L2	L2	L2	L2	G
Dial	(G)	A	G	A	A	A	A
Leads	(O-BK)	C	C	C	C	$\mathbf{C}$	C
Headset Key Lead	(S-V)	G	A	G.	$\mathbf{G}_{i}$	G.	G

<sup>\*</sup> Insulate and store