

SERVICE

211A, B, C, AND D HAND TELEPHONE SETS

1. GENERAL

● 502-302-401

1.01 Information in this section was formerly contained in the following sections which are hereby canceled.

● 502-302-400

This section also cancels Section 502-302-402. The information from this section is now contained in Section **502-320-400**.

1.02 The 211A, B, C, and D type hand telephone sets are MD.

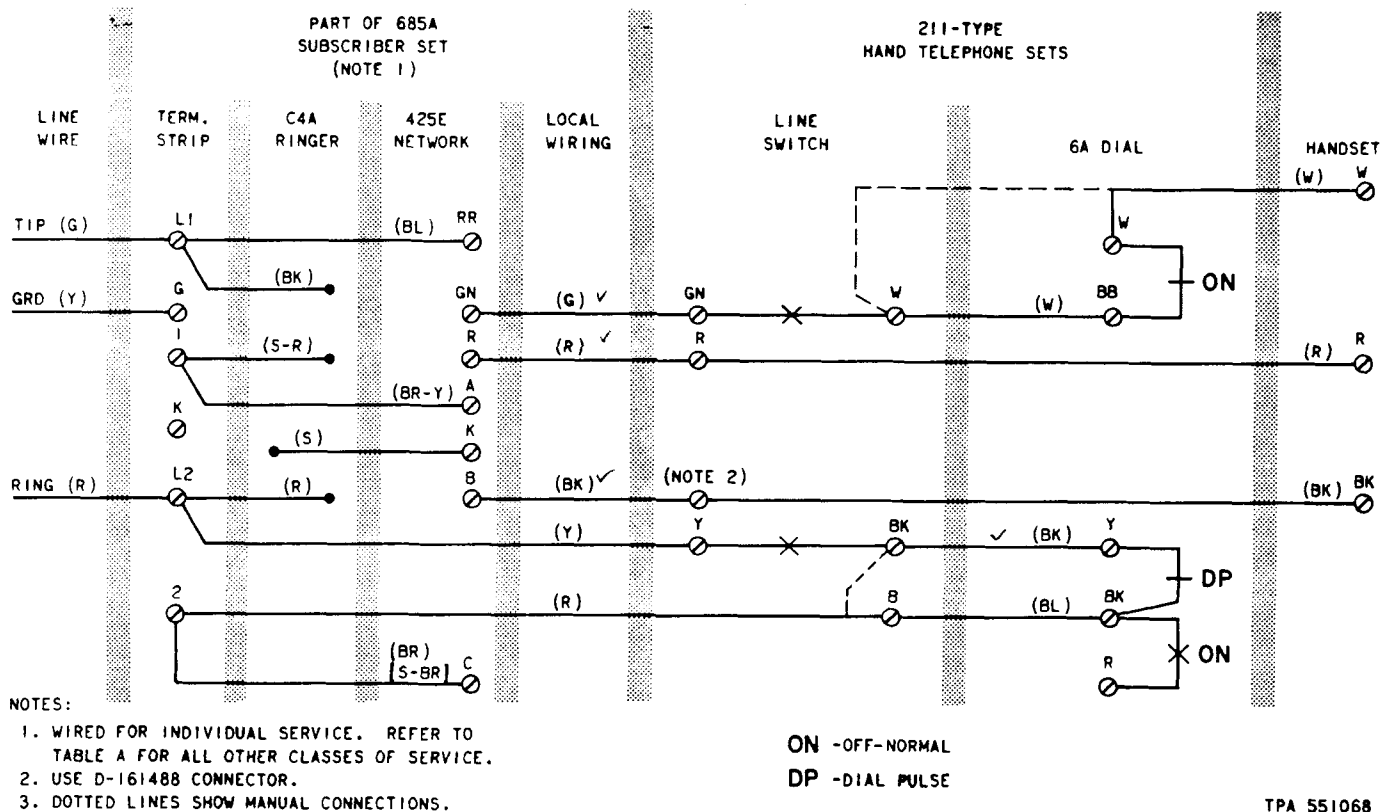


Fig. 1—211A, B, C, and D Hand Telephone Set Connections Used With 685A Subscriber Set

TABLE A
LINE AND RINGER CONNECTIONS 685A OR 686A SUBSET USED WITH 211-TYPE HAND TELEPHONE SET

WIRE OR LEAD	COLOR	TIP PARTY	RING PARTY (Note 1)	NEGATIVE (-) PARTIES	POSITIVE (+) PARTIES
				RING STATION (NOTE 1)	
				1 AND 5	3 AND 7
Ringer Leads (Note 2)	R	L2	L2	G	L2
	BK	G	G	G	L2
	S	K*	K*	A*	A*
	S-R	1	1	K*	K*
426A Tube Leads (3-element-686A only)	BK			K*	K*
	Y			L2	G
	R			G	L2

*Terminal on 425E network.

Notes:

1. Reverse tip and ring for tip party service.
2. To silence ringer permanently, connect (R) and (BK) ringer leads to K on the terminal strip (Fig. 1).

TABLE B
ASSOCIATED APPARATUS

CLASS OF SERVICE	SUBSCRIBER SET
Individual Lines 2-Party Flat Rate* 2-Party Message Rate (Ring Party Only)* 4-Party Semiselective Multiparty Divided Code Regular PBX Stations 750A and 755A Keyless Stations	685A
4-Party Full Selective 8-Party Semiselective	686A

*No message rate or tip-party identification can be provided for tip-party station.

TABLE C
61M FILTER CONNECTIONS

FILTER LEADS (SEE NOTE)	FILTER LEAD TERMINATIONS
BK	To BK of dial
R	To BK of line switch
Y	To Y of dial

Note: The 211-type set is arranged for, but not equipped with, a 61M filter for radio-frequency suppression. When this filter is required, remove the dial cord between Y of the dial and BK of the switchhook and connect filter as shown in Table C.