

COIN COLLECTORS — PREPAY

176C, D, G, H

COMMON BATTERY — CONNECTIONS

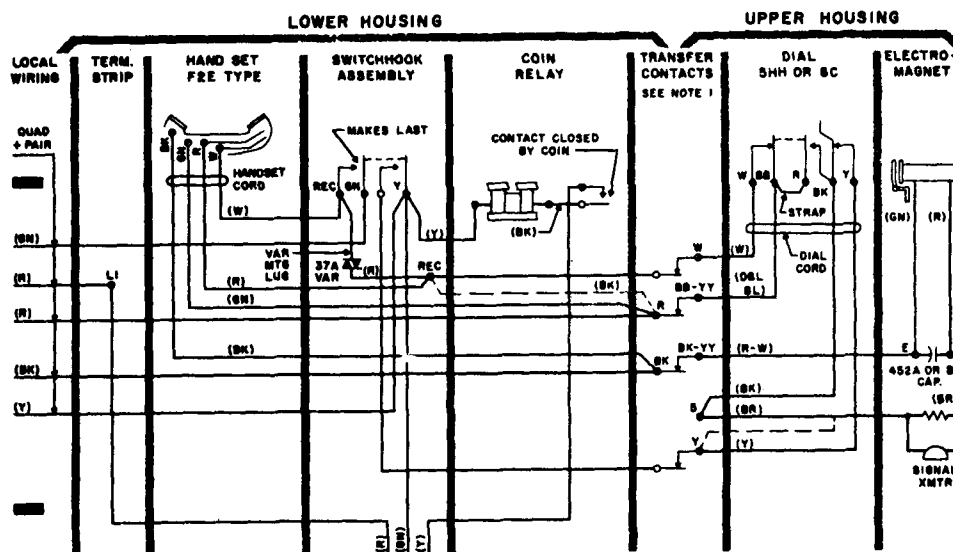


Fig. 1 — Circuit Diagram for Use with 634A, BA, and BC; 684A, BA, and BC Induction Coil Type Subscriber Sets

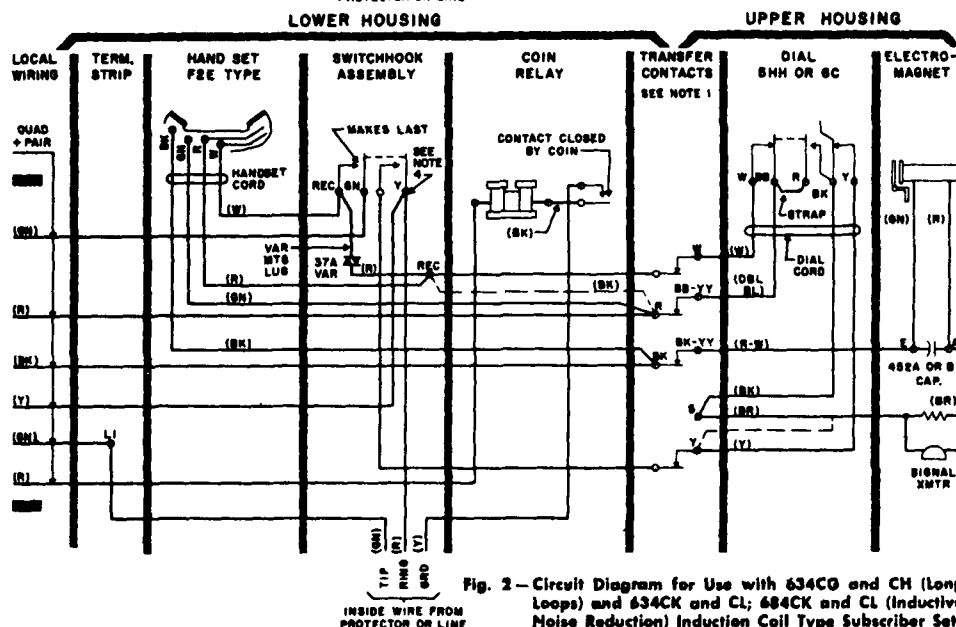


Fig. 2 — Circuit Diagram for Use with 634CO and CH (Long Loops) and 634CK and CL; 684CK and CL (Inductive Noise Reduction) Induction Coil Type Subscriber Sets

Note 1: In some upper housings, transfer contacts may be designated W, BB, YY, BK-YY, and Y, respectively. Terminal 5 is always furnished.

Note 2: Dotted lines in diagram show manual set connections.

Note 3: When a 61R filter is required for radio frequency suppression, move yellow dial lead from Y upper housing contact spring to filter bracket terminal and connect filter leads as follows:

Black lead to No. 5 upper housing contact.

Yellow lead to filter bracket terminal.

Red lead to Y upper housing contact.

Note 4: When coin collector is connected to 634 CG, CH, CK, CL; 684 CK and CL subscriber sets, disconnect yellow strap between Y terminal on switchhook assembly and coin relay. Tape ends and turn back for future use.