


SPEAKERPHONE SYSTEMS— 3 TYPE CONTROL UNITS AND TRANSMITTER UNITS CONNECTIONS

I. GENERAL

1.01 This section shows connections between components in the 3-type speakerphone system.

1.02 This section is being reissued to:

- Add the 51B control unit.
- Add the 666B, 669A, 670A and 671A transmitter.

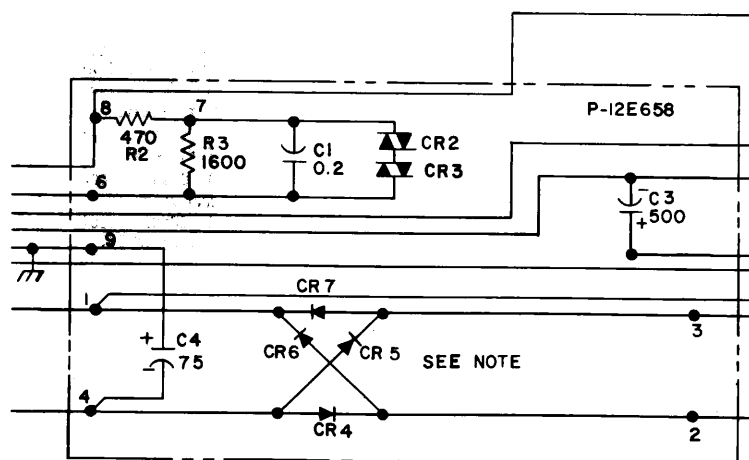

NOTE: 55A CONTROL UNITS MANUFACTURED BETWEEN APRIL AND OCTOBER OF 1962 ARE PRONE TO NOISE PROBLEMS. THESE CONTROL UNITS WERE WIRED ACCORDING TO FIG. 1A. THESE UNITS SHOULD BE REPLACED WITH CONTROL UNITS WIRED PER FIG. 1. DO NOT MODIFY CONTROL UNIT IN THE FIELD.

Fig. 1A - Modification of P-12E658 Printed Wiring Board

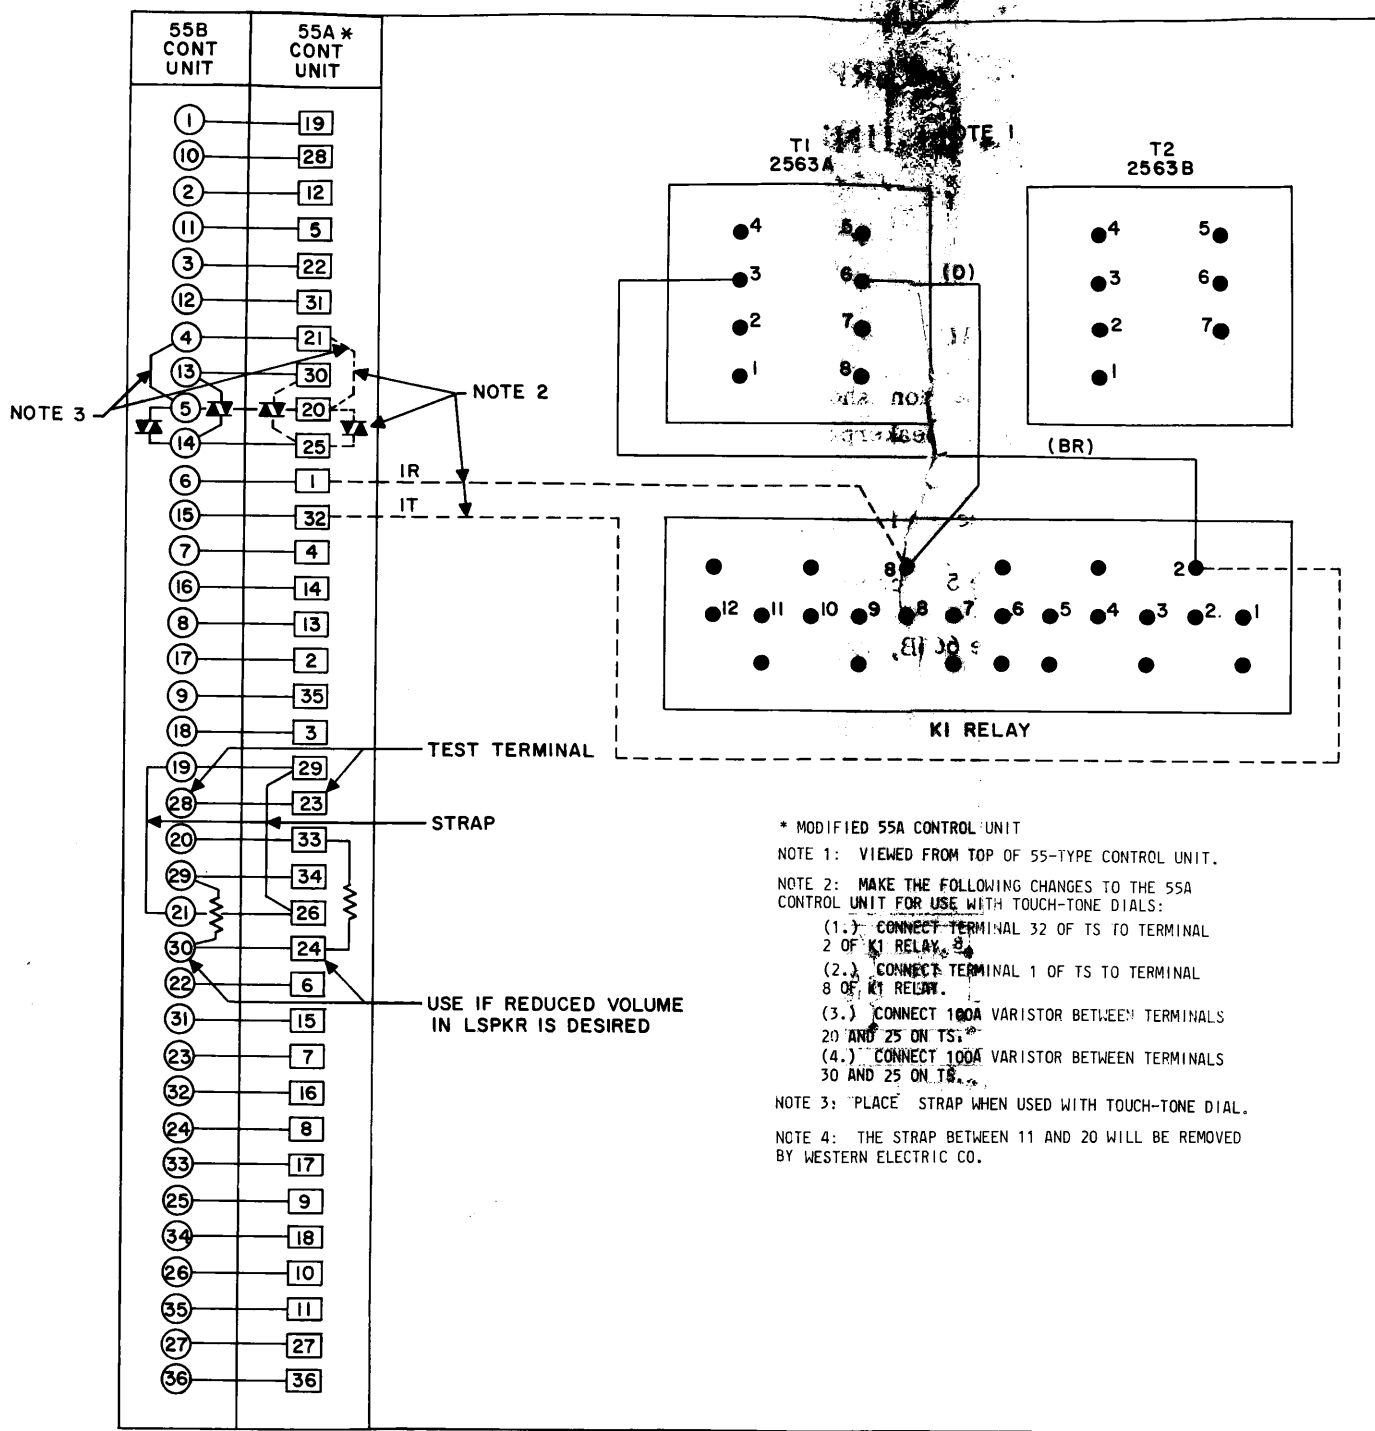


Fig. 1B - Modification of 55A Control Unit for Use with TOUCH-TONE Dial Telephone Sets

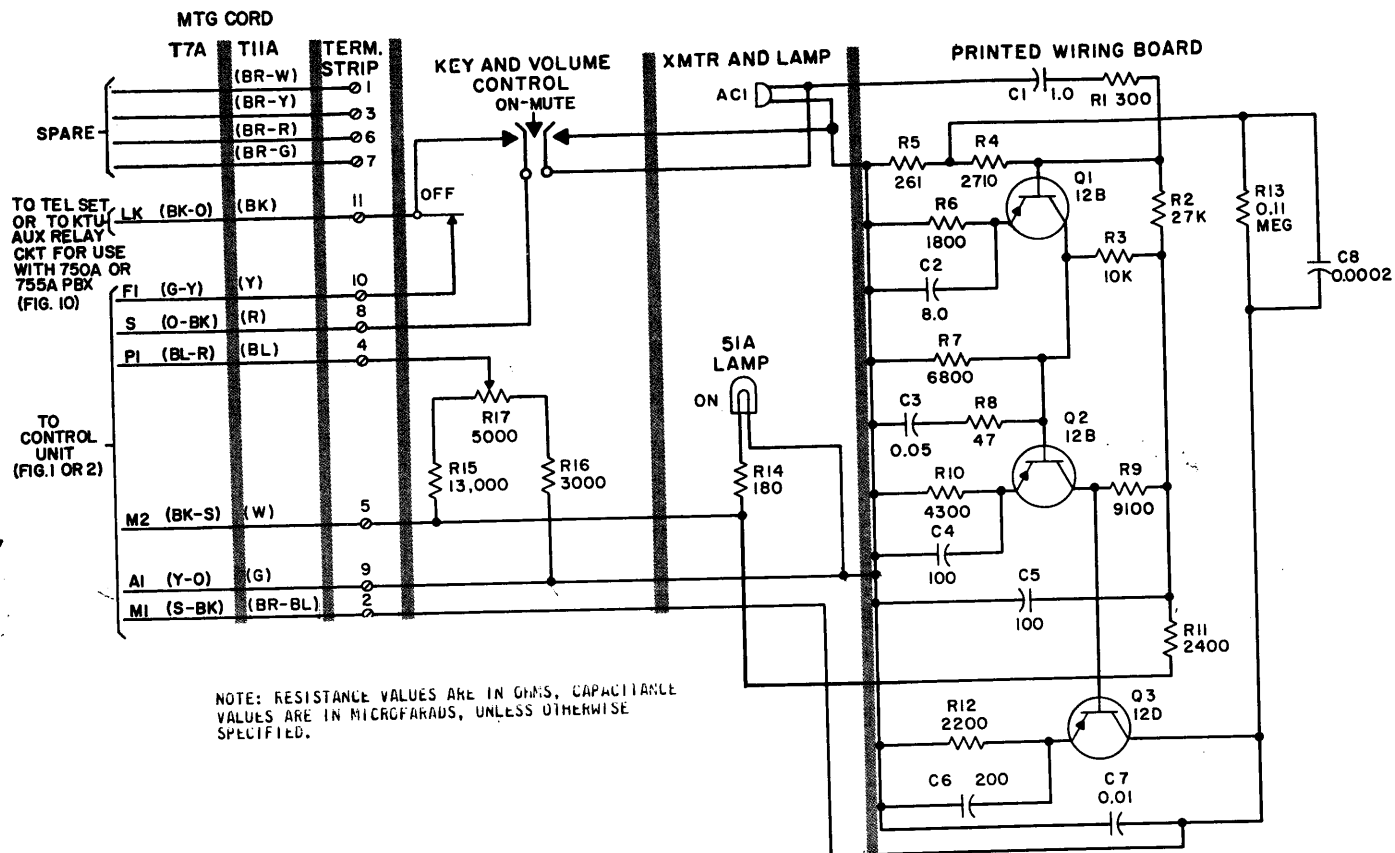
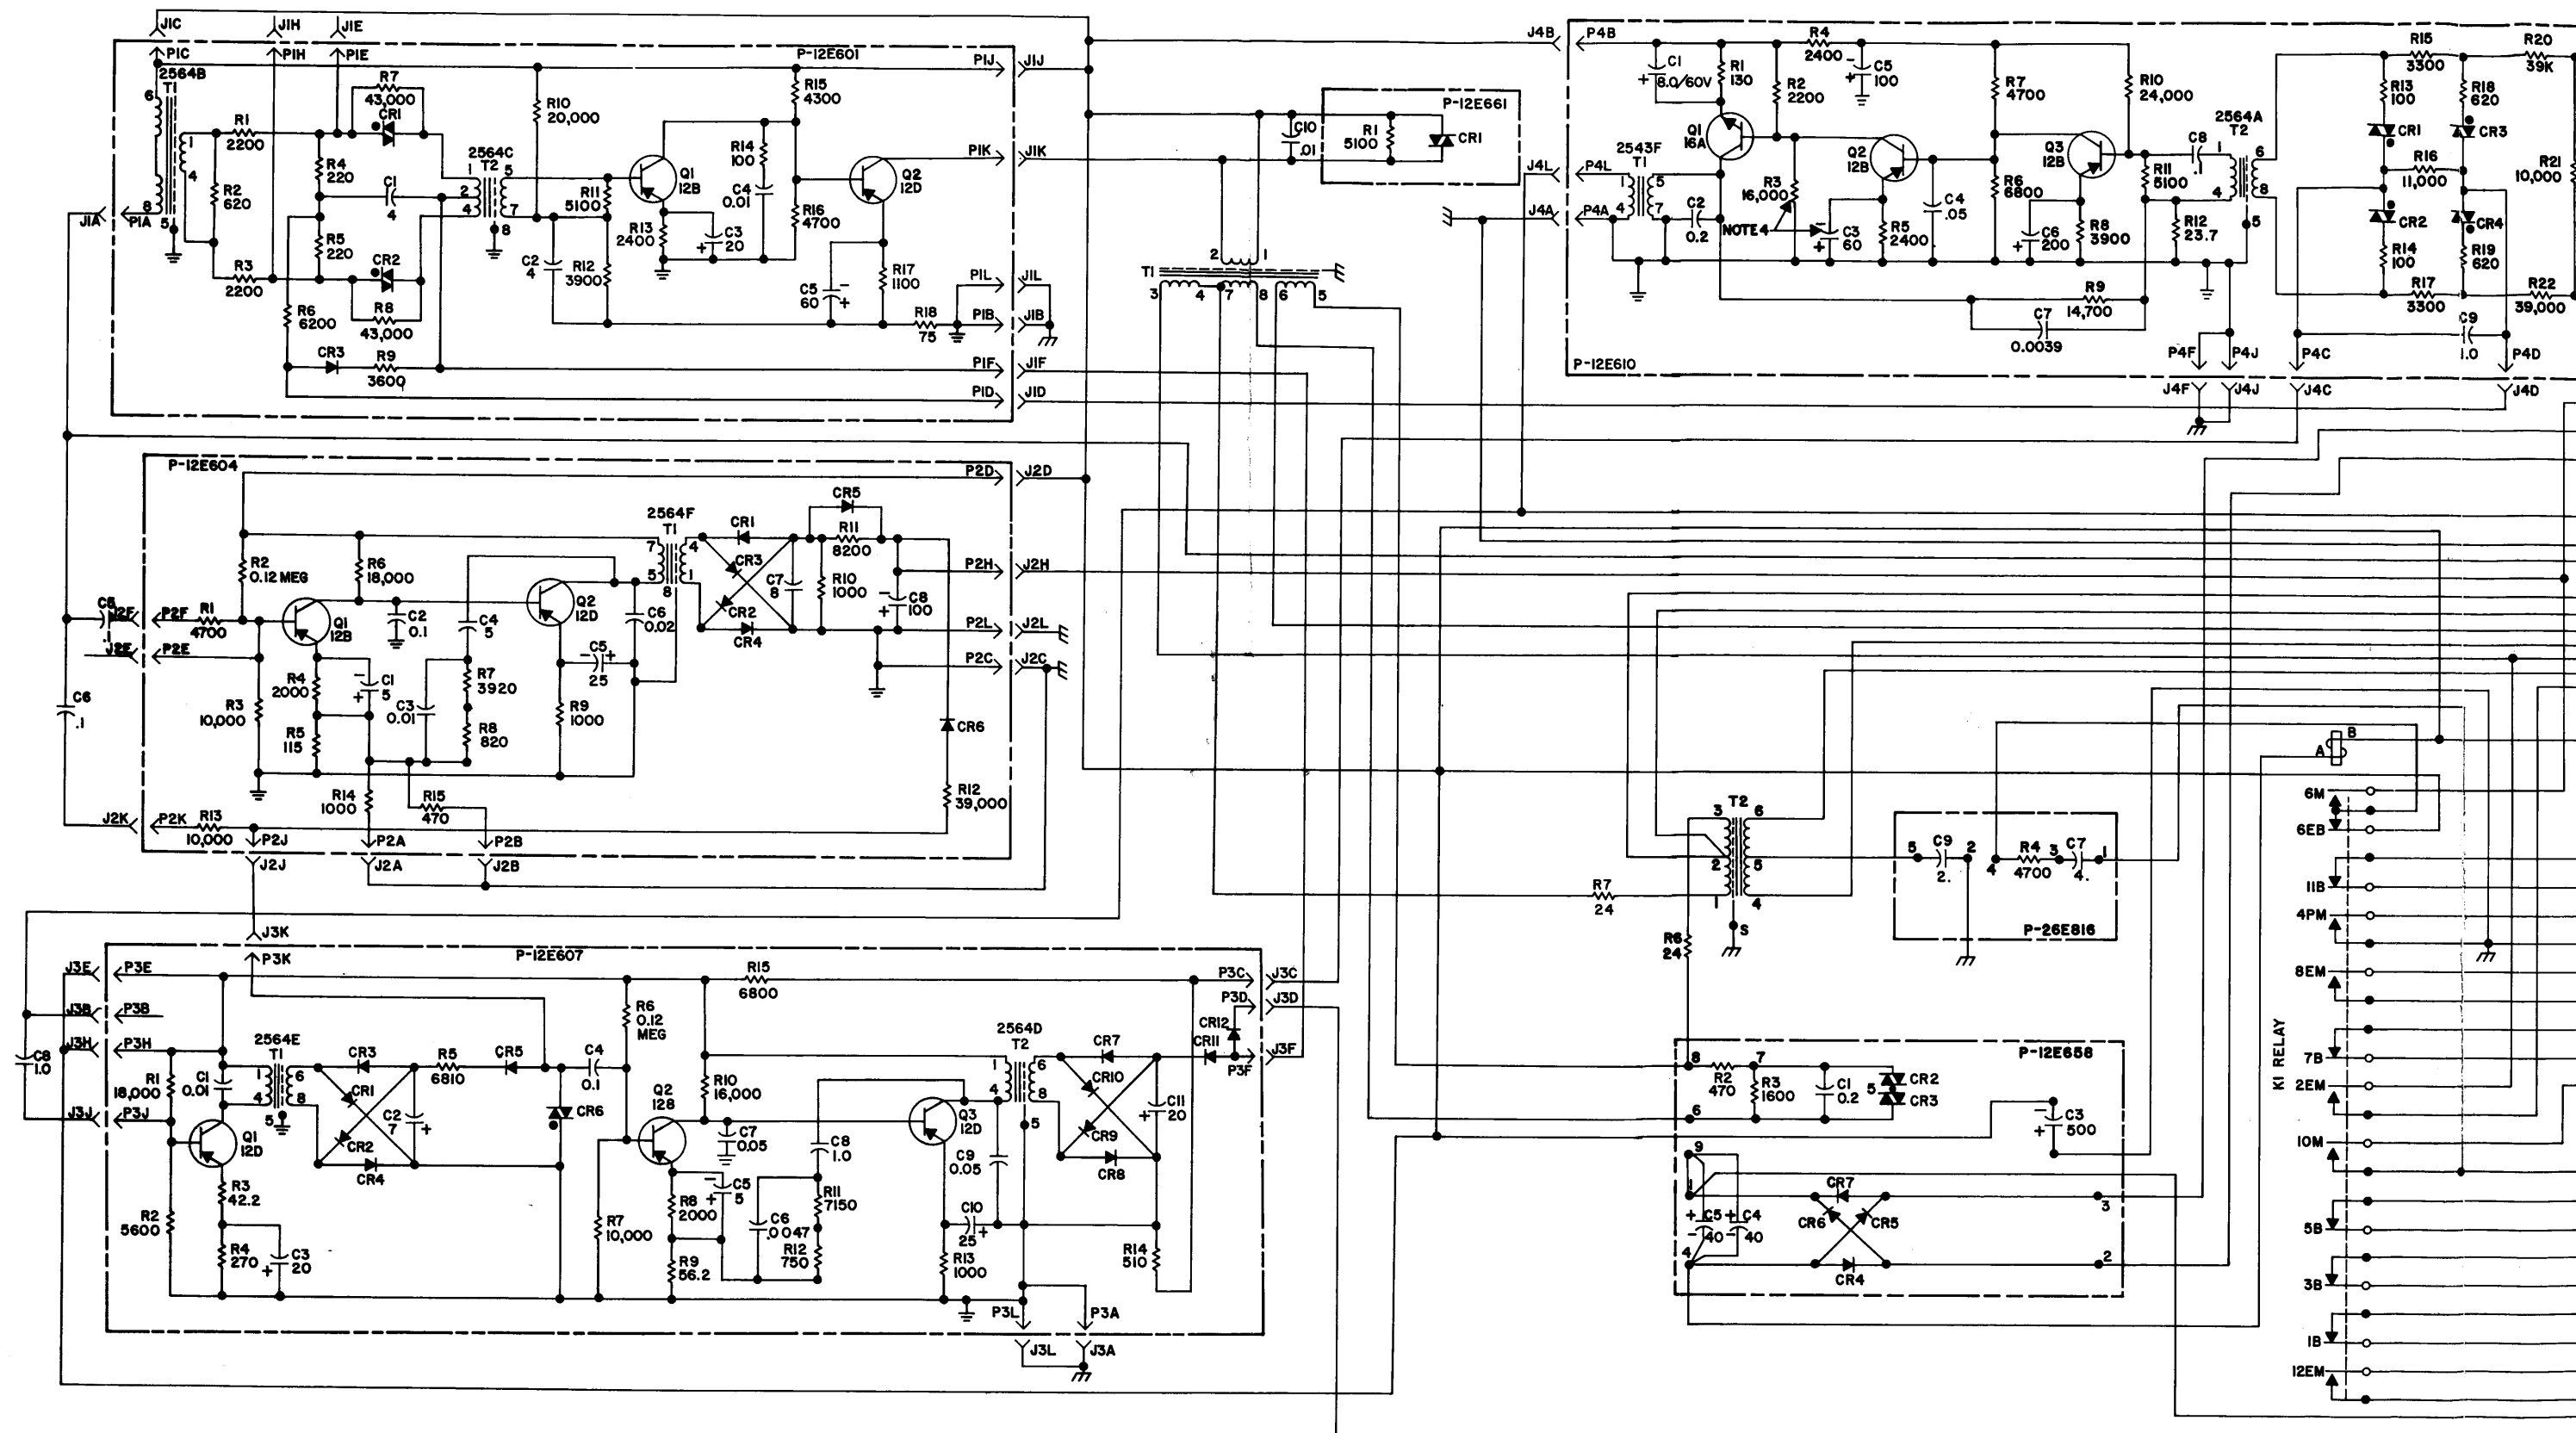


Fig. 3 - 666A Transmitter



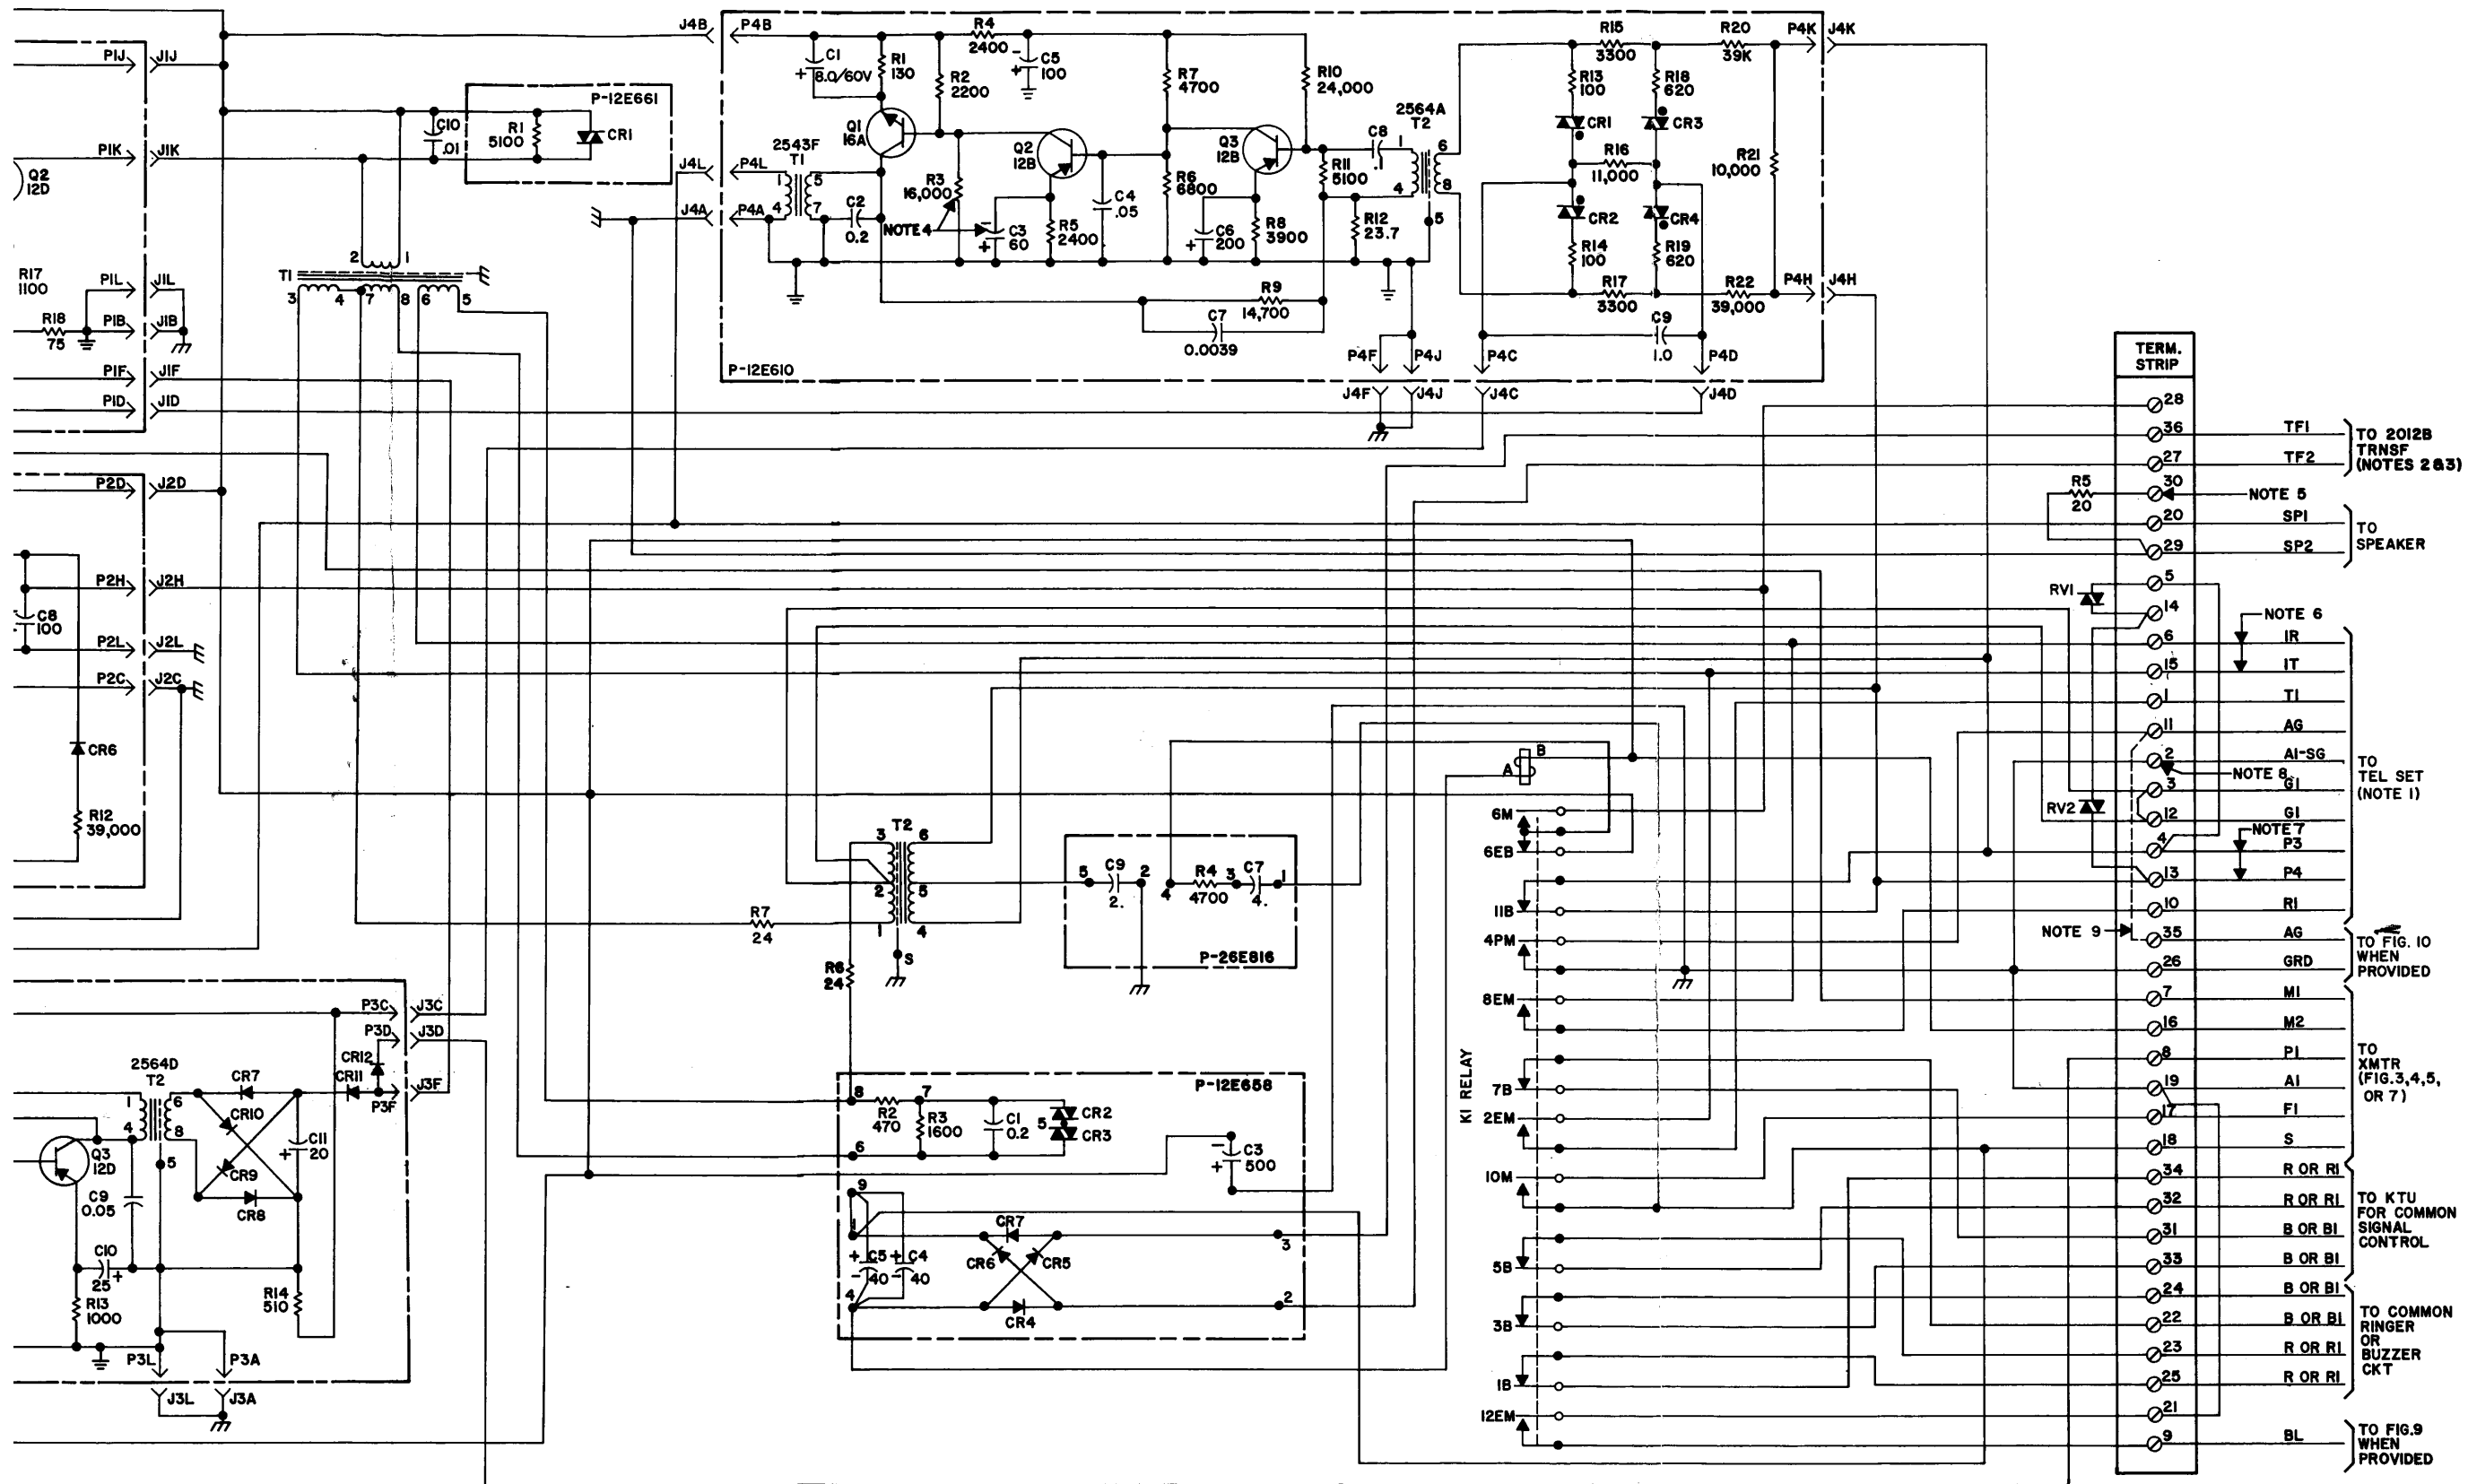


Fig. 2 - 55B Control Un