



RINGER FREQ.**D~ 3416A**

BACK OF BOX

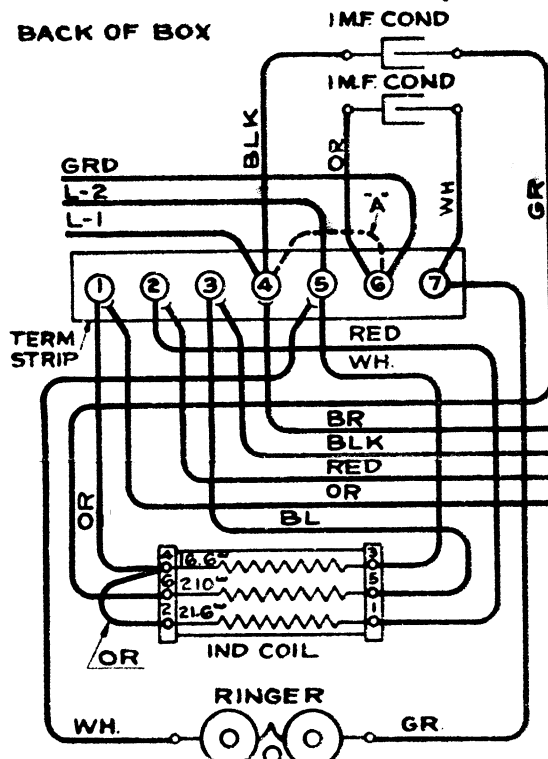

IF BELLS TAP WHEN DIALING REVERSE RINGER CONNECTIOS TO TERMINALS 5 & 7. IF NECESSARY ADJUST TENSION OF BIAS SPRING TO HOLD ARMATURE AGAINST CORE, BUT NOT TO INTERFERE WITH RINGING. CLEARANCE BETWEEN CLAPPER AND BELL TO BE APPROX. .008". FOR METALLIC RINGING REMOVE GRD LEAD AND ADD STRAP TO 4 & 6 AS PER "A" X TO BREAK FIRST AND MAKE LAST

COVER OF BOX TRANS.

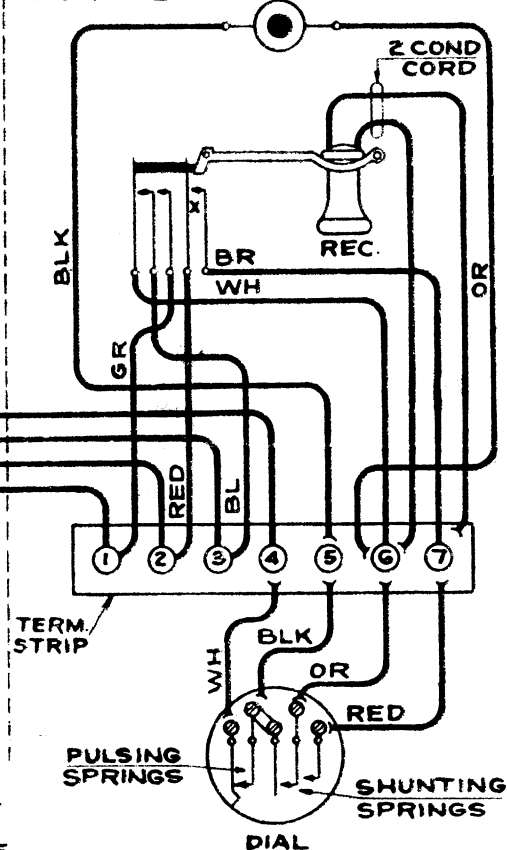

WHEN NO DIAL IS USED CHANGE BLK WIRE FROM TERM 5 TO TERM 4

-1927-