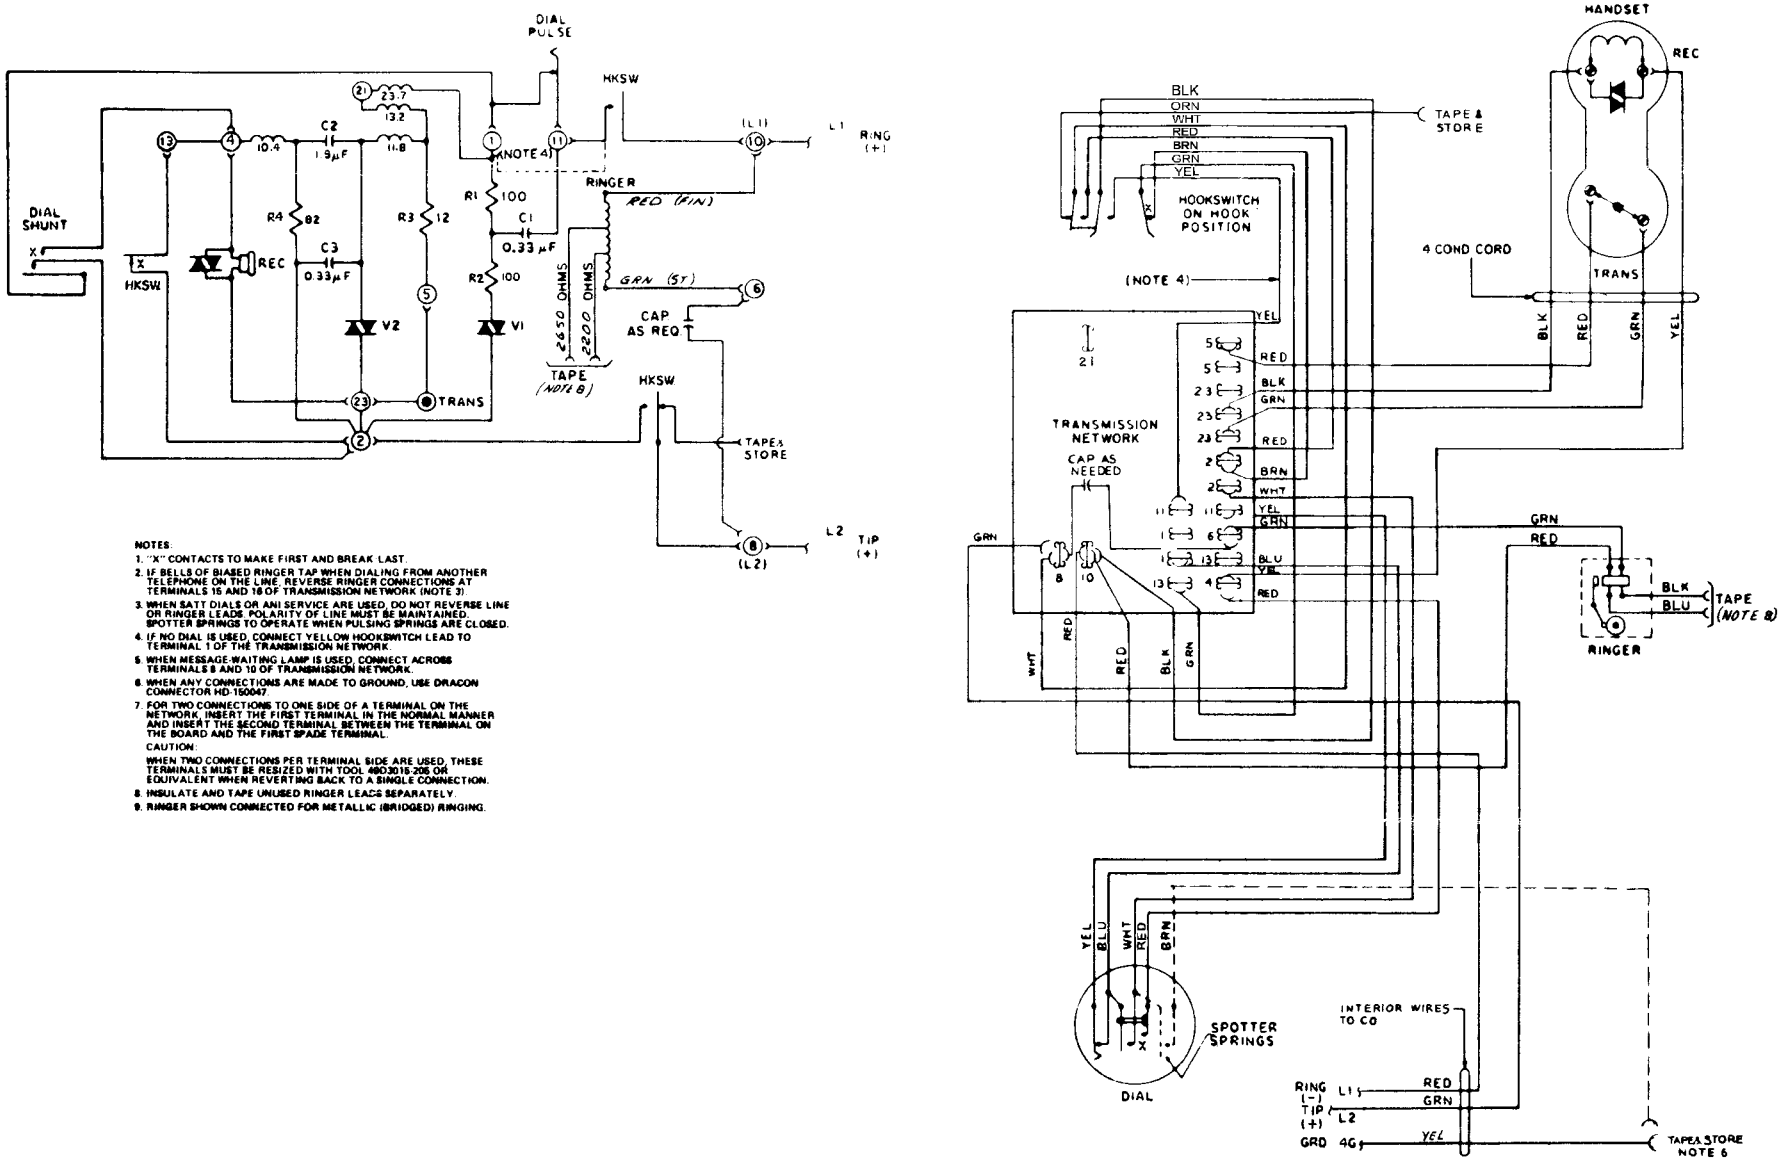

NOTES:

1. "X" CONTACTS TO MAKE FIRST AND BREAK LAST.
2. IF BELLS OF BIASED RINGER TAP WHEN DIALING FROM ANOTHER TELEPHONE ON THE LINE, REVERSE RINGER CONNECTIONS AT TERMINALS 15 AND 18 OF TRANSMISSION NETWORK (NOTE 3).
3. WHEN SATT DIALS OR ANI SERVICE ARE USED, DO NOT REVERSE LINE OR RINGER LEADS. POLARITY OF LINE MUST BE MAINTAINED. SPOTTER SPRINGS TO OPERATE WHEN PULSING SPRINGS ARE CLOSED.
4. IF NO DIAL IS USED, CONNECT YELLOW HOOKSWITCH LEAD TO TERMINAL 1 OF THE TRANSMISSION NETWORK.
5. WHEN MESSAGE-WAITING LAMP IS USED, CONNECT ACROSS TERMINALS 8 AND 10 OF TRANSMISSION NETWORK.
6. WHEN ANY CONNECTIONS ARE MADE TO GROUND, USE DRACON CONNECTOR HD-150047.
7. FOR TWO CONNECTIONS TO ONE SIDE OF A TERMINAL ON THE NETWORK, INSERT THE FIRST TERMINAL IN THE NORMAL MANNER AND INSERT THE SECOND TERMINAL BETWEEN THE TERMINAL ON THE BOARD AND THE FIRST SPADE TERMINAL.

   CAUTION:

   WHEN TWO CONNECTIONS PER TERMINAL SIDE ARE USED, THESE TERMINALS MUST BE RESIZED WITH TOOL 4903015-205 OR EQUIVALENT WHEN REVERTING BACK TO A SINGLE CONNECTION.
8. INSULATE AND TAPE UNUSED RINGER LEADS SEPARATELY.
9. RINGER SHOWN CONNECTED FOR METALLIC (BRIDGED) RINGING.

Schematic and Wiring Diagram for Type 183 Telephone Equipped With HB-1055-A Transmission Network.