

CS952A1-03 TELEPHONE SET

IDENTIFICATION, MOUNTING, CONNECTIONS, AND MAINTENANCE

1. GENERAL

1.01 This section contains information on the CS952A1-03 (Fig. 1) DESIGN LINE* telephone set (Americana Edition Circa 1882 Telephone).

1.02 The reasons for reissuing this section are listed below. Revision arrows are used to emphasize the more significant changes.

- Delete information on 952A1-03 telephone set
- Add CS952A1-03 telephone set.

1.03 ♦Telephone sets having the prefix "CS" (CS952A1-03) added to the set code do not include telephone company-owned components. They are for sale to the customer in their entirety (the housing as well as the transmission and signaling components).♦

2. IDENTIFICATION

2.01 The ♦CS952A1-03♦ rotary dial telephone set is a DESIGN LINE telephone set that is available to the customer.

2.02 The ♦CS952A1-03♦ telephone set is comprised of the following component parts:

- Dial, 8UB
- Cord, Receiver H4EK (2 feet, 8 inches long)
- ♦841407638 Receiver Assembly♦
- Transmitter Assembly
- ♦Jack, Receiver, 616P4B♦
- Cord, Mounting, D4BU-29 (14 feet long)
- ♦Jack, Assembly, 623P4 (mounting cord) ♦

* Trademark of American Telephone and Telegraph Company.

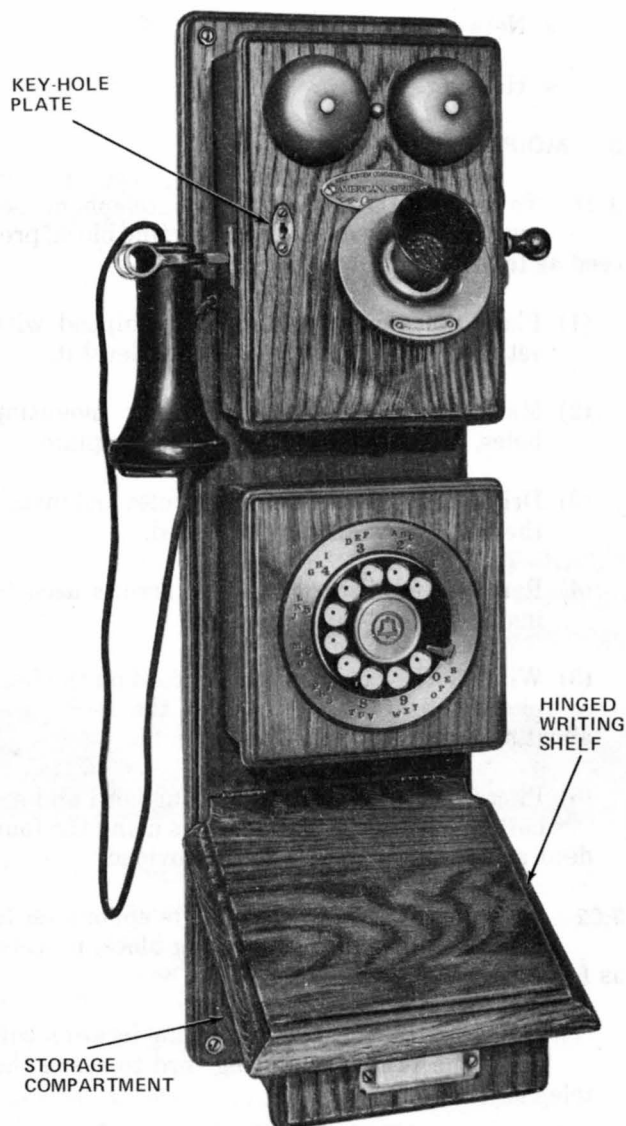


Fig. 1—♦CS952A1-03 DESIGN LINE Telephone Set♦

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

Printed in U.S.A.

Page 1

- Ringer, P3A or P1A
- ♦Unit, Receiver, Modified LB-7 (used as a transmitter)♦
- Unit, Receiver, U3 or U5
- Network
- Housing.

3. MOUNTING

3.01 To mount the ♦CS952A1-03♦ telephone set over a 630-type modular connecting block, proceed as follows.

- (1) Place the mounting template (shipped with set) over the modular outlet and level it.
- (2) Mark two upper and two lower mounting holes, one on each corner of the template.
- (3) Drill four 5/16-inch diameter holes and install the wall screw anchors provided.
- (4) Remove and discard the four screws used to install the wall anchors.
- (5) Wind up the excess mounting cord on the four plastic hooks on the rear of the set. Leave about six inches of cord loose (Fig. 2).
- (6) Plug in the end of the mounting cord and secure the set to the wall anchors using the four decorative screws and washers provided.

3.02 To connect the ♦CS952A1-03♦ telephone set to a 625-type modular connecting block, proceed as follows.

- (1) Make sure the intended mounting location will allow the 14-foot mounting cord to reach the telephone outlet.

- (2) Place the template at a convenient height and level it.
- (3) Mark the two upper and two lower mounting holes, one on each corner of the template.
- (4) Drill four 5/16-inch diameter holes and install the wall screw anchors provided.
- (5) Discard the four screws used to install the wall anchors.
- (6) Wind up the excess line cord on the four plastic hooks on the rear of the set housing (Fig. 2).
- (7) Dress the mounting cord into the channel on the back of the telephone set (Fig. 2).
- (8) Secure the set to the wall anchors using the set of four decorative screws and washers provided.
- (9) Dress the mounting cord to the 625-type modular connecting block and plug in the cord.

4. CONNECTIONS

4.01 ♦These sets are intended to be used as single line sets for bridged service only and are not for use on multiparty service♦.

5. MAINTENANCE

5.01 ♦No adjustments or wiring changes are to be performed on these sets on the customer's premises.

5.02 When it is desired to return a set to Western Electric for repair, it should be packed using an appropriate protective packing material.♦

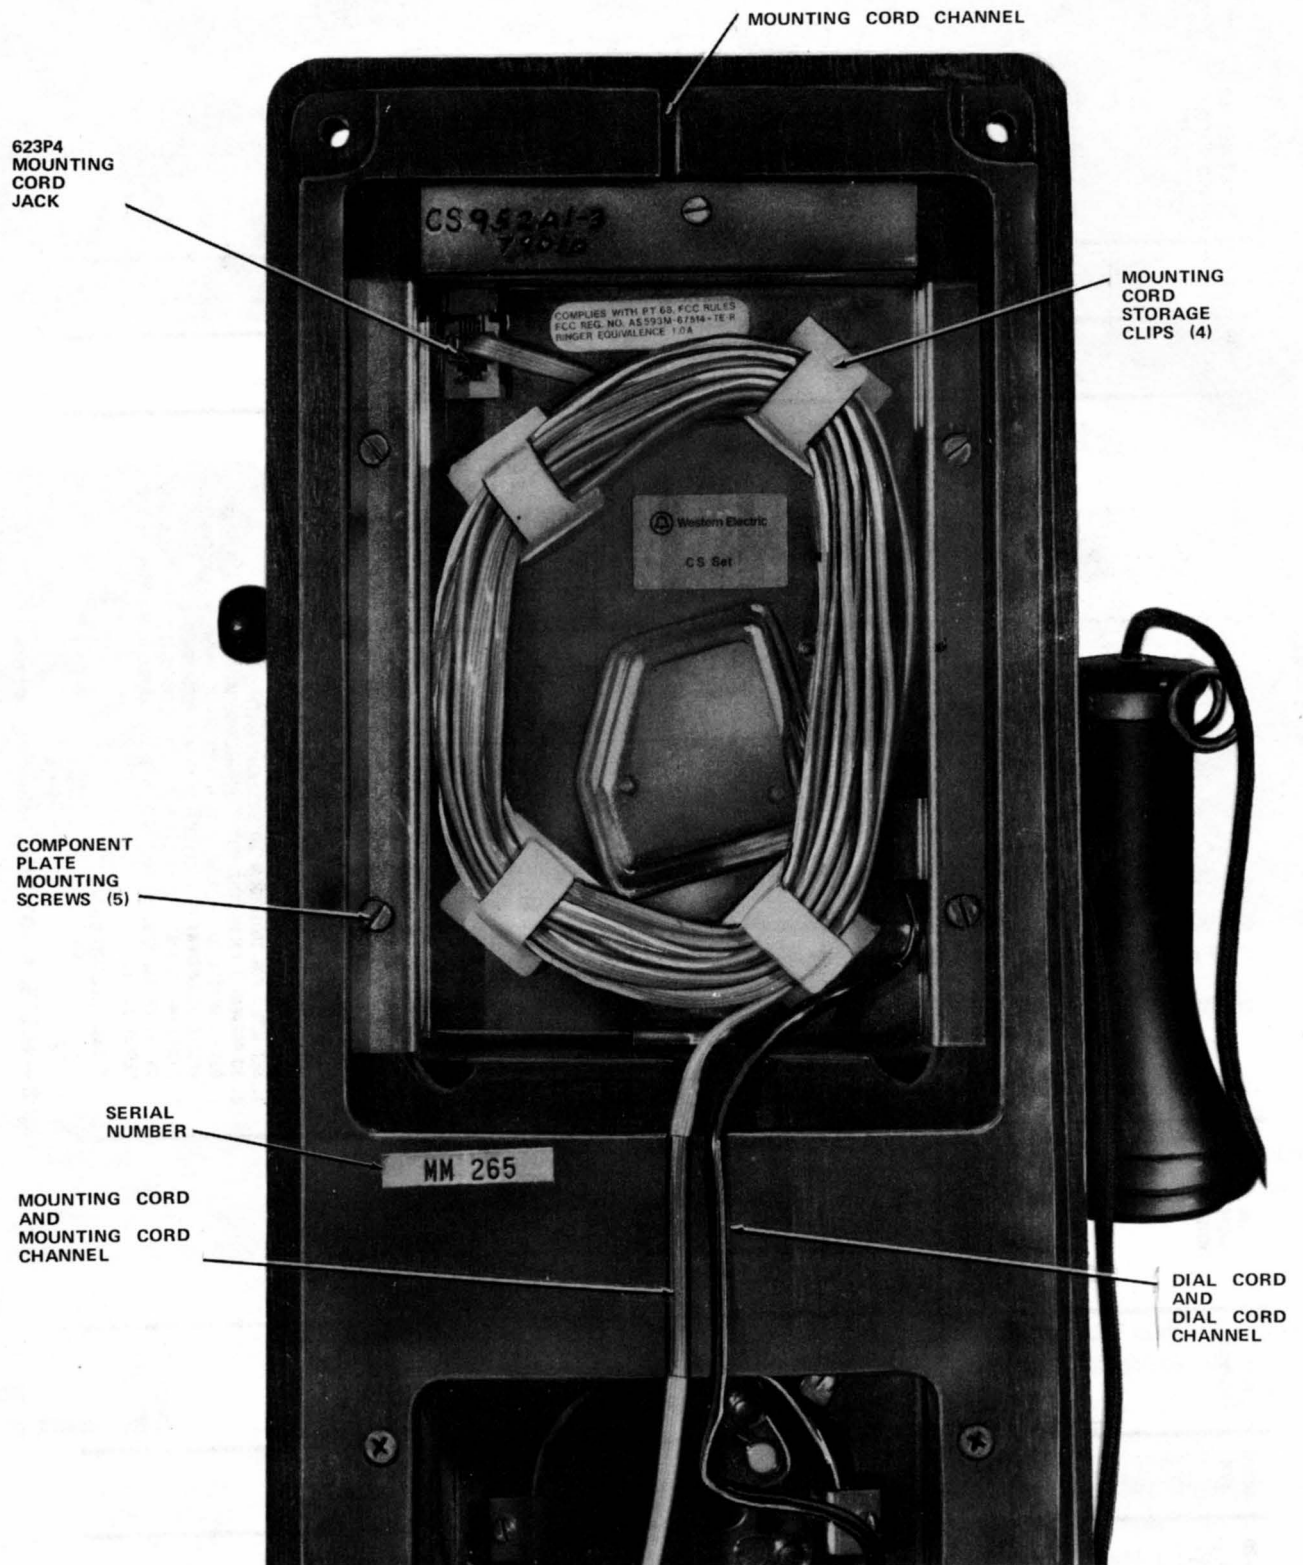


Fig. 2—CS952A1-03 Telephone Set, Rear View

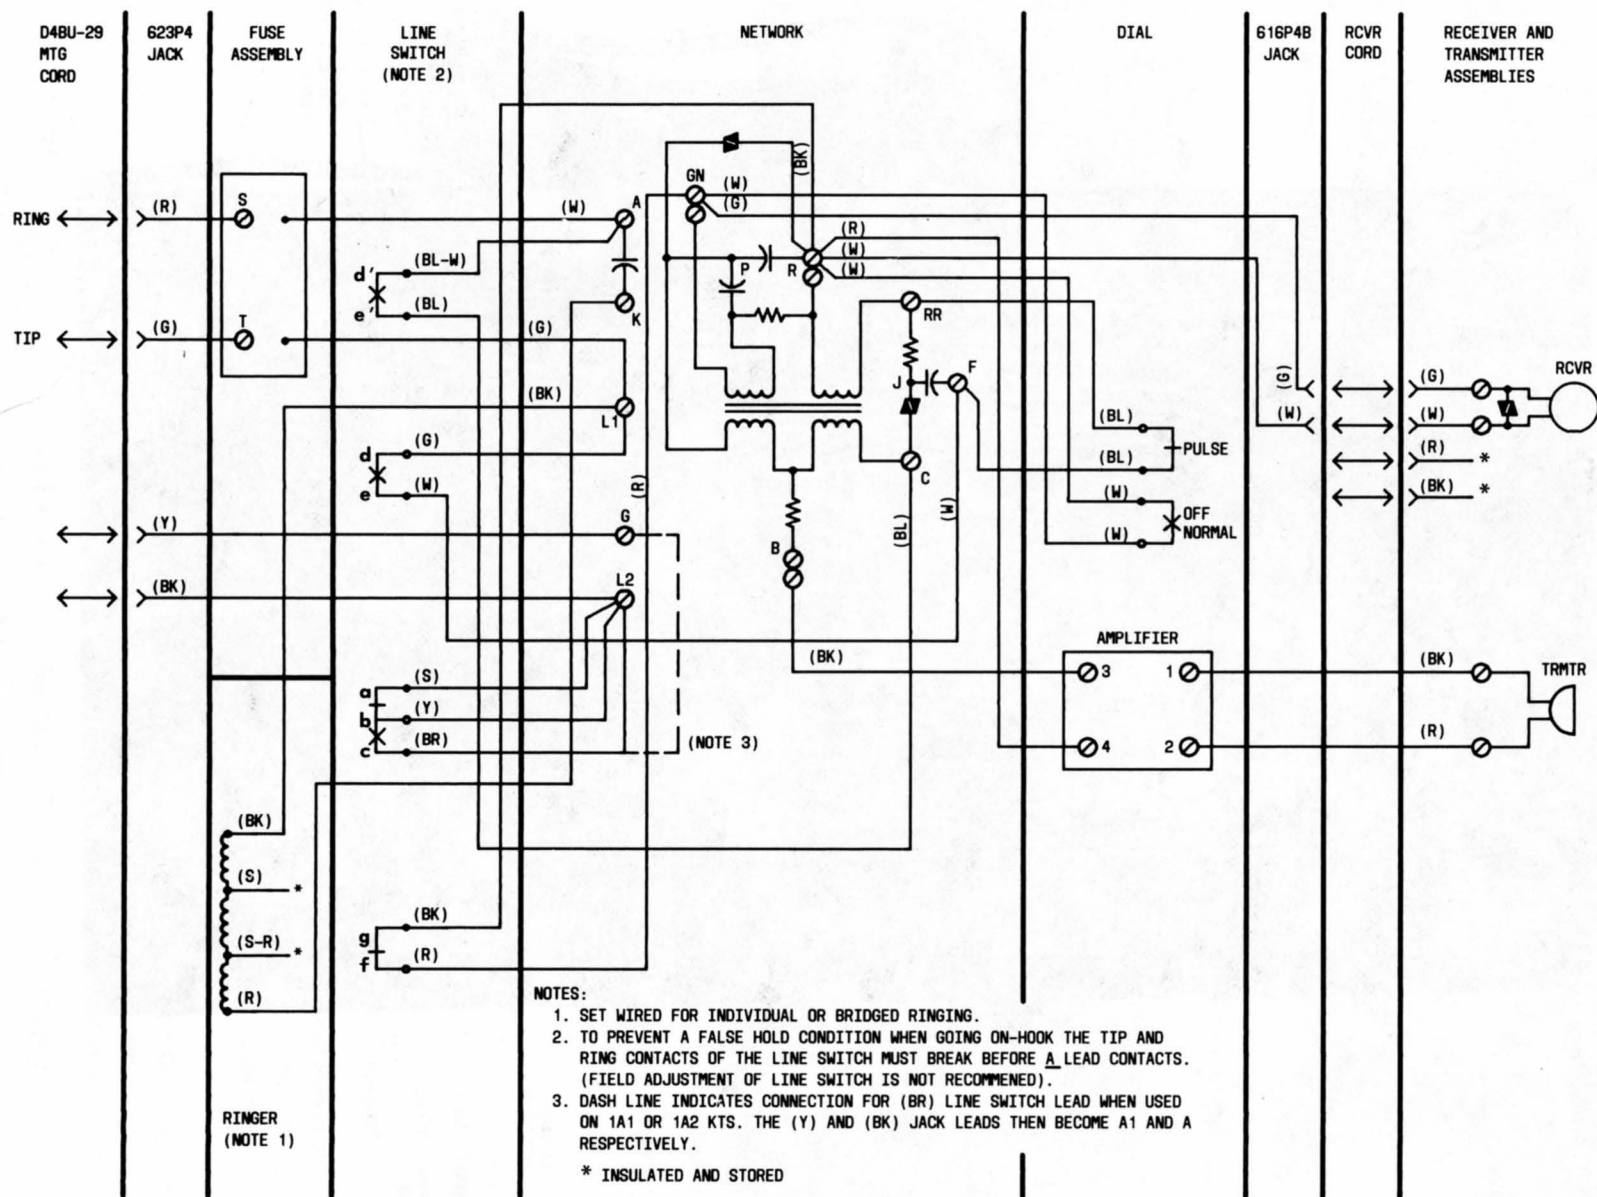


Fig. 3—CS952A1-03 Telephone Set, Connections