

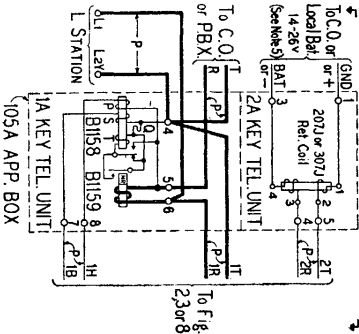


Fig. 1

- Notes:
1. Move red-white and green-white Transfer Key Leads from 2R and 2T to 1R and 1T.
 2. Terminate un-used Cord Conductors on spare Comm. Block Terminals where available or tape them.
 3. Transfer red and green Cord Conductors from L1 and L2Y to 1 and 2 Terminals. Transfer red Ring and yellow Condenser Lead from Term. L1 & L2Y on Ind. Coil to Term. 1 & 2 on Term. Strip.
 4. Where there are three C Stations or two L and one C Stations, use High Imp. Ringers at all Stations.
 5. With 4 1/2 V Bat. Supply use 12A Key Tel. Unit.

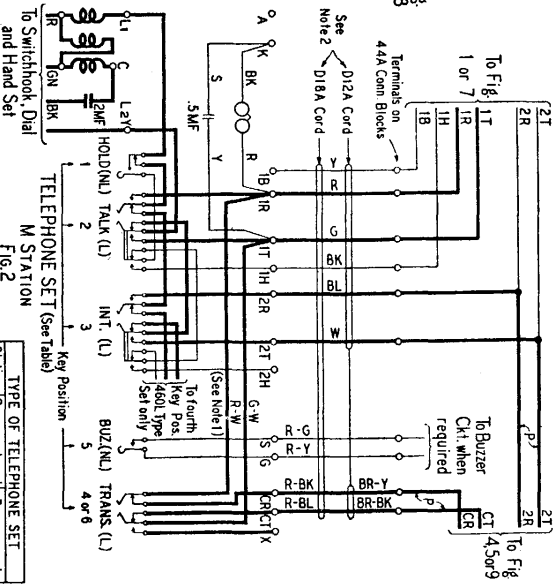


Fig. 2

TELEPHONE SET (See Table)

M STATION

Key Position

1 2 3 4 5

4 or 6

BUZ (NL) TRANS. (L)

Key Pos. 460L Type Set only

To fourth

(See Note 1)

R-W

G-W

S-G

R-BK

BR-Y

BR-BK

CR

CT 4.5 or 9

To Buzzer Ckt. when required

W

BL

BK

G

R

IB

1B

1R

1T

To Fig. 1 or 7

Terminals on 44A Comm Blocks

See Note 2

D12A Cord

D18A Cord

5MF

2MF

L2Y

C

L1

GN

BK

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX

105A APP. BOX



105A APP. BOX

PLAN 102

TYPE OF TELEPHONE SET		
Station	Buzzer not used	Buzzer used
M	460G	460L
C	410A	410B



TYPE OF KEY		
Station	Buzzer not used	Buzzer used
M	6028B (FIG. 3) or 6022A (FIG. 8)	6028B (FIG. 3) or 6022A (FIG. 8)
C	6017B (FIG. 9)	6021M (FIG. 5) or 6017B (FIG. 9) and Buzzer Key

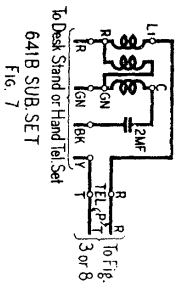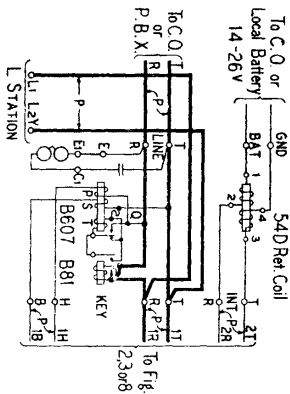

Notes:

6. Pair "B" and "H" Leads. Dead end and tape "B" Lead at Key.

7. Buzzer Key not provided on earlier type Key.

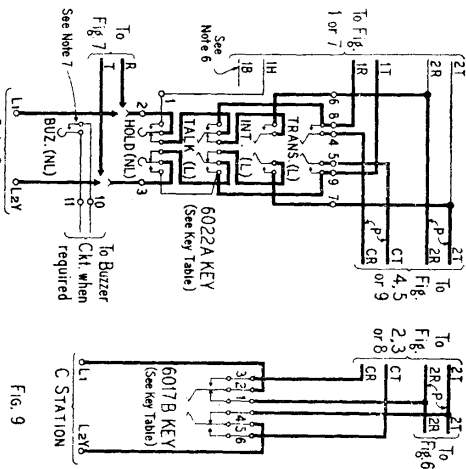


Fig. 9

PLAN 102