


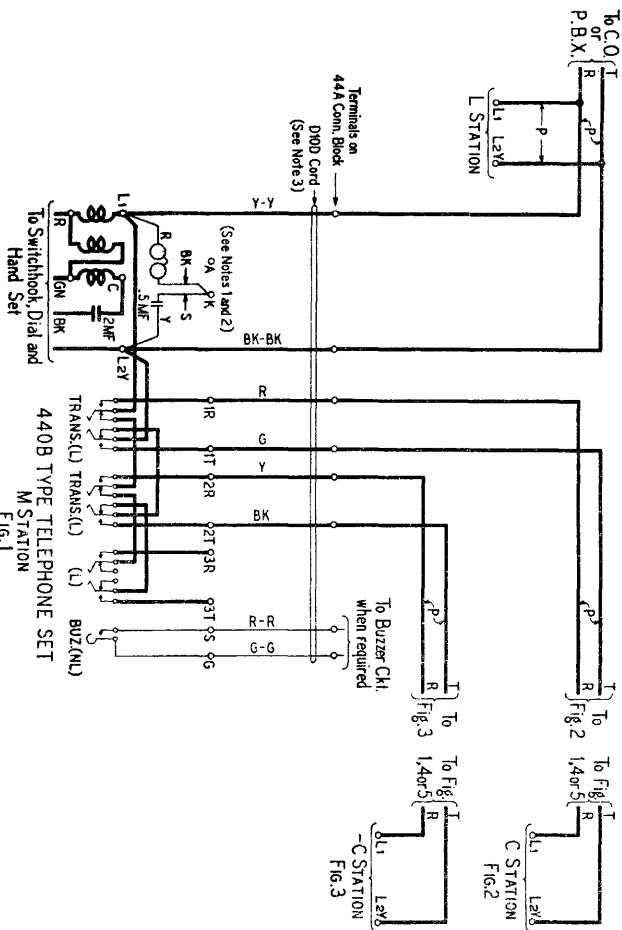


PLAN 104

Notes:


1. Move yellow-yellow and black-black Cord Conductors from Terminals A and K on Terminal Strip to Terminals L1 and L2Y on Induction Coil.
2. Transfer red Ringer and yellow Condenser Leads from Terminals 1R and 1T on Terminal Strip to Terminals L1 and L2Y on Induction Coil.
3. Terminate un-used Cord Conductors on spare Conn. Block Terminals where available, otherwise tape them.

M STATION
FIG. 4

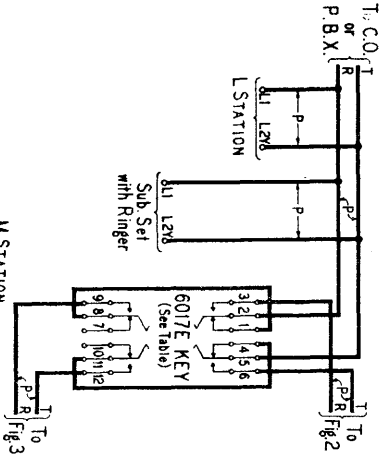

To Buzzer
Circuit (L)
BUZ.
(NL)

6021M KEY (See Table)
M STATION
FIG. 5

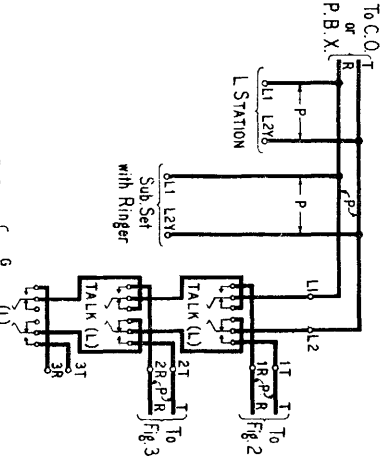

TYPE OF KEY AT M STATION	
Buzzer not used	Buzzer used
6017E (FIG. 4)	6021M (FIG. 5)