

BELL SYSTEM PRACTICES
Station Installation and Maintenance

SECTION C64.432
Issue 1, 7-15-36
AT&T Co. Prov. Std.

TELEPHONE DIRECTORIES INSTALLATION

(Reference Section for C46.102)

1. INSTALLATION

1.01 **Directory Shelves:** Use 1-3/4 inch No. 10 F.H. Bright Wood Screws with the Nos. 11 or 17 shelves on booths. For wall mounting attach shelves to wall surfaces with fasteners shown in the following table. Upper edge of shelf should be 43-1/2 inches from floor.

Surface	Fastener	
Wood or Metal Sheath on Wood	1-3/4 in. No. 10 F.H. Bright Wood Screws	
Masonry Plastered	Install suitable wooden bat- ten at least 7/8 in. thick, using attach- ing devices shown oppo- site and then attach shelves to batten with 1-3/4 in. No. 10 F. H. Bright Wood Screws.	2-1/2 in. No. 8 R.H. Blued Wood Screws in 1-1/2 in. No. 6-8 Screw An- chors.
Hollow Tile Plastered		3/16 in. by 4 in. B.H. Toggles. If solid part of tile is struck tilt drill towards hollow part or insert seasoned wood plug and use screws.
Wood Lath Plastered		2-1/2 in. No. 8 R.H. Blued Wood Screws.
Wire Lath Plastered		3-16 in. by 4 in. B.H. Toggles.

1.02 **Directory Tables:** When necessary to fasten directory tables to floors suitable iron corner braces should be used. These are attached to tables with 3/4 inch No. 8 R.H. Galvanized Wood Screws and secured to wood floors with 1-1/2 in. No. 8 R.H. Galvanized Wood Screws or to masonry

floors with 1-1/2 in. No. 8 R.H. Galvanized Wood Screws in 1-1/2 in. No. 6-8 Screw Anchors or approved equivalent.

1.03 **Directory Fasteners:** Locate fasteners on standard or special directory shelves and tables as shown in Figs. 1 and 2 and secure with 3/4 inch No. 8 R.H. Blued Wood Screws

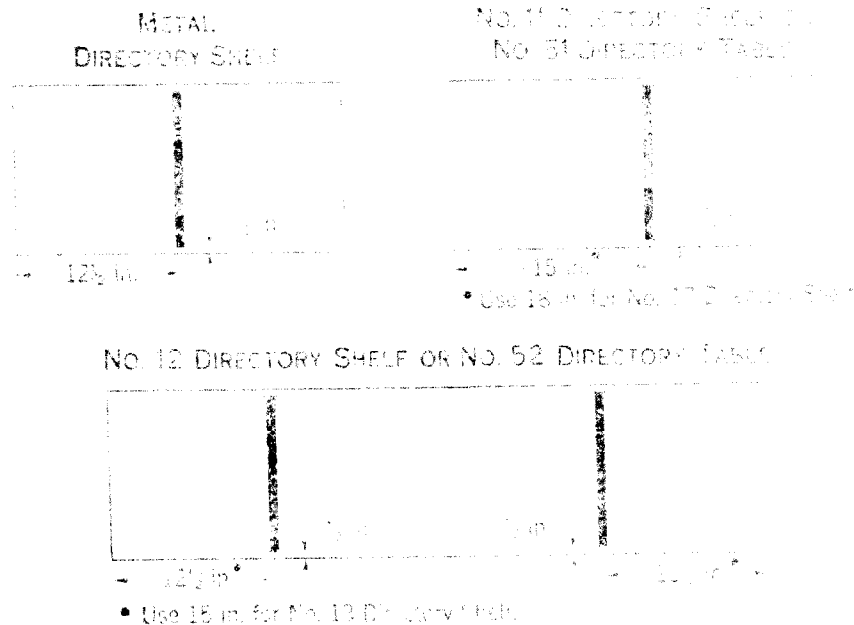


Fig. 1—Locating Directory Fasteners.


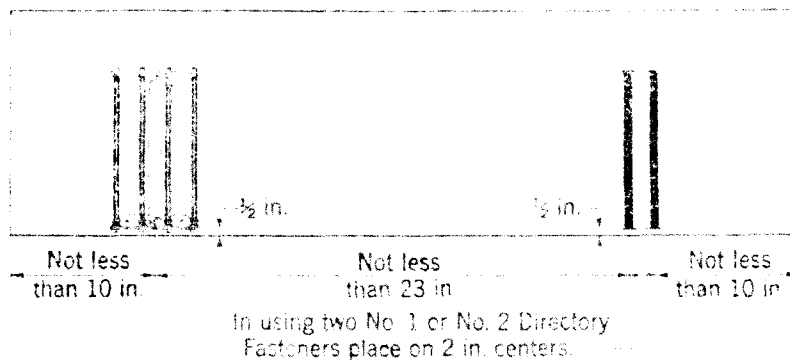


Fig. 2—Locating Fasteners on Special Shelves.

1.04 **Directory Hangers:** Fig. 3 illustrates installation of hangers on booths. The same dimensions apply for wall installations. Directory hangers should not be installed inside booths and when installed on walls should be as near the booths as practicable. Where wall surface is other than wood install a 157A backboard with fastening devices for batten listed in 1.01. Attach hangers to backboard or wood with 1 inch No. 8 R.H. Blued Wood Screws.

If only one hanger is used, it should be placed in center of panel. Use three 1 1/4 in. No. 8 R. H. Blued Wood Screws for each hanger.

5 ft. 9 1/2 in.
to floor

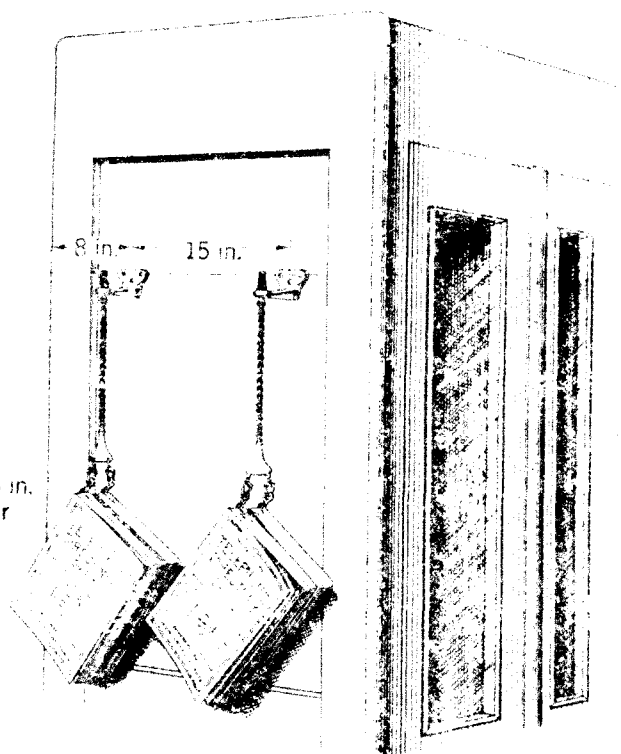

Where necessary to place two hangers on one side of booth, place as shown by dotted lines.

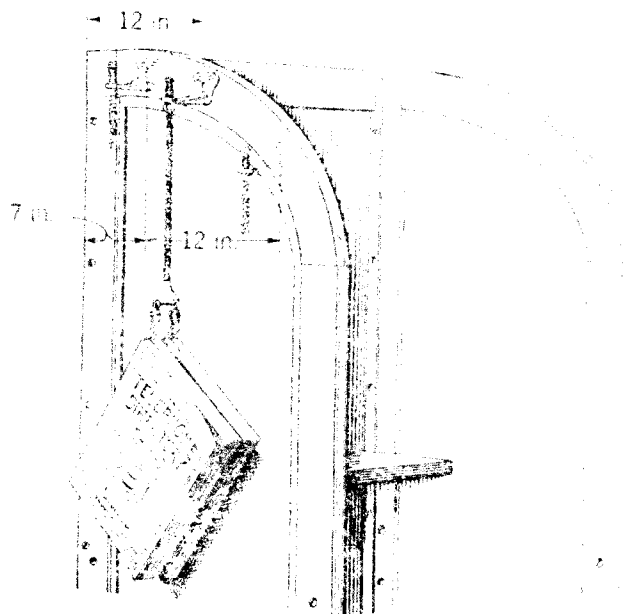


Fig. 3—Hangers on Booths.

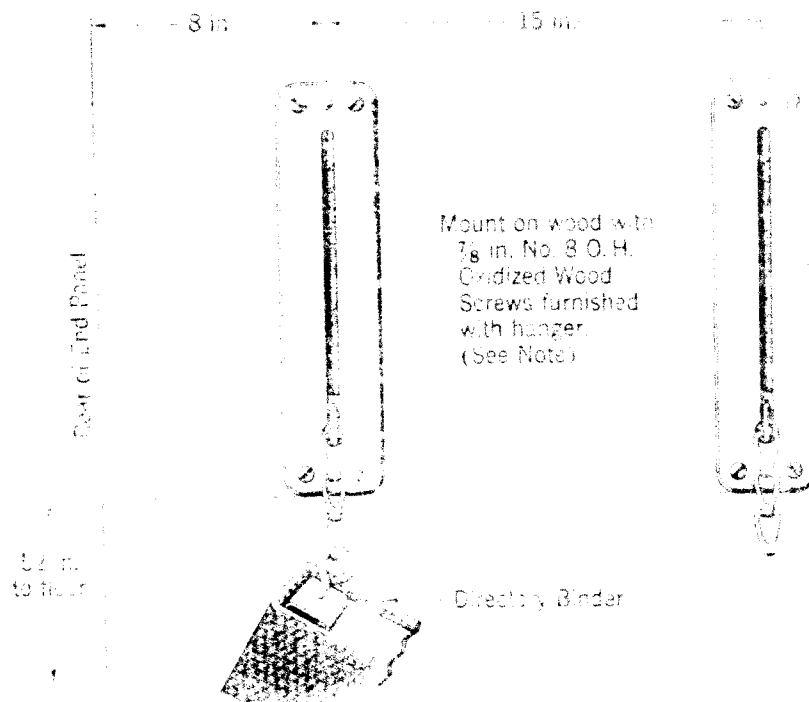


Fig. 4—KS-7302 Directory Hanger.

Note: For wall mounting where surface is other than wood a suitable backboard may be prepared locally and fastened as covered in 1.01.