
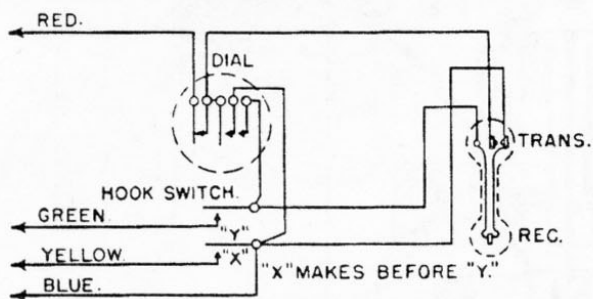


STROMBERG CARLSON CO.


WIRING DIAGRAM FOR 1244 TELEPHONE.

NOTE-
TO CONVERT FROM MANUAL TYPE TO DIAL
TYPE TELEPHONE REMOVE LEAD L-1 TO Y
AND CONNECT DIAL CABLE AS SHOWN. IF
DIAL IS WITHOUT CABLE ORDER I 35801
CABLE FROM STROMBERG CARLSON CO.

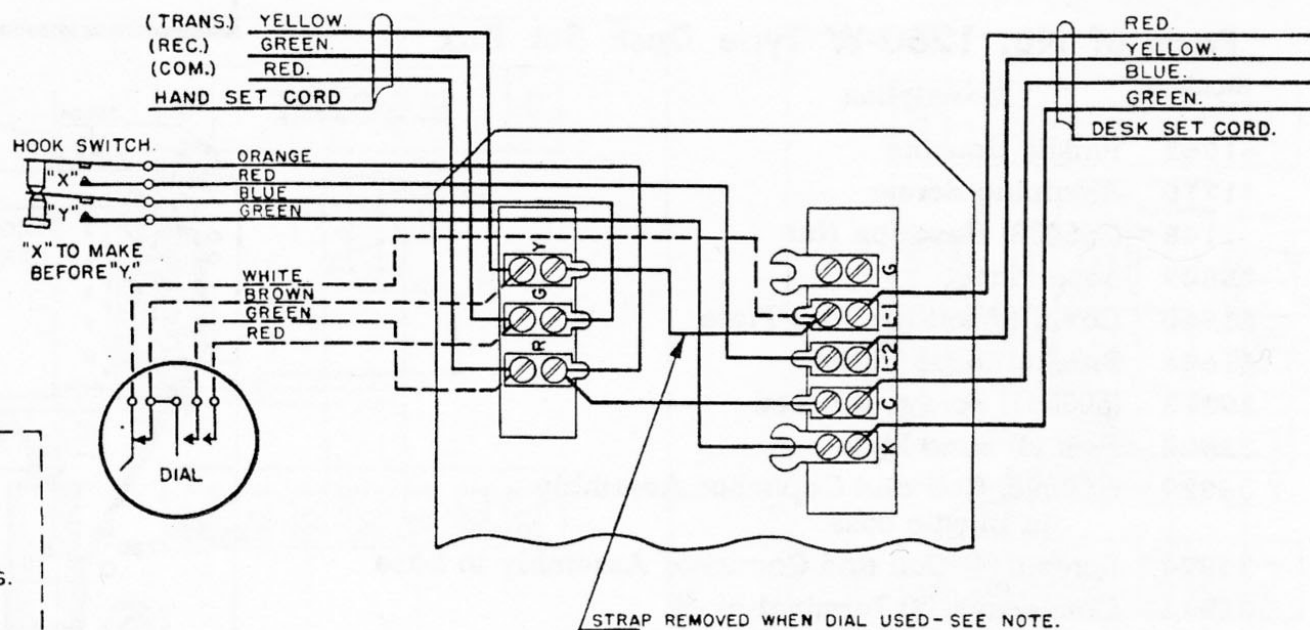


METHOD OF CONNECTING ANTI-SIDETONE TYPE DESK SET BOXES.

NO. 1156-A DESK SET BOX.

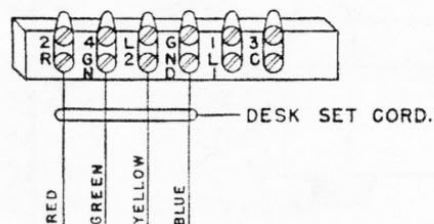

NO S. 1156-A, 1167-A, 1209, 1217-A
1218-A DESK SET BOXES.

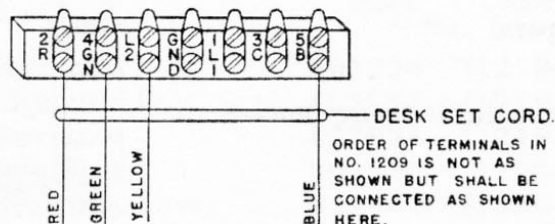

ORDER OF TERMINALS IN
NO. 1209 IS NOT AS
SHOWN BUT SHALL BE
CONNECTED AS SHOWN
HERE.

NO. 1230 DESK SET BOX.

