

TELEPHONE SETS — 302, G, COMMON BATTERY — CONNECTIONS

SECTION 502-400-401CA
Issue C, November, 1964
Bell Canada
Standard

HAND SET
F1, F4, OR G

DIAL
6A, 5M (302)
6H, 5M (5302)


SWITCH
ASSEMBLY

INDUCTION
COIL
101A

CAPACITOR
195A

RINGER
BIAL OR BIA

MOUNTING
CORD

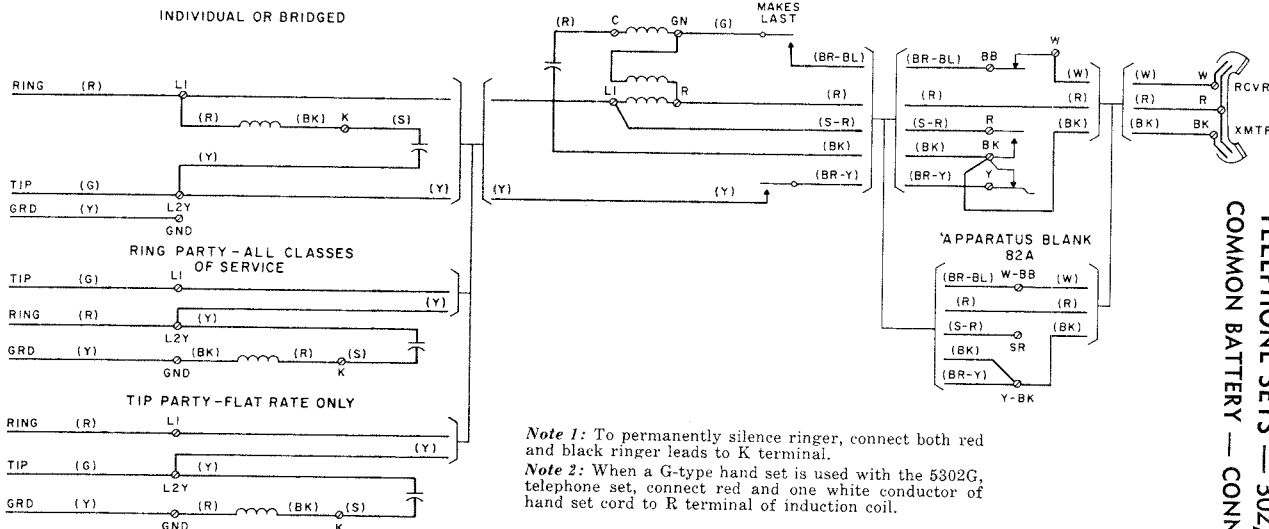

Note 1: To permanently silence ringer, connect both red and black ringer leads to K terminal.

Note 2: When a G-type hand set is used with the 5302G, telephone set, connect red and one white conductor of hand set cord to R terminal of induction coil.

TABLE A
FILTER (OPTIONAL)

Type Filter		Filter Leads	Filter Lead Termination
302G	5302G		
61P or 61L	61S	BK	BK of Dial
		Y	Y of Dial
		R	Filter bracket terminal. Also, disconnect BR-Y lead from Y of dial and reconnect to filter bracket terminal.

TABLE B
LINE AND RINGER CONNECTIONS

Wire or Lead		Individual or Bridged	Ring Party All Classes of Service	Tip Party Flat Rate
Mounting Cord in Set	R	L1	L2Y	L1
	G	L2Y	L1	L2Y
	Y	Gnd	Gnd	Gnd
Ringer Leads	R	L1	K	Gnd
	BK	K	Gnd	K
Mounting Cord at Connecting Block	R	R	R	R
	G	G	G	G
	Y	Y	Y	Y
Line Wire at Connecting Block	Ring	R	R	R
	Tip	G	G	G
	Grd	Y	Y	Y

Fig. 1—302 G, Telephone Sets