


TELEPHONE SETS — 532B,
(AMPLIFIER SETS FOR IMPAIRED HEARING) — COMMON BATTERY — CONNECTIONS

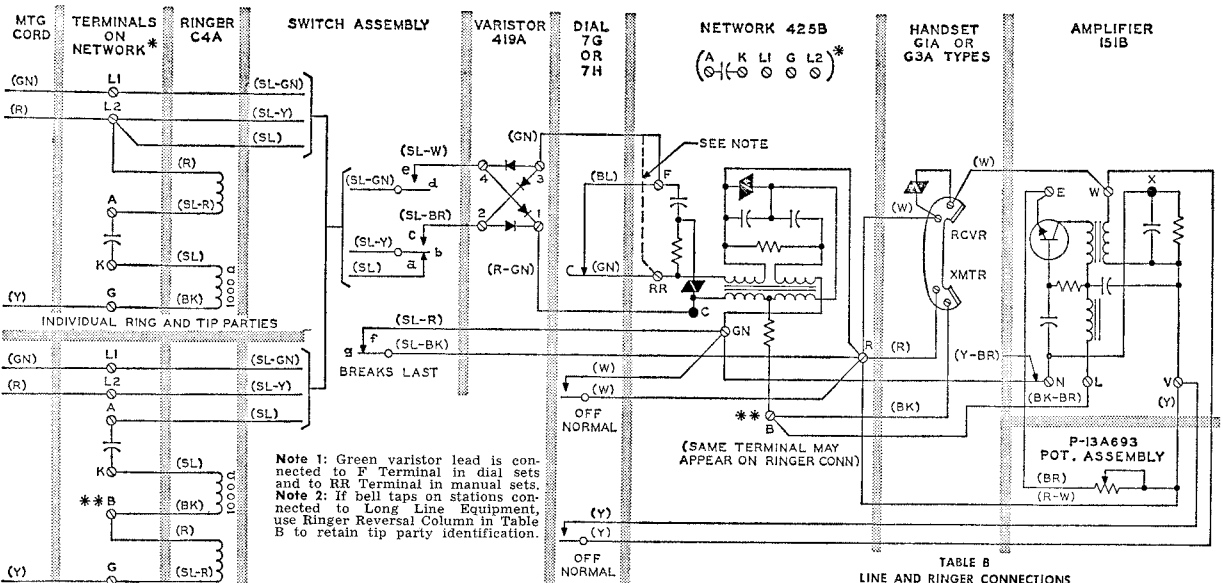

Note 1: Green varistor lead is connected to F Terminal in dial sets and to RR Terminal in manual sets.
Note 2: If bell taps on stations connected to Long Line Equipment, use Ringer Reversal Column in Table B to retain tip party identification.

TABLE A
RINGER LEAD CONNECTIONS
TO SILENCE RINGER PERMANENTLY

Class of Ringing Service	Ringer Leads			
	Red	Black	Slote	Sl-Red
Tip Pty with 2650 Ω Idfy Grd	B	K	K	G
Bridged when used with 1A1 Key Tel System	L2	L2	K	A
For all classes of service except those listed above: Connect yellow mounting cord lead to same terminal as red mounting cord lead at connecting block.				

532B TELEPHONE SET

TABLE B
LINE AND RINGER CONNECTIONS

Wire or Lead		Individual or Bridged †	1A1 Key Tel Sys ‡	Party	Tip Party Identification 2650Ω		
					No Ident. Grd.	Normal Connection	Ringer Reverse (Note 2)
Mounting Cord in Set	R	L2	L2	L2	L2	L2	L2
	GN	L1	4	L1	L1	L1	L1
	Y	G	G	G	G	G	G
	BK	L1					
Ringer Leads	R	L2	L2	L2	L2	B	G
	BK	G	4	G	G	B	K
	SL	K	K	K	K	K	B
	SL-R	A	A	A	A	G	B
Switchhook Leads	SL	L2	L2	L2	L2	A	A
	SL-W	4	G	4	4	4	4
Mounting Cord at Connecting Block	R	R	R	R	G	G	G
	GN	G	G	G	R	R	R
	Y	G	Y	Y	Y	Y	Y
	BK		B				
Line Wire at Connecting Block	R	R	R	R	R	R	R
	GN	G	G	G	G	G	G
	Y	Y	Y	Y	Y	Y	Y
	BK		B				

† Not recommended for use with 1A1 key telephone system on long loops.
‡ Place 4-conductor mounting cord.



When telephone set is used with 1A1 key telephone system, switch contact **ed** must break last when handset is restored.