

## COIN COLLECTORS — POSTPAY — 182C, D

### MANUAL — COMMON BATTERY — CONNECTIONS

#### 1.00 INTRODUCTION

This section covers the combination of apparatus, circuit diagram, and connections for the 182C and D postpay types of coin collector sets when used for manual common battery service.

#### 2.00 GENERAL

2.01 These sets are of the handset type, and are so equipped that the operator may be reached without a deposit and collection is made at the operator's request.

2.02 The 182C and D type sets require a subscriber set equipped with a ringer only.



FIG. 1—182C, D MANUAL SET

TABLE A—COMBINATION OF APPARATUS—LOWER HOUSING AND BACKPLATE

Type Collector	Components				
	Handset	Handset Cord	Induction Coil	Capacitor	Varistor
182C	F1B	H3AE	101B	452C or 195C	37A

TABLE B—COMBINATION OF APPARATUS—UPPER HOUSING

Type Collector	Components			
	Apparatus Blank	Card Holder	Coin Gauge Guard	Coin Chute Assembly
182C	50C	1B	KS-8487, L2	P-338883
182D				P-338884

Note: Assembly P-338883 consists of a P-338899 chute and P-349754 gong assembly. Assembly P-338884 differs in that it is equipped with a P-338900 chute.

### 3.00 CONNECTIONS

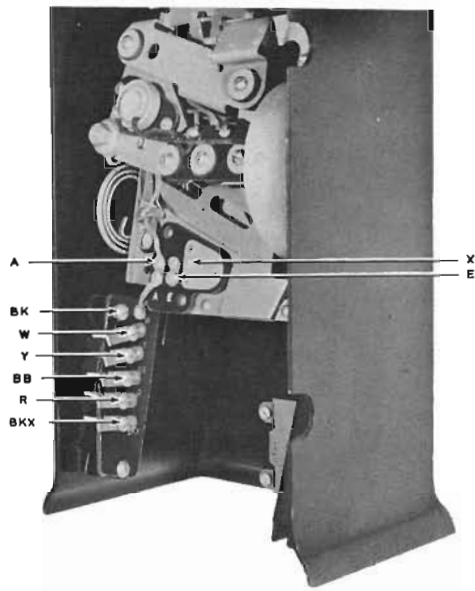


FIG. 2—182C, D UPPER HOUSING TERMINALS

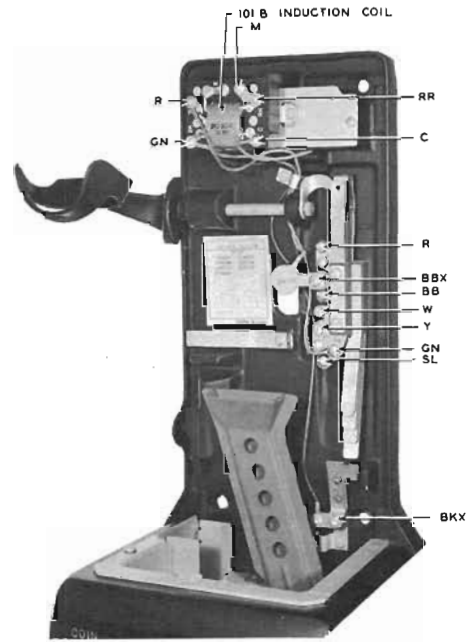


FIG. 3—182C, D LOWER HOUSING AND BACKPLATE  
TERMINALS

**3.01** Circuit diagram for connection with 531A; 534DE, DF; 584DE, DF; and 687A, ringers only, subscriber sets.

