


TELEPHONE SETS—305E, G

COMMON BATTERY — CONNECTIONS

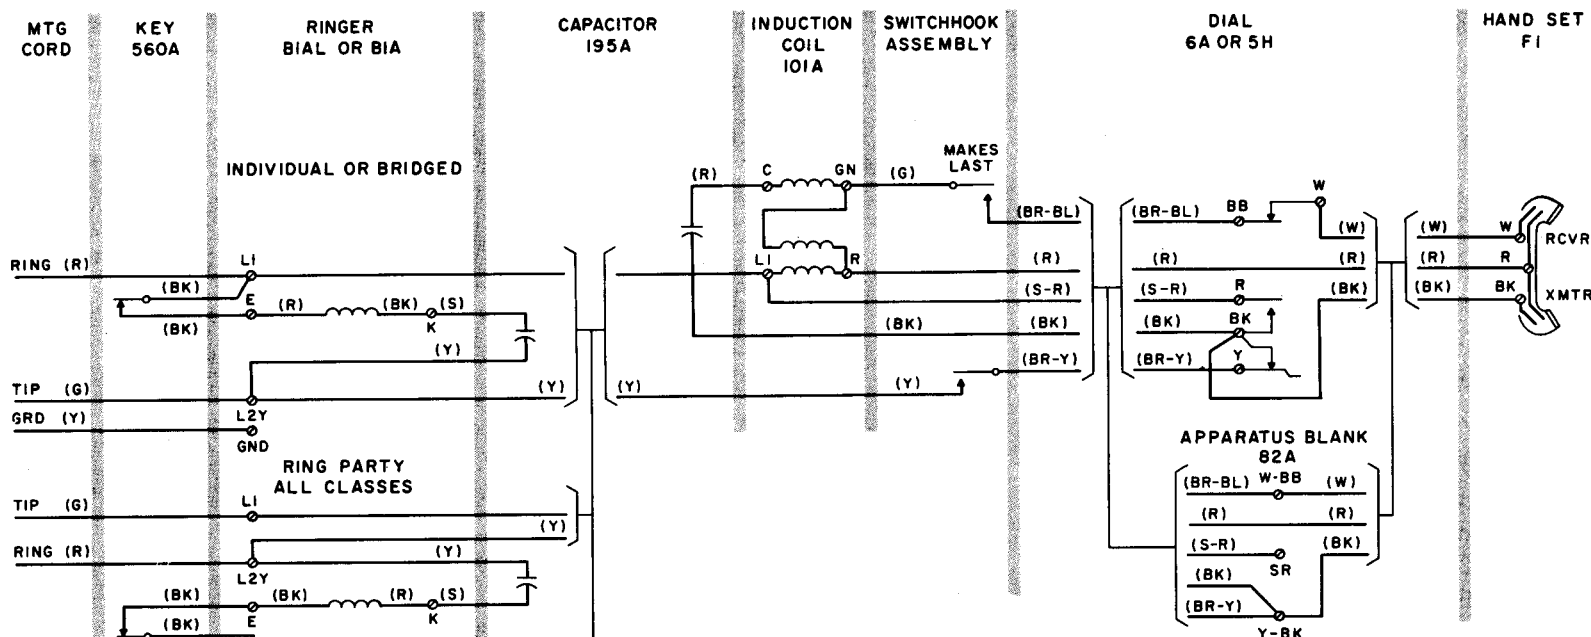

Note: To silence ringer permanently,
connect both red and black ringer
leads to K terminal.

TABLE B
LINE AND RINGER CONNECTIONS

Wire or Lead		Individual or Bridged	Ring Party, All Classes of Service	Tip Party Flat Rate
Mounting Cord in Set	R	L1	L2Y	L1
	G	L2Y	L1	L2Y
	Y	GND	GND	GND
Ringer Lead	R	E	K	E
	BK	K	E	K
Key Lead	BK	L1	GND	GND
	BK	E	E	E
Mounting Cord at Connecting Block	R	R	R	R
	G	G	G	G
	Y	Y	Y	Y
Line Wire at Connecting Block	Ring	R	R	R
	Tip	G	G	G
	Grd	Y	Y	Y

TABLE A
FILTER (Optional)

Type Filter	Filter Leads	Filter Lead Termination
61P or 61L	BK	BK of Dial
	Y	Y of Dial
	R	Filter Bracket Terminal; also, disconnect BR-Y lead from Y of dial and reconnect to filter bracket terminal.

Fig. 1 — 305E, G Telephone Sets