



SIX KEY TELEPHONE ARRANGED FOR HOLD KEY, AND 5 PICKUP KEYS WITH 3 PU KEYS CONVERTIBLE TO SIGNALLING (HPPPS₅PS₅)

METHOD OF PROVIDING STATION BUSY FEATURE TYPE 186 TELEPHONES HAVING H-P-P-PS-PS-PS KEY SERVICE

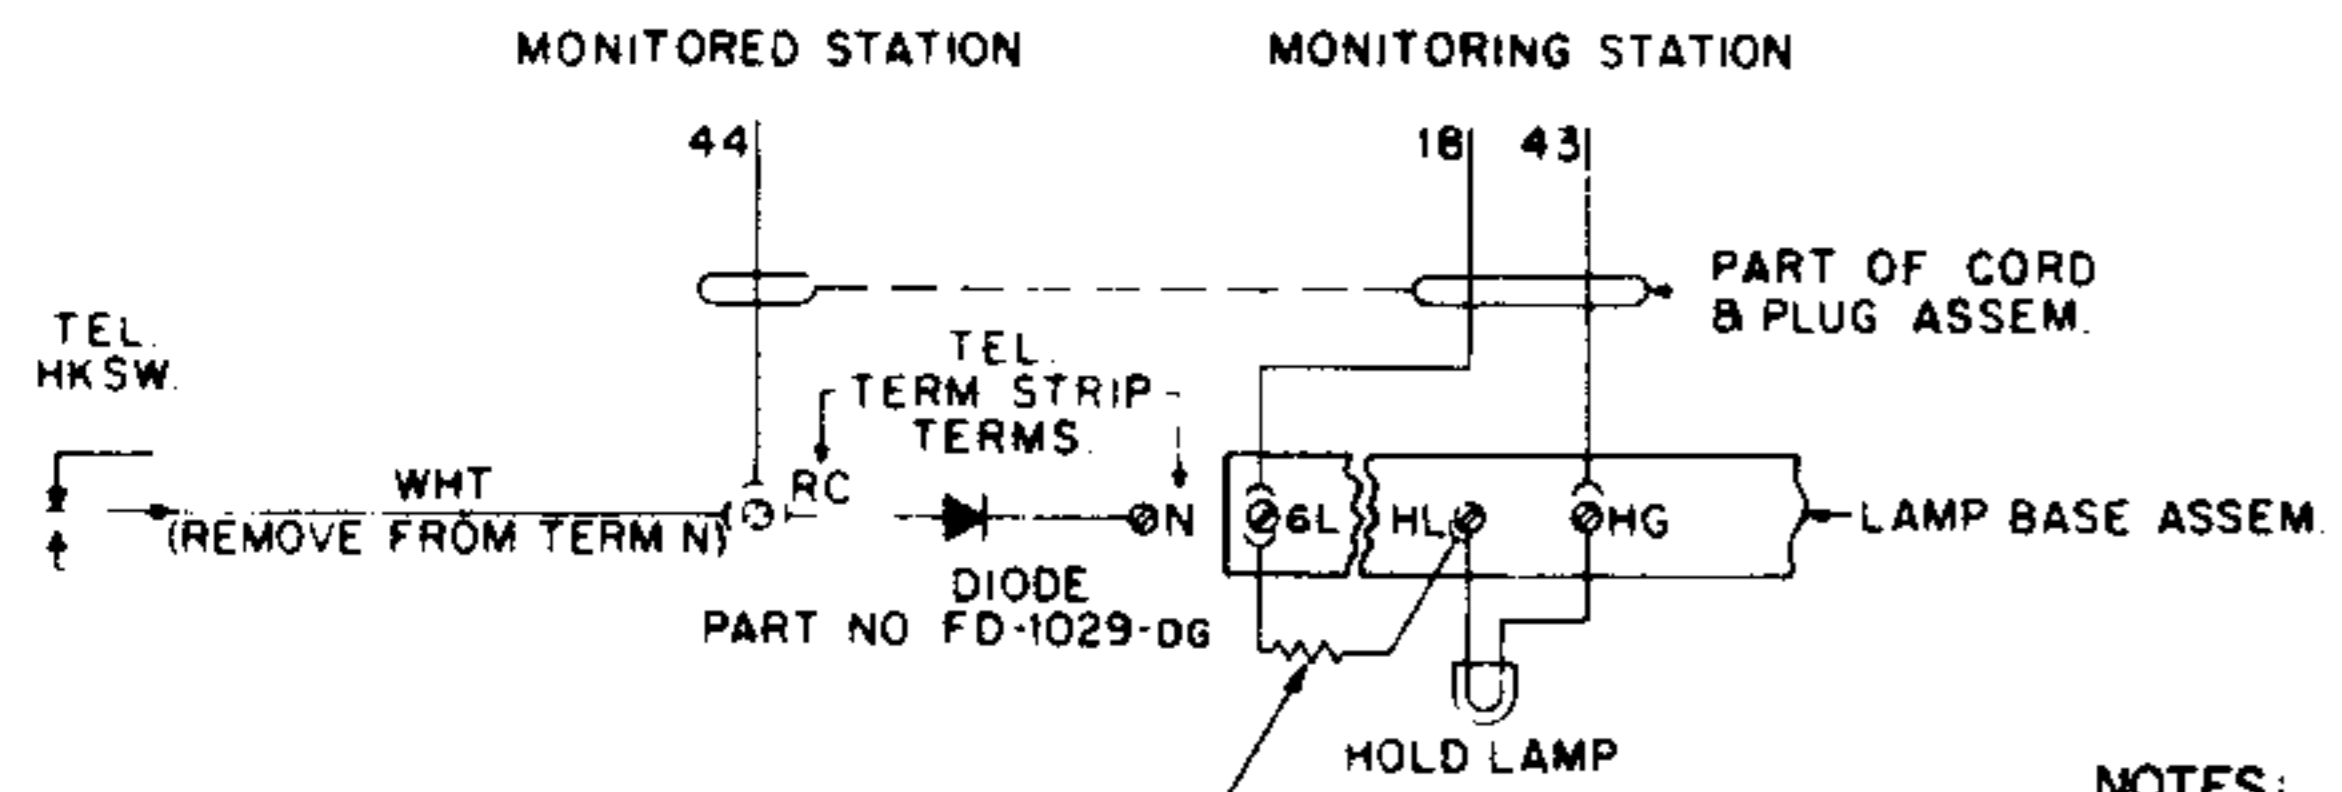

METHOD OF PROVIDING STATION BUSY FEATURE TYPE 186 TELEPHONE HAVING P-P-P-PS-PS-PS KEY SERVICE

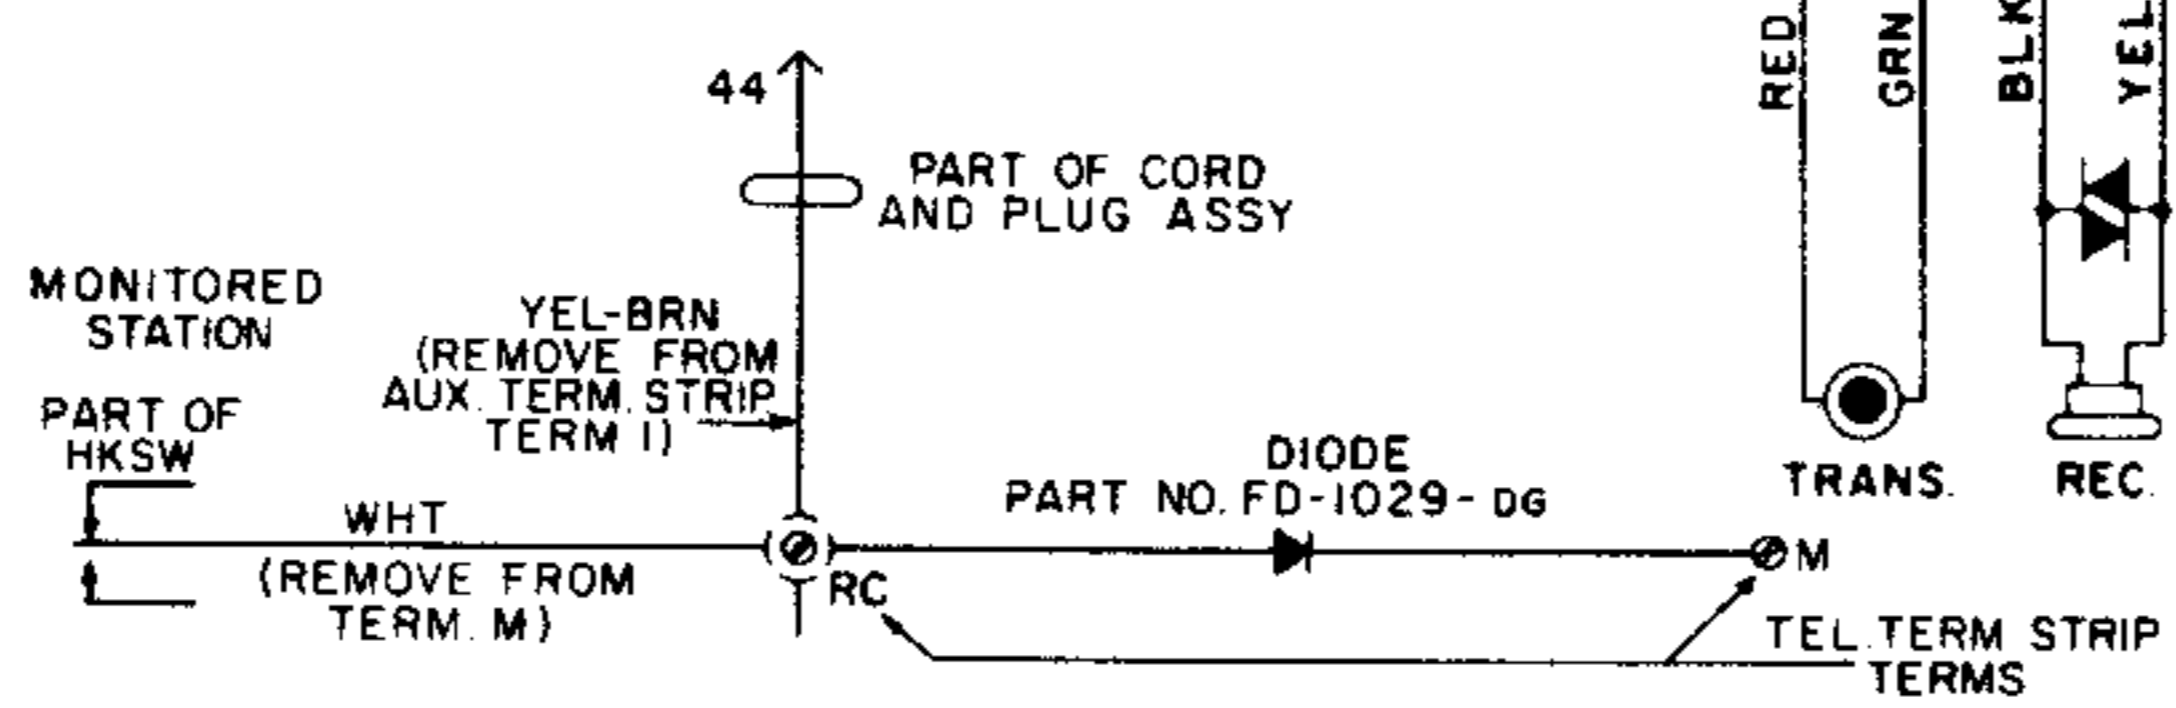

- NOTES:
- 1-"x" CONTACTS ON THE HOOK SWITCH BREAK LAST.
 - 2-"y" CONTACTS ON THE COMMON SWITCH BREAK FIRST
 - 3-USE OF SIGNAL IS LIMITED TO EITHER RINGER OR BUZZER. NO PROVISION IS MADE FOR BOTH RINGER AND BUZZER.

NOTE FOR MULTIPLE MONITORING STATIONS, PARALLEL THIS CIRCUIT.

D-284076-E9
383 ±1%
5W

SET IS WIRED TO OPERATE WITH GTE AE TYPE 10A1 AND 10A2 OR WECCO TYPE 1A1 & 1A2 SYSTEM. FOR CONVERSION TO OPERATE WITH GTE AE TYPE 10A OR WECCO TYPE 1A SYSTEM, MODIFY WIRING AS FOLLOWS:

		LEADS AT TEL TERM STRIP (INTERNAL WRG)			
		WHT	BLK	RED	BLU
CHANGE					
FROM TERM	N	R	M	N	
TO TERM	1B	N	R	M	

PICK UP TO SIGNALLING CONVERSION- CONVERT KEYS FROM LOCKING TO NON-LOCKING AND MODIFY WIRING AS FOLLOWS:

NO. OF P. U. KEYS	NO. OF SIG. KEYS	NO. OF COM. SIG. INTERCOM. LINES	KEY LEADS			
			ORN	BRN	YEL	GRN
5	-	-	M	M	M	X
4	1	-	M	M	M	SG
3	2	-	M	M	SG	X
2	3	-	M	X	5H	SG
4	1	2	M	X	5H	SG
4	1	3	X	X	5H	SG

Wiring Diagram, Type 186 Telephone Set for Touch Calling Service.