

TELEPHONE SETS — 1500S

CONNECTIONS


I. GENERAL

1.01 This section covers connections for the 1500S telephone set.

1.02 It is reissued to show color changes on switchhook.

TABLE A
LINE AND RINGER CONNECTIONS
(Changes Made in Telephone Set for Party Line Service)

Lead				Bridged	Ring Party	Tip Party	Tip Party With Ident Grd	
							1000 ohms	2650 ohms
Mtg Cord Connections at Tel Set	Line	Tip	G	8	8	7	7	7
		Ring	R	7	7	8	8	8
	Speakerphone Control	A or G1	BR-Y	4	4	4	B	B
		A1 Grd	Y	3	3	3	3	3
		AG	BR-R	4	4	4	4	4
		R1	BR-G	7	7	8	8	8
		T1	BK	5	5	5	5	5
		IR	BR-BK	6	6	6	6	6
		IT	W	9	9	9	9	9
		LK	BL	2	2	2	2	2
Ringer Connections			BK	8	3	3	3	B
			S	K	K	K	B	K
			S-R	A	A	A	B	3
			R	7	1	1	K	B
Dial Lead			G	8	8	G	G	G
Switchhook Leads			S	C	C	G	G	G
			S-Y	7	7	7	7	7
			S-BR	1	1	1	A	A
Strap							8 to C	8 to C

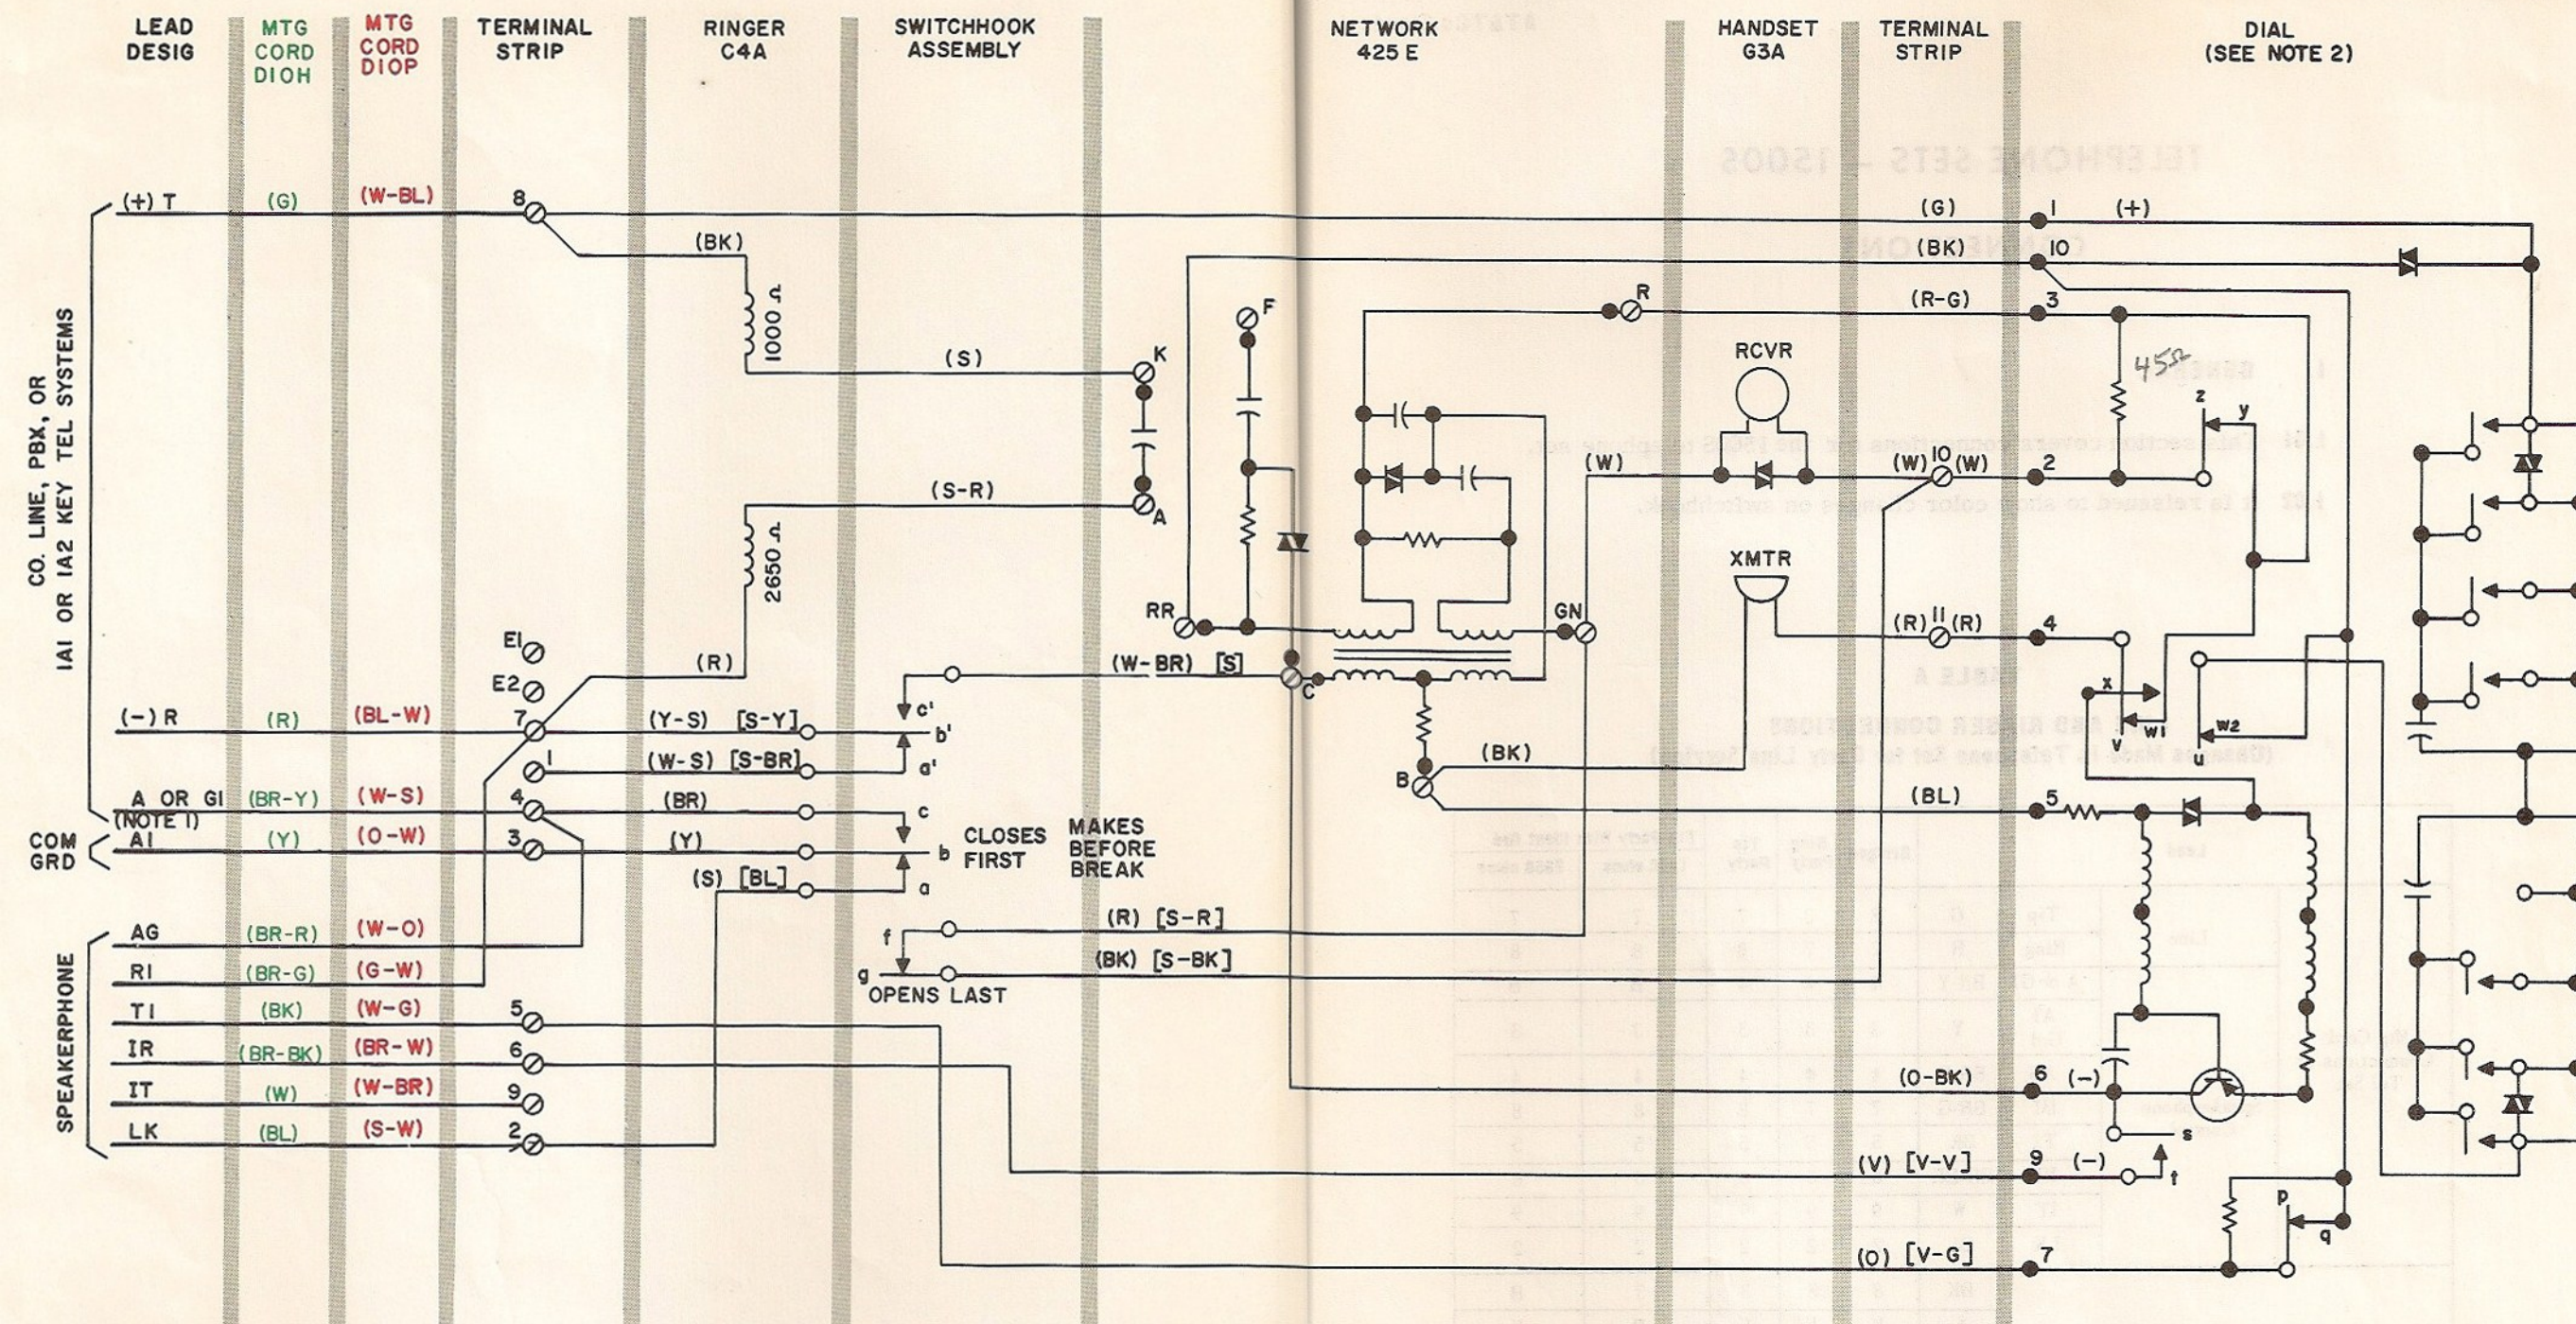

NOTE 1: FOR TIP PARTY IDENTIFICATION (SPEAKERPHONE), TRANSFER (BR-Y) (W-S) LEAD FROM TERMINAL 4 TO TERMINAL B OF NETWORK.

NOTE 2: THE 1500S TELEPHONE SET IS EQUIPPED WITH A 25B3 DIAL.

RED INDICATES EVEN COUNT COLOR CODE

GREEN INDICATES MD COLOR CODE

() INDICATES CURRENT COLOR CODE

[] INDICATES MD COLOR CODE

Fig. 1 - 1500S Telephone Set, Wired for Speakerphone