

SUBSCRIBER SETS—634A,BA,C, 684A,BA,C
COMMON BATTERY — INDUCTION COIL TYPE — USED WITH
HAND TELEPHONE SETS — CONNECTIONS

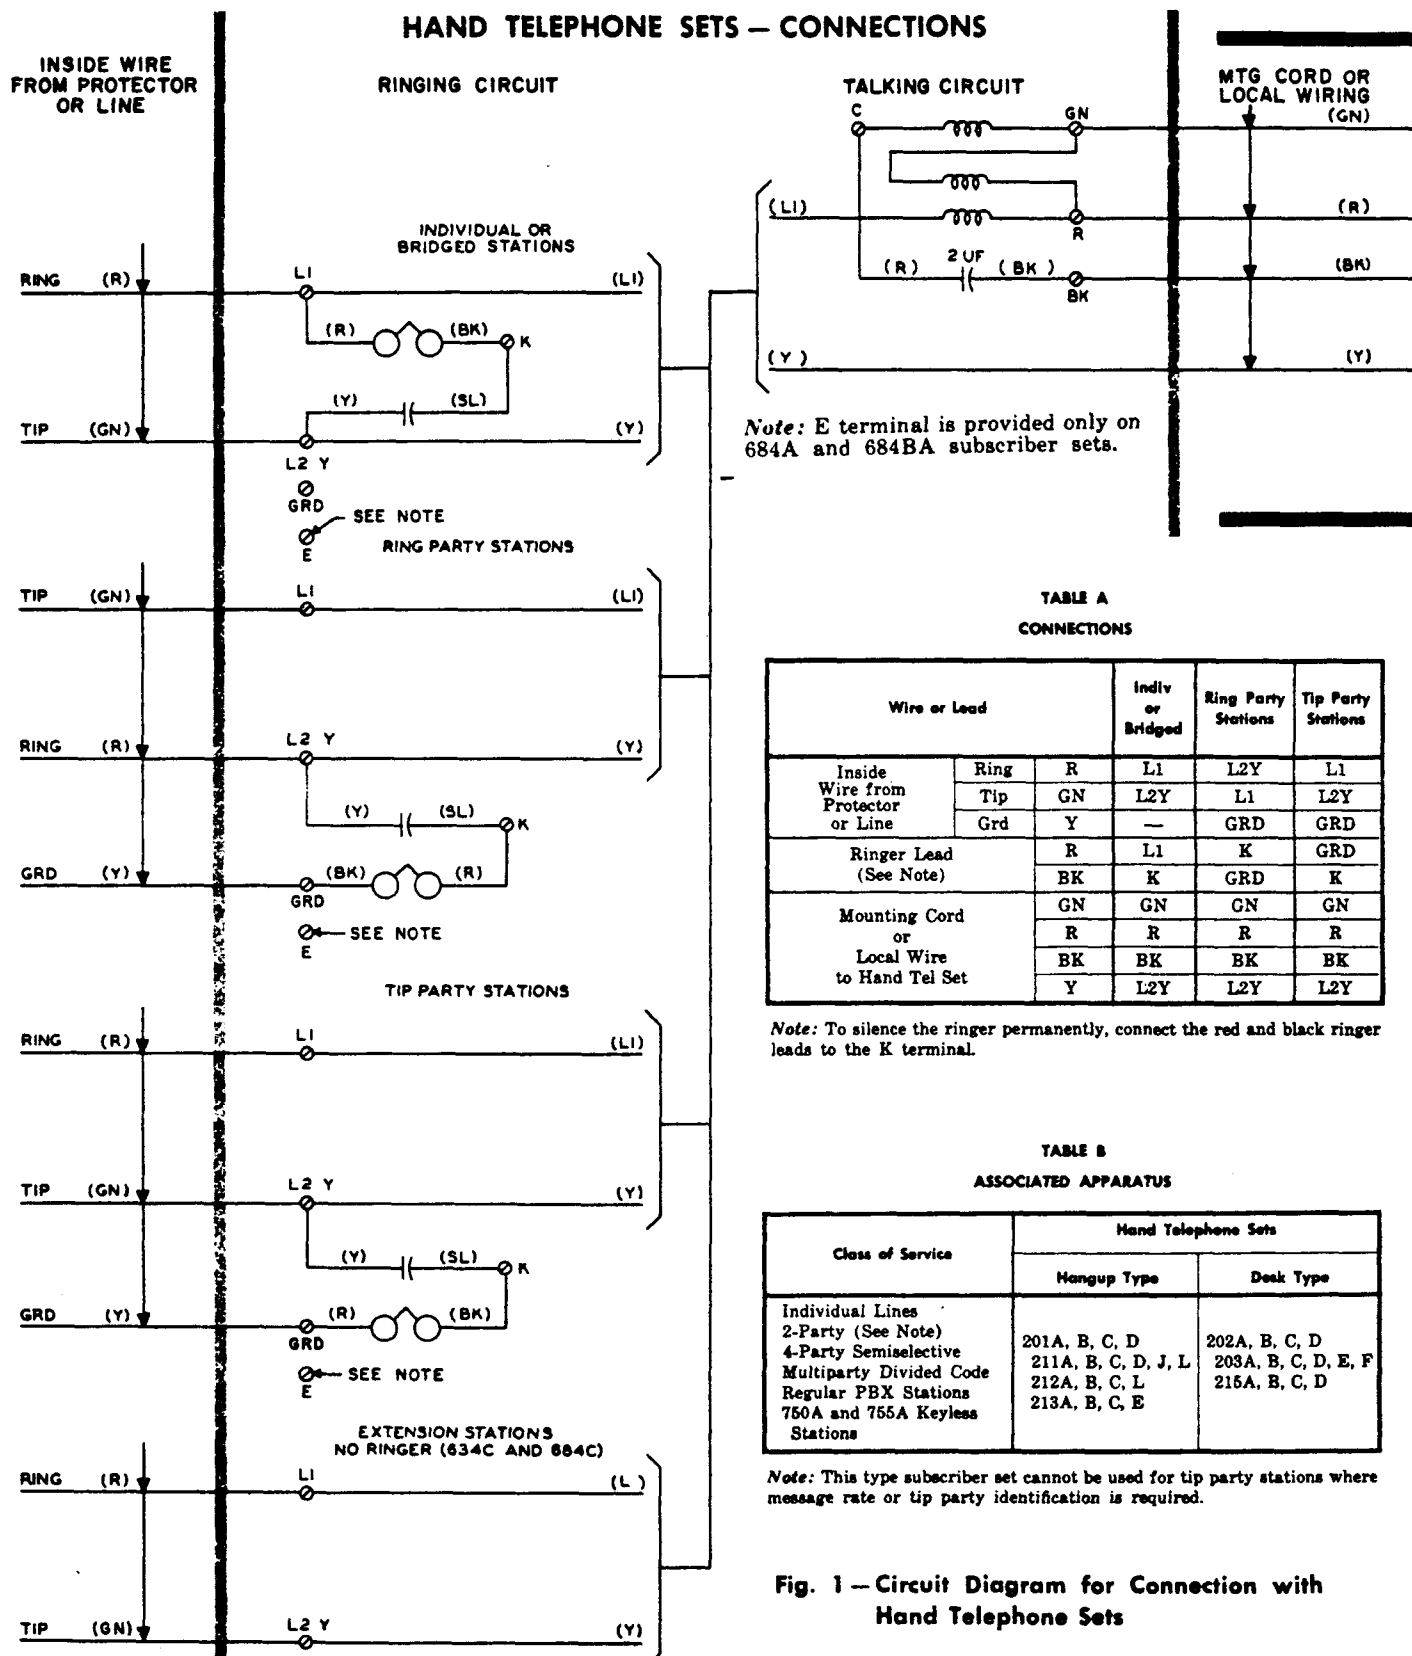


TABLE A
CONNECTIONS

Wire or Lead		Indiv or Bridged	Ring Party Stations	Tip Party Stations
Inside Wire from Protector or Line	Ring	R	L1	L1
	Tip	GN	L2Y	L2Y
	Grd	Y	GRD	GRD
Ringer Lead (See Note)		R	L1	K
		BK	K	GRD
Mounting Cord or Local Wire to Hand Tel Set		GN	GN	GN
		R	R	R
		BK	BK	BK
		Y	L2Y	L2Y

Note: To silence the ringer permanently, connect the red and black ringer leads to the K terminal.

TABLE B
ASSOCIATED APPARATUS

Class of Service	Hand Telephone Sets	
	Hangup Type	Desk Type
Individual Lines		
2-Party (See Note)	201A, B, C, D	202A, B, C, D
4-Party Semiselective	211A, B, C, D, J, L	203A, B, C, D, E, F
Multiparty Divided Code	212A, B, C, L	215A, B, C, D
Regular PBX Stations	213A, B, C, E	
750A and 755A Keyless Stations		

Note: This type subscriber set cannot be used for tip party stations where message rate or tip party identification is required.

Fig. 1 — Circuit Diagram for Connection with Hand Telephone Sets

NOTICE

This document is either
AT&T - Proprietary, or WESTERN
ELECTRIC - Proprietary

Pursuant to Judge Greene's Order of August 5, 1963, beginning on January 1, 1964, AT&T will cease to use "Bell" and the Bell symbol, with the exceptions as set forth in that Order. Pursuant thereto, any reference to "BELL" and/or the BELL symbol in this document is hereby deleted and "expurgated".