

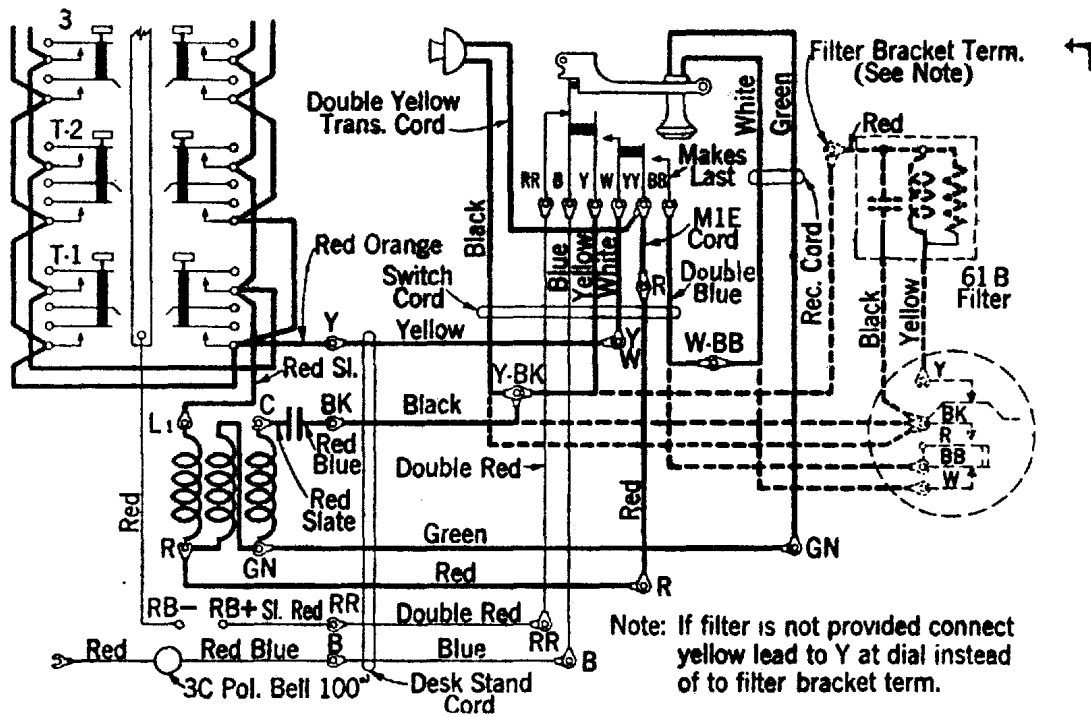


Fig. 2—151CN Desk Stand Shown With 472 or 476 Subscriber Set (Manual or Dial).

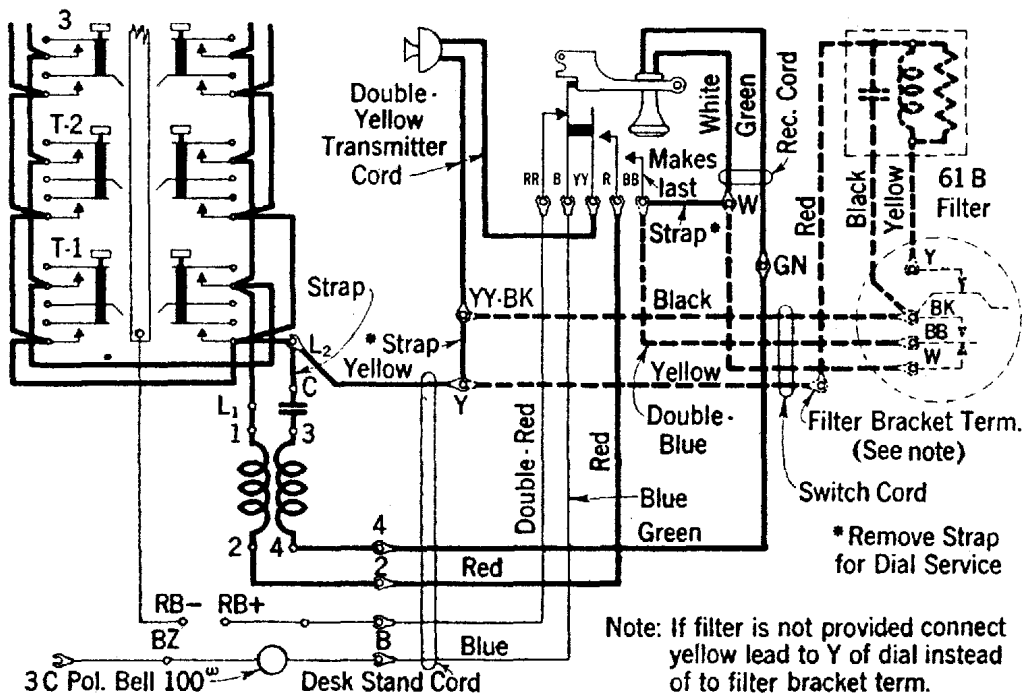



Fig. 3—50CN Desk Stand Shown With 273F Subscriber Set (Manual or Dial).



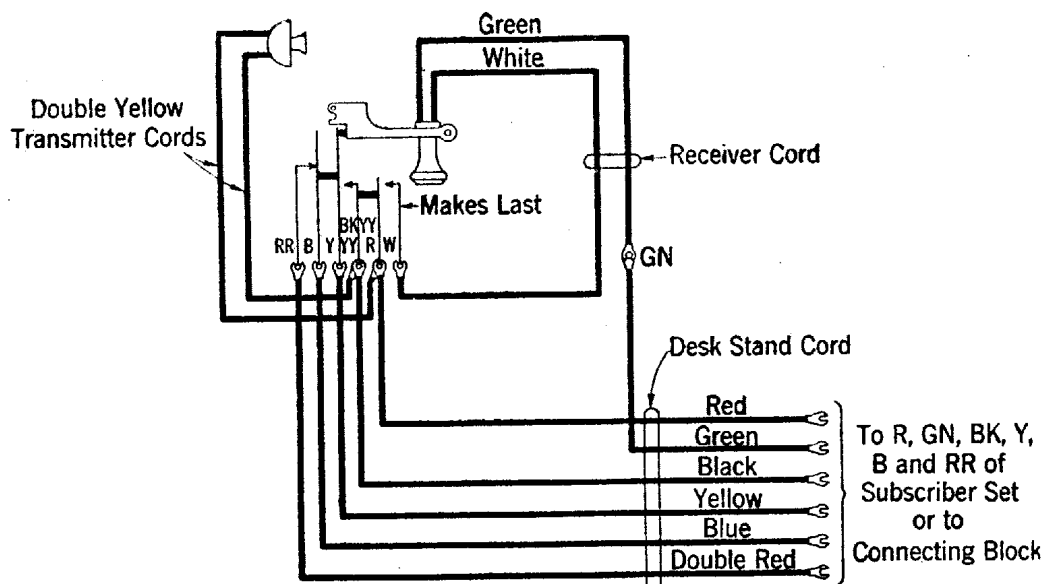


Fig. 6—140CN or 120CN Anti-Sidetone Desk Stand (Manual Only).

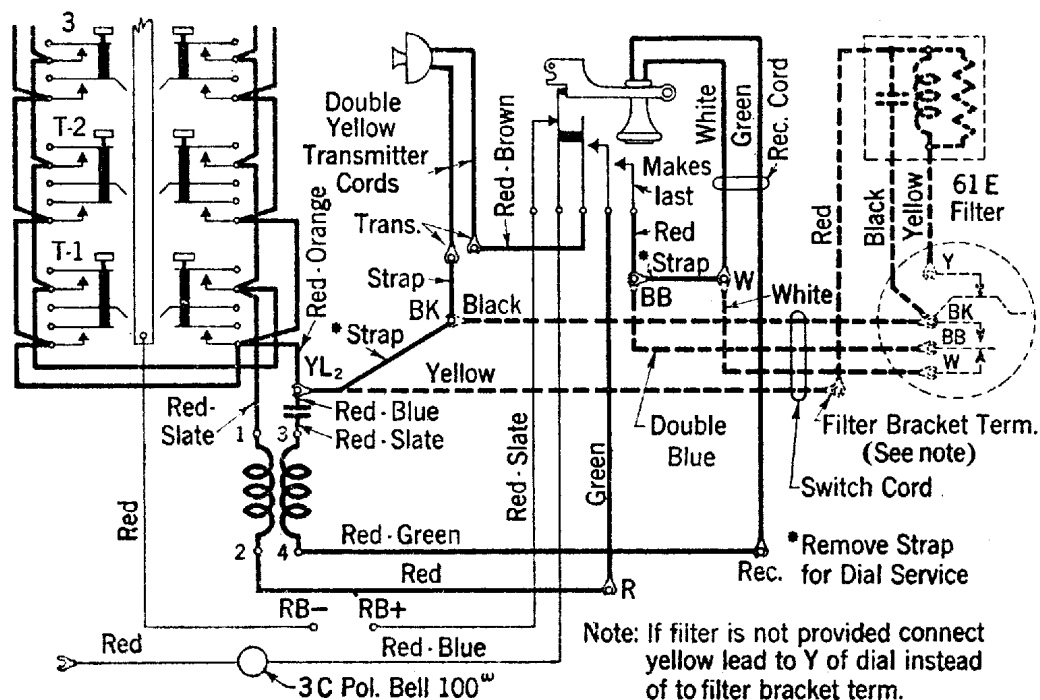


Fig. 7—374, 377 (Manual), 574 or 577 Subscriber Set (Manual or Dial). (574A Set Shown).

Note: For sidetone reduction connect yellow transmitter cord (normally connected to transmitter terminal shown strapped to BK) to terminal R. Transfer green switch-hook lead from terminal R to this transmitter terminal.

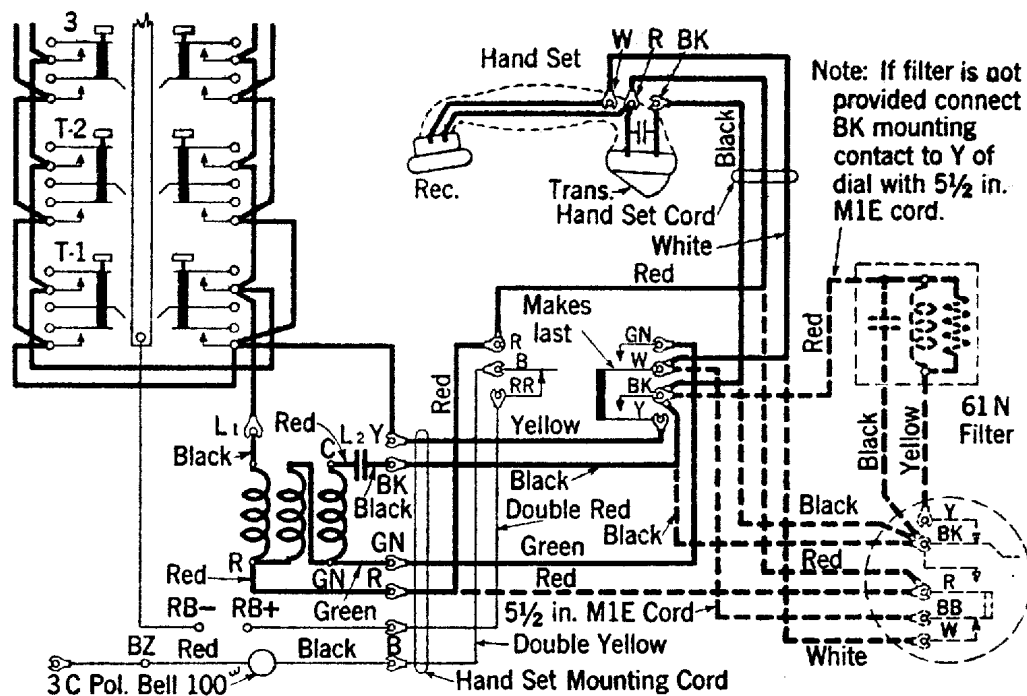


Fig. 10—204 Type Hand Telephone Set Shown With 473F Subscriber Set (Manual or Dial).

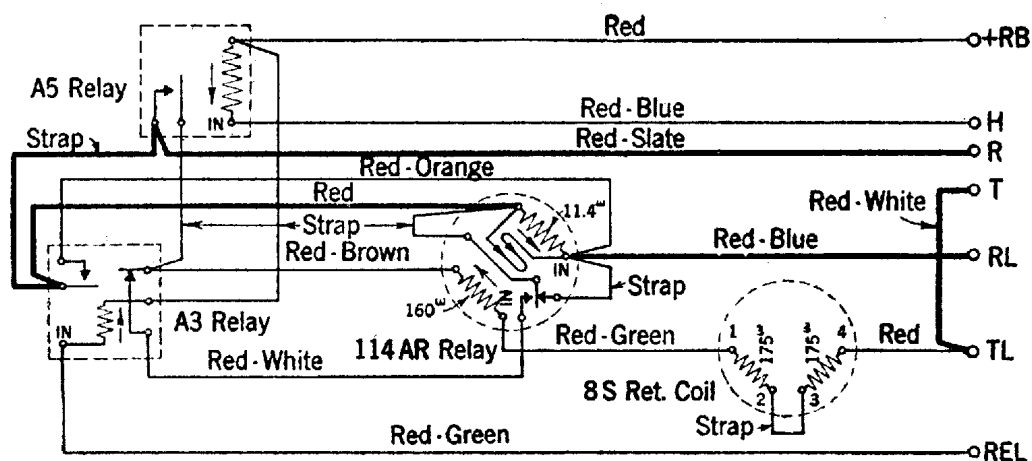


Fig. 11—380C Subscriber Set (Manual Only).

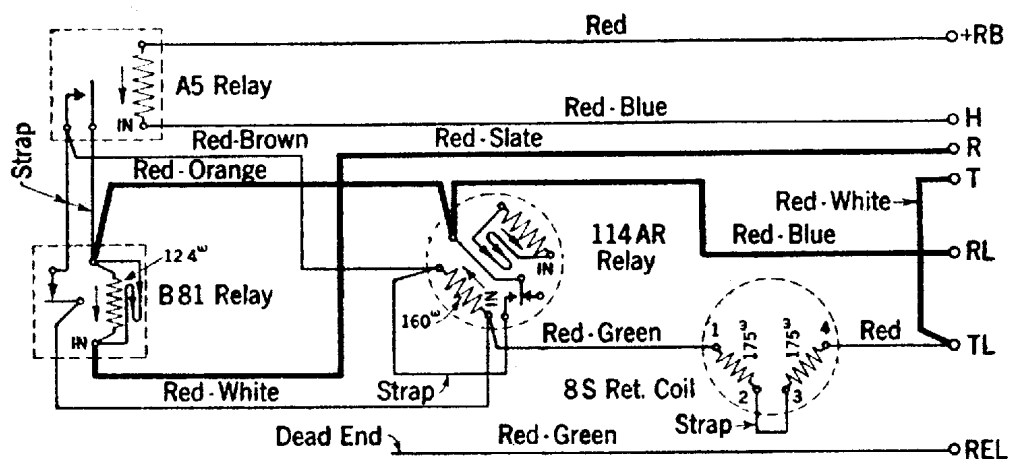


Fig. 12—380C Subscriber Set Per D-79937 (Manual or Dial).

Relay Current Flow Values

Relay	Test Current			Readjusting Current		
	Operate	Non-Operate	Release	Operate	Non-Operate	Release
A-5	.0084	—	.0026	.008	—	.0028
B-81	.0126	—	.0038	.012	—	.004
114-AR*	.0165	.013	—	.0154	.0138	—

*Through 160 ohm winding.

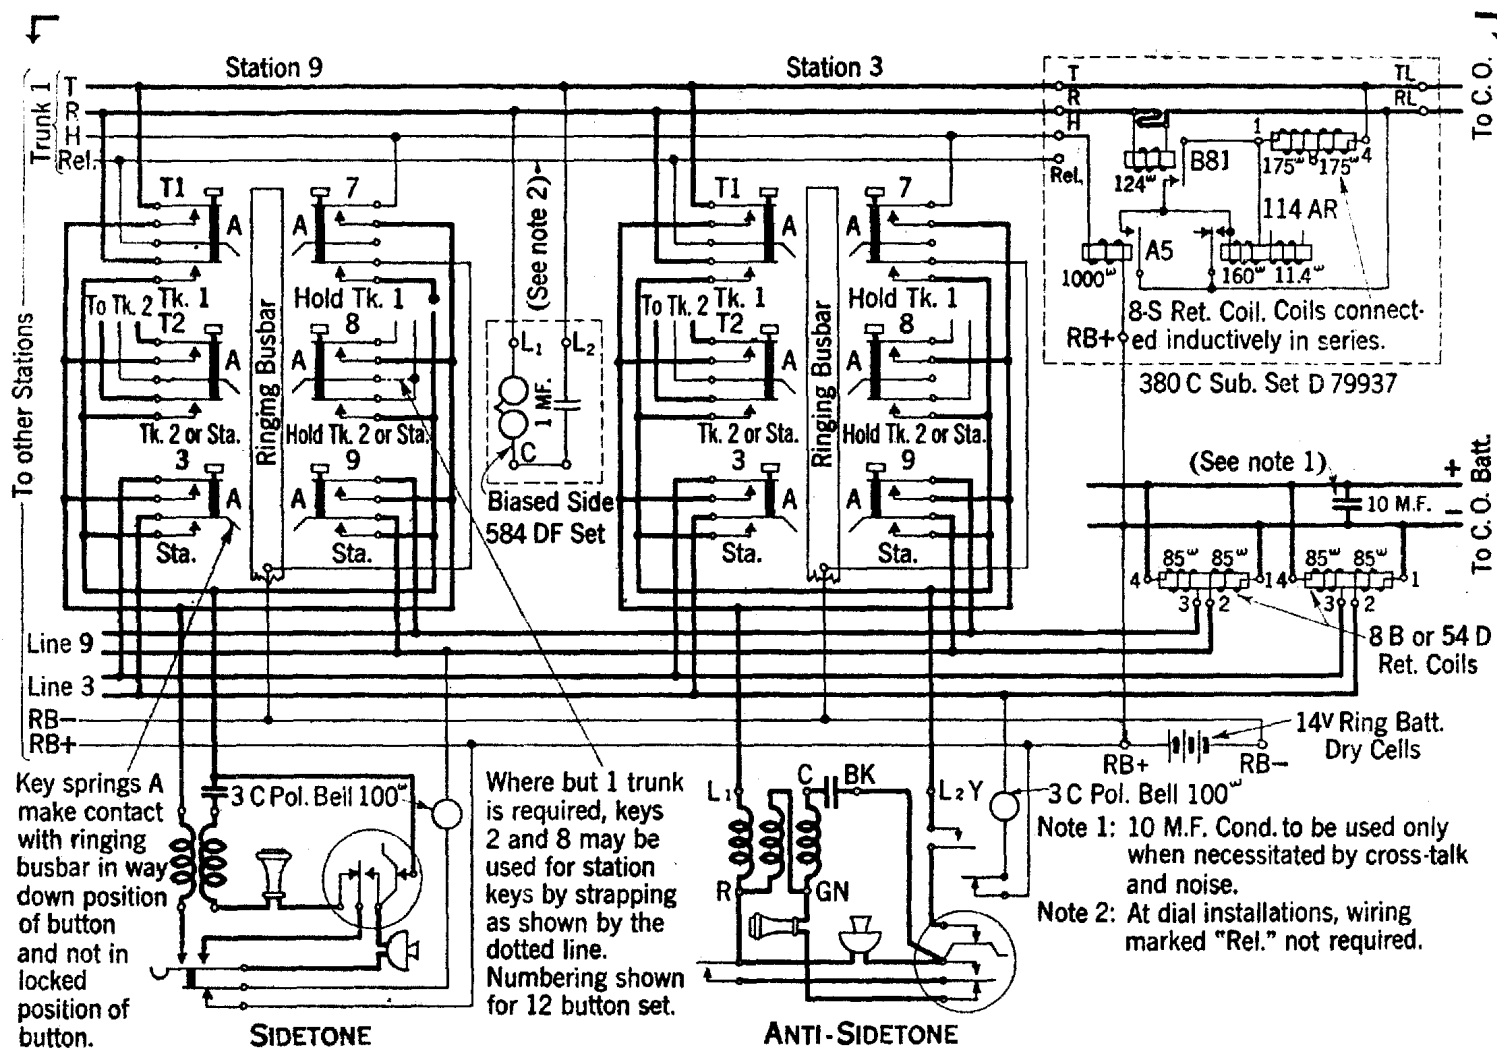


Fig. 13—No. 1 Residence System Schematic Circuit.