

SUBSCRIBER SETS—685B USED WITH COIN COLLECTORS CONNECTIONS

TABLE A
CONNECTIONS

Type of Service	Terminal Location	Subscriber Set Connections (Wire or Lead)																
		Ringer Lead				Straps Network to Terminal Block		S-36 Relay Lead				Local Wiring from Coin Collector						
		S	BK	R	S-R	S-BR	BR-Y	R	Y	BK*	S	G	R	BK	Y	G	R	Y
Prepay Manual and Dial Type Coin Collectors	Network	K	—	—	—	C	A	—	—	B	—	GN	R	B	RR	—	—	—
	Terminal Block	—	L1	L2	1	L2	1	L1	L2	—	K	—	—	—	—	L2	L1	K

Handset Types:
191, 195, 196, 197
(CN, DN,
GN, HN)
(CNS, DNS,
GNS, HNS)
(CNT, DNT,
GNT, HNT)
220, 223
(C, D, G, H)
(CT, DT,
GT, HT)
230, 233
(C, D, G, H)

* Sets may have BK in place of S.

* Sets may have BK lead from the S36 relay connected to terminal 2 of terminal block. Move strap to terminal B of 425E network.

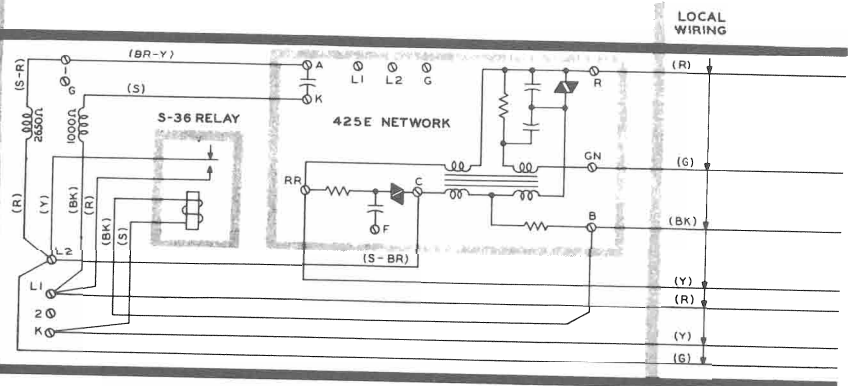


Fig. 1 - Circuit Diagram for Connection With Coin Collectors