

REPLACEMENT PARTS

for

TYPE 182 TELEPHONE
TYPE 860A TELEPHONE

EM-REP-3

AUTOMATIC ELECTRIC



Subsidiary of

GENERAL TELEPHONE & ELECTRONICS

Color Model Suffix Index

For Type 182 and
860A Telephones

Color	Housing	Handset Assembly	Retractable Cord	Line Cord	Cord & Plug Assembly	Dial Assembly*			
						1-0	ABC	SATT A	SATT B
	D-490096-	L-9050-	D-543320-	D-543322-	D-543144-	D-84942-	D-84935-	D-84936-	D-84937-
						A	A	A**	A**
Sand Beige	B	CB	B	B	B				
Classic Ivory	E	CE	E	E	E				
Turquoise	G	CG	G	G	G				
Forget-Me-Not-Blue	K	CK	K	K	K				
Camellia Pink	L	CL	L	L	L				
Gardenia White	M	CM	M	M	M				

* All dials are equipped with a plastic frost aluminum colored number plate, thus no color suffix is required when ordering.

** Designate party or spotter lobe location as second suffix.

Type 860A Telephone


Fig. No.	Description	No. Req.	Order No.
1.	Housing {Jade Green	1	D-490091-D
	{Sand Beige	1	D-490091-B
2.	• Housing Lock Screw	2	D-760865-A
3.	• Housing Mounting Bracket	1	D-731757-A
4.	• Housing Mounting Hooks	2	D-62142-A
5.	• Housing Hook and Bracket Mounting Screws (6 X 3/8" R.H.ST.S. Type 25)	4	D-760900-A
6.	Faceplate Mat Set ¹	1	D-530303-A
7.	Designation Strip Set	1	D-530304-A
8.	Faceplate, Dial	1	D-780809-A
9.	Faceplate, Keys	1	D-780810-A
10.	Handset and Retractable Cord Assembly {Jade Green	1	L-9047-C3
	{Sand Beige	1	L-9047-C1
11.	• Handset (only) {Jade Green	1	L-9047-3
	{Sand Beige	1	L-9047-1
12.	• Retractable Cord (only) {Jade Green	1	D-543302-D
	{Sand Beige	1	D-543302-B
13.	Dial and Bracket Assembly	1	D-84934-A
14.	• Dial (only)	1	D-84821-J
15.	• Dial Mounting Bracket (only)	1	D-780811-A
16.	• Dial and Bracket Assembly Mounting Screws (5-40 X 1/4" RHIMS)	3	
17.	• Dial Dust Cover	1	D-49929-A
18.	• Dial Mounting Screws (4-36 RHIM SEMS)	3	D-760730-A
19.	• Dust Cover Screw (4-36 X 9/16" RHIMS)	2	
20.	• Clamp Spring	3	D-109888-A
21.	• Clamp Spring Screw (4-40 X 1/8" RHIMS)	3	
22.	• Capacitor (.4 mf) ¹	1	D-68693-A
23.	• Capacitor Mounting Bracket ¹	1	D-731517-A
24.	• Capacitor Mounting Bracket Screw (6-32 X 1/4" RHIMS SEMS) ¹	1	D-760213-A
25.	• Capacitor 8-32 Nut ¹	1	D-7700-A
26.	Key Set With Hold Button	1	D-59306-A
27.	Key Set Without Hold Button	1	D-59307-A
28.	• Light Shield	1	D-18199-A
29.	• Receptacle Assembly	1	D-94097-A
30.	• Receptacle Mounting Screws (4-40 X 3/8" Bdg. HIMS)	2	
31.	• Spring Clip ¹	2	D-109881-A
32.	• Collar	6	D-18200-A
33.	• Push Button - Clear	5 or 6	D-59308-A
34.	• Push Button - Red	1	D-59308-B
35.	• Lamp	6	D-94085-A
36.	• Retaining Strip ¹	1	D-311618-A
37.	• Ladder Assembly (key set with hold button)	1	D-16386-A
38.	• Ladder Assembly (key set without hold button)	1	D-16387-A
39.	• Captive Screw	6	D-760862-A
40.	Key Blank	1	D-63544-A
41.	Key Frame Assembly	1	D-30227-A
42.	Yoke	1	D-67639-A
43.	• Yoke Mounting Screws (5-40 SPL. F. FIL. HIMS)	2	D-760864-A
44.	• Yoke Coil Spring	1	D-109885-A

Note:





¹Not shown.

Type 860A Telephone

Fig. No.	Description	No. Req.	Order No.
45.	Latch Lock	1	D-58080-A
46.	• Latch Lock Screw	3	D-760863-A
47.	No. 4 Shakeproof Washers	3	D-17389-A
48.	Latch Assembly	3	D-58079-A
49.	120 Conductor Cord and Plug Assembly	1	D-543308-A
50.	• Cord Clamp	1	D-543291-A
51.	• Cord Clamp Screw (4-40 X 1/4" RHIMS)	1	
52.	• Terminal Strip Mounting Bracket	1	D-731751-A
53.	Screws 6-40 X 3/16" RHIMS	7	
54.	Cradle Hook Assembly	1	D-62144-A
55.	Cradle Switch Assembly	1	D-735379-A
56.	Coil Spring	1	D-109895-A
57.	Ringer Assembly	1	D-56580-A
58.	• Ringer Mounting Screw	3	D-760866-A
59.	Base Plate Assembly	1	D-780808-A
60.	• Base Plate (only)	1	D-780807-A
61.	• Transmission Unit	1	D-38380-A
62.	• Terminal Link (terminals 2 and 3)	1	D-61079-A
63.	• Base Plate Cork Pad	1	D-67640-A
64.	Maintenance Hook	1	D-62141-A
65.	• Maintenance Hook Mounting Screw (5-40 SPL. F. FIL. HIMS)	1	D-760864-A

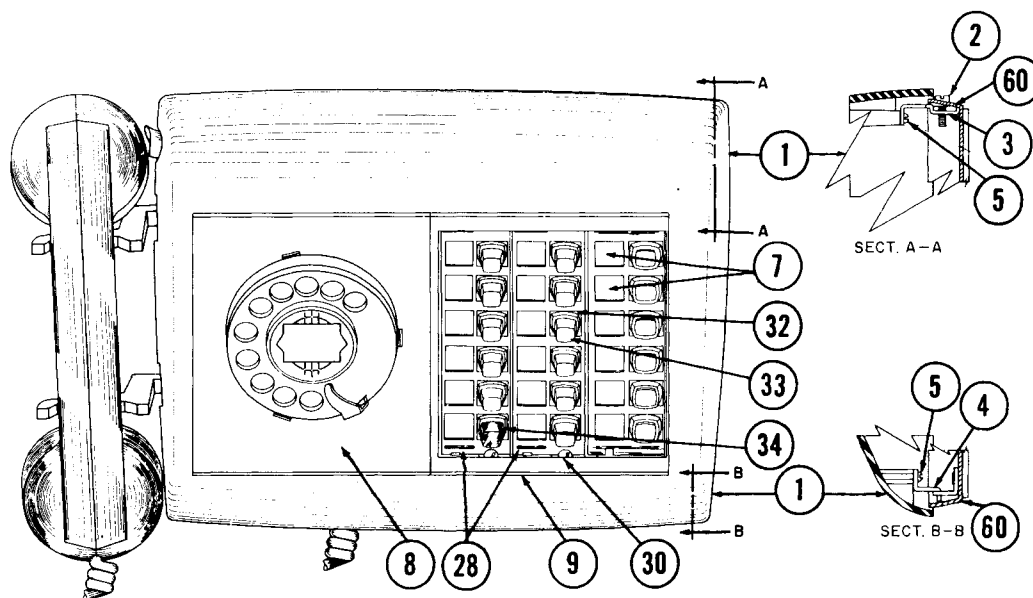

Type 860A Telephone

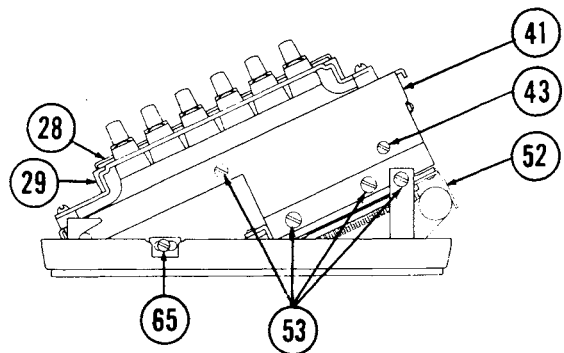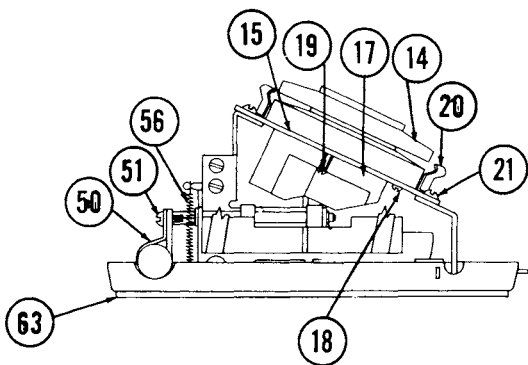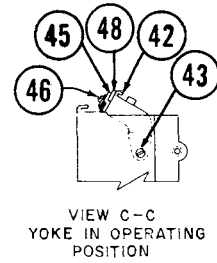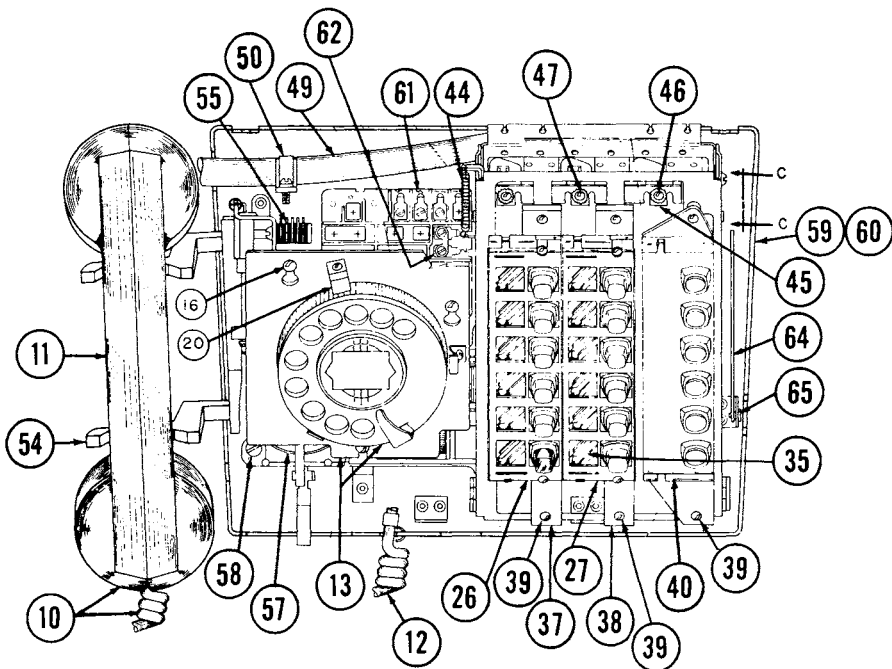



Type 182 Telephone

Fig. No.	Description	No. Req.	Order No.
1.	Housing	1	*
2.	• Housing Screw	2	D-760793-A
3.	Handset and Retractable Cord Assembly	1	*
4.	• Retractable Cord (only)	1	*
5.	Dial Assembly	1	*
6.	• Dial Mounting Bracket	1	D-731788-A
7.	• Dial Mounting Screw	3	D-760730-A
8.	• Dial Dust Cover	1	
9.	• Dust Cover Mounting Screw	2	
10.	Hookswitch Spring and Bracket Assembly	1	D-735388-A
11.	• Hookswitch Coil Spring	1	D-109914-A
12.	• Bearing Pin	1	D-37696-A
13.	Hookswitch Lever Assembly	1	D-16391-A
14.	Transmission Network Assembly	1	D-38382-A
15.	Terminal Link	1	D-61079-A
16.	Terminal Strip and Transmission Unit Screws	8	D-760919-A
17.	Induction Coil Assembly	1	D-284473-A
18.	Terminal Strip Assembly	1	D-150191-A
19.	• Terminal Strip Insulator	1	D-440323-A
20.	• Terminal Strip Insulating Shield	1	D-440378-A
21.	• Terminal Strip Cover Screw	2	D-760729-A
22.	• Terminal Strip Mounting Screw	2	D-760813-A
23.	Rheostat	1	D-284464-A
24.	Rheostat Knob	1	D-59318
25.	Base Plate	1	D-780817-A
26.	Base Plate Cushion	1	D-67644-A
27.	Circuit Label ¹	1	H-54486
28.	Line Cord	1	*
29.	Cord and Bearing Pin Holder	1	D-543321-A
30.	Line Cord Screw (4-40 1/8" Bdg. HIMS)	1	
31.	Cord and Plug Assembly	1	*
32.	Strain Relief Bushing	1	FD-1025-AJ
33.	Terminal Block (Ivory) ¹	1	D-150000-B



Notes:

¹Not shown.

*See table A.

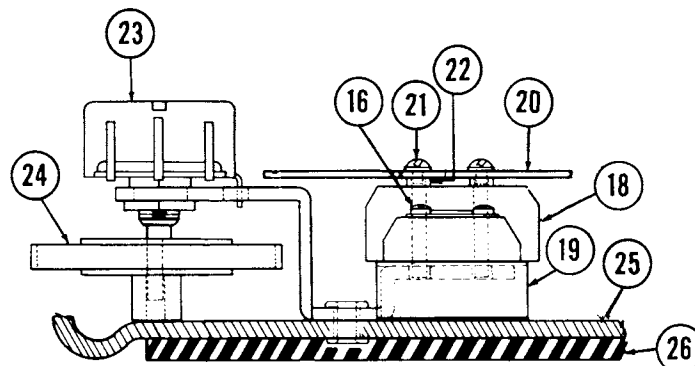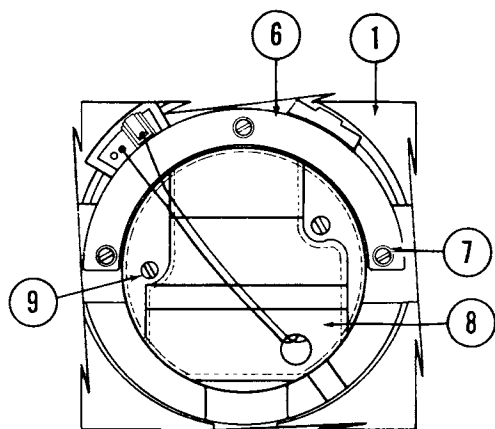

Type 182 Telephone

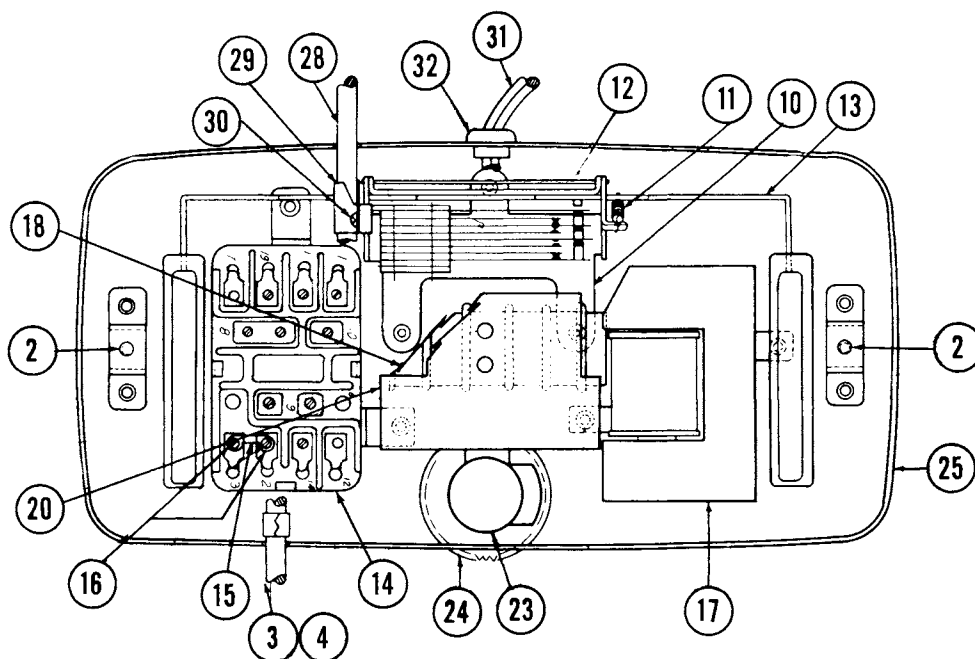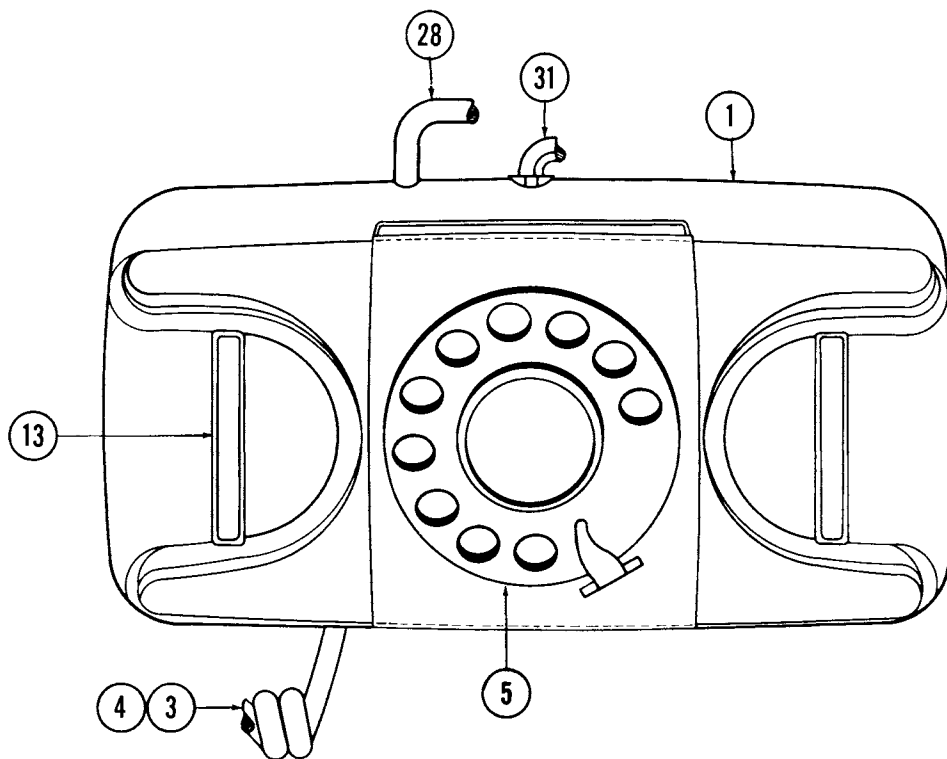



Subsidiary of

GENERAL TELEPHONE & ELECTRONICS

Makers of Telephone, Signaling, and Communication Apparatus . . . Electrical Engineers, Designers, and Consultants

Factory and General Offices: Northlake, Illinois, U.S.A.

ASSOCIATED RESEARCH AND MANUFACTURING COMPANIES

Automatic Electric Laboratories, Incorporated - - - - - Northlake, Illinois, U. S. A.
Automatic Electric (Canada) Limited - - - - - Brockville, Ontario, Canada
Automatique Electrique, S.A. - - - - - Antwerp, Belgium
Automatic Electric, S.A.T.A.P. - - - - - Milan, Italy

DISTRIBUTOR IN U.S. AND POSSESSIONS

AUTOMATIC ELECTRIC SALES CORPORATION

Northlake, Illinois, U.S.A.
Sales Offices in All Principal Cities

GENERAL EXPORT DISTRIBUTOR

AUTOMATIC ELECTRIC INTERNATIONAL

INCORPORATED
Northlake, Illinois, U.S.A.

REGIONAL DISTRIBUTING COMPANIES AND REPRESENTATIVES

ARGENTINA, URUGUAY, PARAGUAY, CHILE, AND BOLIVIA

L. Pitigliani
Caixa Postal 9212
Sao Paulo, Brazil

EUROPE, NORTH AFRICA, AND NEAR EAST

Automatic Electric International, Inc.
40 Rue Du Rhone
Geneva, Switzerland

BELGIUM AND LUXEMBOURG AND NETHERLANDS

Automatique Electrique, S. A.
22 Rue du Verger
Antwerp, Belgium

FAR EAST

T. A. Logan
c/o General Telephone & Electronics International
1103 Central Building
Hong Kong, B. C. C.

BRAZIL

Automatic Electric do Brasil, S.A.
Caixa Postal 9212
Sao Paulo, Brazil

ITALY

Automatic Electric S.A.T.A.P.
Via Bernina 12
Milan, Italy

CANADA

Automatic Electric Sales (Canada) Limited
185 Bartley Drive
Toronto 16, Ontario, Canada

MEXICO

Automatic Electric de Mexico, S.A.
Apartado Postal 20642
Mexico 6, D.F., Mexico

CENTRAL AMERICA

R. R. Sanders
Apartado 313
San Salvador, El Salvador

PERU AND ECUADOR

J. P. Maclaren
Apartado Aereo 3968
Bogota, Colombia

COLOMBIA

Automatic Electric de Colombia, S.A.
Apartado Aereo 3968
Bogota, Colombia

VENEZUELA

Automatic Electric de Venezuela, C.A.
Apartado 9361, Caracas, Venezuela

Other Sales Representatives and Agents Throughout the World