
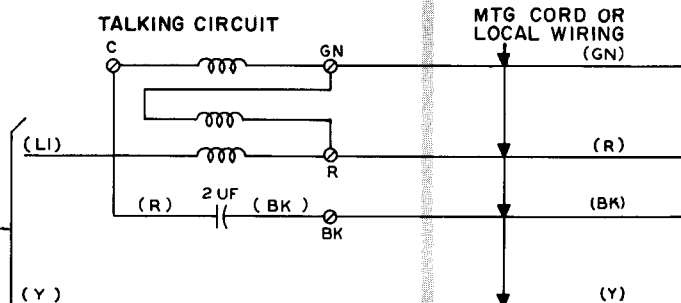


SUBSCRIBER SETS—634A,BA,C, 684A,BA,C

COMMON BATTERY — INDUCTION COIL TYPE — USED WITH

HAND TELEPHONE SETS — CONNECTIONS

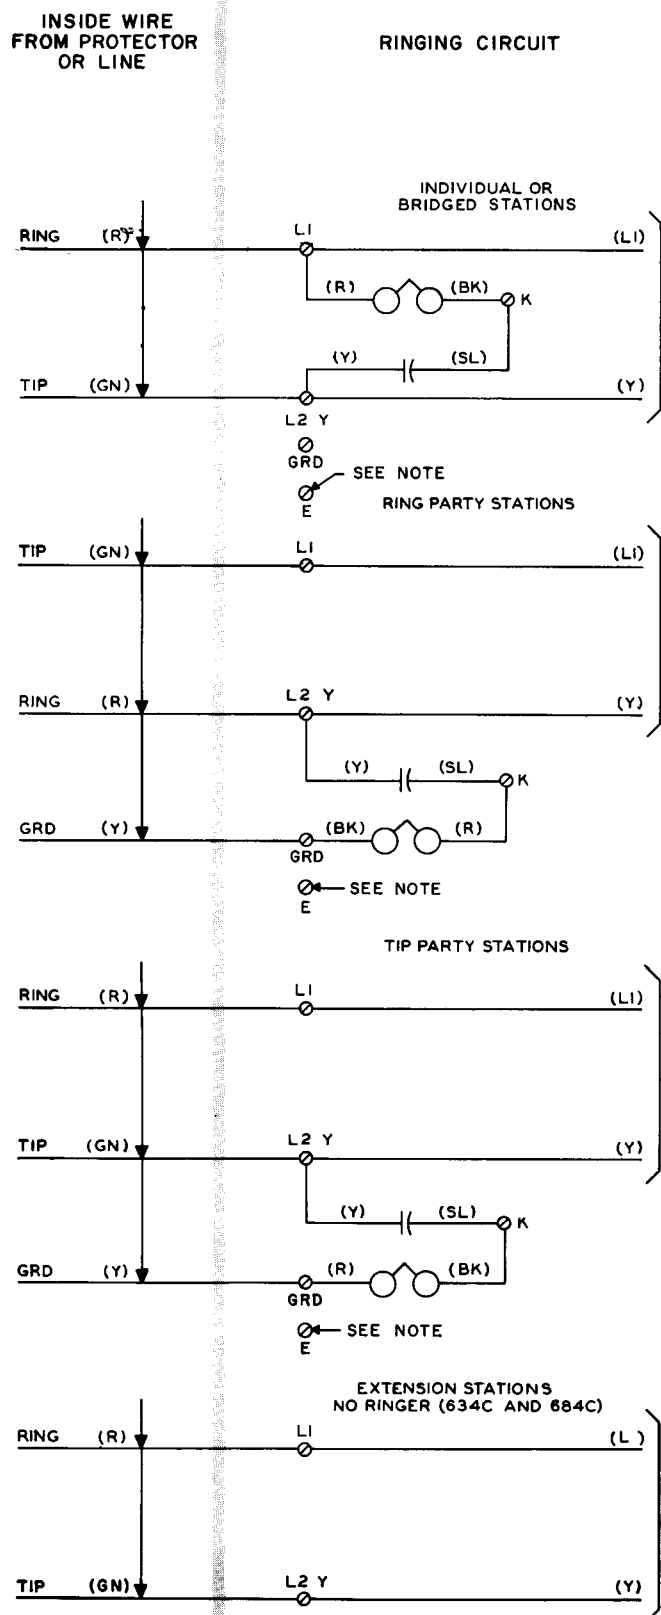

Note: E terminal is provided only on 684A and 684BA subscriber sets.

TABLE A
CONNECTIONS

Wire or Lead		Indiv or Bridged	Ring Party Stations	Tip Party Stations
Inside Wire from Protector or Line	Ring	R	L1	L1
	Tip	GN	L2Y	L2Y
	Grd	Y	—	GRD
Ringer Lead (See Note)		R	L1	GRD
		BK	K	K
Mounting Cord or Local Wire to Hand Tel Set		GN	GN	GN
		R	R	R
		BK	BK	BK
		Y	L2Y	L2Y

Note: To silence the ringer permanently, connect the red and black ringer leads to the K terminal.

TABLE B
ASSOCIATED APPARATUS

Class of Service	Hand Telephone Sets	
	Hangup Type	Desk Type
Individual Lines 2-Party (See Note) 4-Party Semiselective Multiparty Divided Code Regular PBX Stations 750A and 755A Keyless Stations	201A, B, C, D 211A, B, C, D, J, L 212A, B, C, L 213A, B, C, E	202A, B, C, D 203A, B, C, D, E, F 215A, B, C, D

Note: This type subscriber set cannot be used for tip party stations where message rate or tip party identification is required.

Circuit Diagram for Connection with Hand Telephone Sets