

SUBSCRIBER SETS—634BC AND 684BC COMMON BATTERY — INDUCTION COIL TYPE — USED WITH HAND TELEPHONE SETS — CONNECTIONS

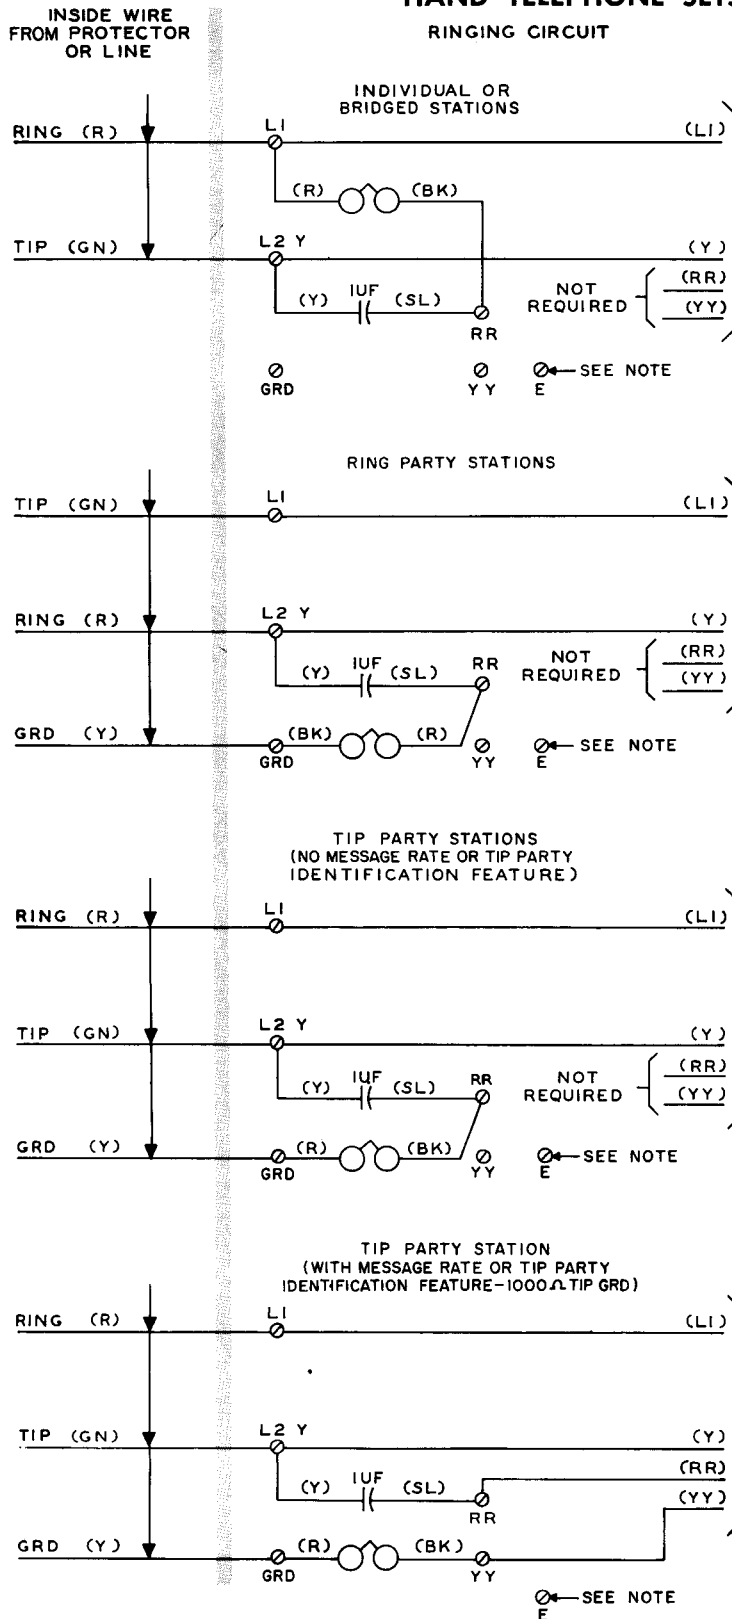


TABLE A
ASSOCIATED APPARATUS

Class of Service	Hand Telephone Sets	
	Hangup Type	Desk Type
Individual Lines 2-Party Full Selective 4-Party Semiselective Multiparty Divided Code Regular PBX Stations 750A and 755A Keyless Stations	201A, B, C, D 211A, B, C, D, J, L 212A, B, C, L 213A, B, C, E	202A, B, C, D 203A, B, C, D, E, F 215A, B, C, D
Message Rate or Tip Party Identification — Party on Tip for 2-Party Full Selective*	212A, B, C, L	203A, B, C, D, E, F

* MR—All offices
ZR—All offices
AMA—Standard XBR

TALKING CIRCUIT

MTG CORD OR LOCAL WIRING

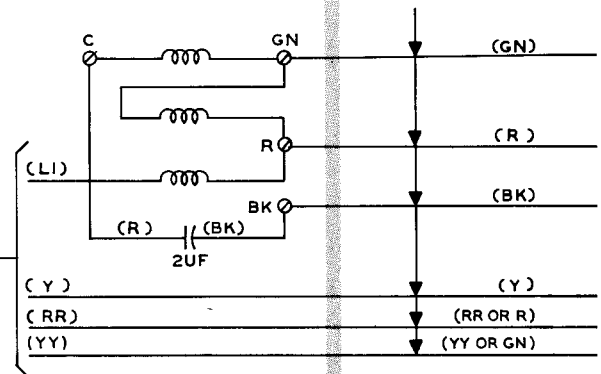


TABLE B
CONNECTIONS

Wire or Lead			Indiv or Bridged	Ring Party Stations	Tip Party Stations	
					No Message Rate or Tip Party Identification Required	MR—All Offices ZR—All Offices AMA—Std XBR
Inside Wire from Protector or Line	Ring	R	L1	L2Y	L1	L1
	Tip	GN	L2Y	L1	L2Y	L2Y
	Grd	Y	—	GRD	GRD	GRD
Ringer Lead (See Note)		R	L1	RR	GRD	GRD
		BK	RR	GRD	RR	YY
Mounting Cord or Local Wiring		GN	GN	GN	GN	GN
		R	R	R	R	R
		BK	BK	BK	BK	BK
		Y	L2Y	L2Y	L2Y	L2Y
		RR or R	Not Req'd			RR
		YY or GN				YY

Note: To silence the ringer permanently, connect the red and black ringer leads to the RR terminal. On tip stations with message rate or tip-party identification feature, connect the yellow and slate ringing capacitor leads to the RR terminal.

Circuit Diagram for Connection with Hand Telephone Sets