1-2149

TECHNICAL INFORMATION

FILTERED FUSE

&

ALARM PANEL

600149







Approved: Raweitt

Issue 1 12-01-81

TABLE OF CONTENTS

| SECTION | N PA | AGE |
|---------|----------------------------|----------------------|
| ı. | INTRODUCTION | |
| II. | 1. General | -1 |
| 11. | ENGINEERING & INSTALLATION | |
| | 1. General | -1 -2 -2 -2 |
| III. | OPERATING PROCEDURES | |
| | 1. Functional Description | -2 |
| IV. | CIRCUIT DESCRIPTION | |
| ٧. | DRAWINGS | |

ILLUSTRATIONS

FIGURES

| FIGURE | S | PAGE |
|----------------|--|------|
| 1. 2. 3. | EMS Interconnections | 3-1 |
| | • | |
| | TABLES | |
| TABLES | | PAGE |
| 1. 2. | Specifications | 2-2 |
| 3. 4. | Replacement Items | |
| 5. | Maximum Current Capacity of Fuse Panel Feeder Cables | |
| 6. | Wire Size Conversion | |
| 7. | Office Alarm Strapping | 2-4 |
| 8. | Functional Tests | 3-2 |

SECTION 1 - INTRODUCTION

1.0 GENERAL

1.01 The ITEC Filterd Fuse & Alarm Panel is a self-contained rack-mounted bay power filter, bay equipment fuse panel, and bay alarm status indicator. Its small size and versatility make it very popular to use with any combination of bay mounted telephone equipment.

2.0 DESIGN FEATURES

- 2.01 The Fuse Panel can handle a maximum of 10 fused equipments up to 45 amps total. Front panel alarm lamps simplify tracing a problem in the bay. Indications are given for Bay Fuse Alarm, Bay Equipment Major and Minor Alarms, Bay Allotter Major and Minor, and Delayed Permanent Signal Alarms.
 - 2.02 Office Alarm outputs exist for Major and Minor and may be individually strap selectable for 500 ohm battery or ground, or if necessary, solid battery or ground. The alarm circuitry is protected from foreign potentials appearing on the Office Alarm outputs.
- 2.03 The Filtering circuit has automatic capacitor charging to prevent surges. Both positive and negative-going spikes are filtered as well as low and high frequency AC. Filtering is provided by 12,000 uf capacitance. The filtering circuit is individually fused allowing complete independence from the alarm and display functions.

3.0 WARRANTY

- 3.01 ITEC, Inc. unconditionally warrants these units to be free of all defects in material or workmanship for five years from date of shipment. Any units found defective during the first year will be repaired or replaced at no charge when returned prepaid to our Huntsville facility. During the remaining four years of the warranty, a handling fee will be charged for this service. Any abuse or improper installation will void this warranty.
- 3.02 A Return Material Authorization (RMA) must be obtained from the Customer Service Department (205-881-5759) prior to shipping. The following information should be included with the shipment:
- 1. RMA Number
- 2. Return shipping address
- 3. Contact name and phone no.
- 4. Specific failure or trouble

Ship via UPS or Parcel Post to:

ITEC, Inc. P.O. Box 4147 520 Green Cove Road Huntsville, Al 35802

Adherence to this procedure will facilitate the prompt repair and return of your material.

SECTION II - ENGINEERING & INSTALLATION

1.0 GENERAL

1.01 This section contains detailed instructions for the installation of the ITEC Filtered Fuse & Alarm Panel.

2.0 SPECIFICATIONS

2.01 The ITEC Filtered Fuse & Alarm Panel Specifications are listed in TABLE 1.

TABLE 1. SPECIFICATIONS

| SPECIFICATION | DESCRIPTION |
|--|---|
| ★ FUNCTIONAL: | |
| Filter Capacity Fuse Positions | 12,000 uf 1 - Filter 10 - Fused Equipment |
| Alarm Inputs | Equipment Fuse Alarms Allotter Alarms |
| Office Alarm Outputs | Selectable: 500 ohm Battery 500 ohm Ground Battery Ground |
| Temperature Humidity | 10° to 120°F 20% to 90% |
| ELECTRICAL: | |
| Voltage Current Idle Filter Inrush Maximum | -44 to -56 Vdc Less than 25 ma 1 amp 45 amps |
| MECHANICAL: | · |
| Height Width Depth Weight | 1.75" 19" (23" adapter) 6.5" 2 lbs. |

3.0 ORDERING INFORMATION

Panel model #600149 comes complete and ready for installation. Adapters are supplied for 23" rack mounting. GMT fuses for the Bay Equipment are not supplied and must be ordered separately (refer to TABLE 2).

TABLE 2. GMT FUSES

| AMPERES | PART NUMBER |
|---|--|
| 1/4 1/2 3/8 3/4 1 1 1/3 2 | 100032-2 100032-3 100032-4 100032-5 100032-6 100032-7 100032-8 100032-9 |
| 5 7 1/2 10 | 100032-10 100032-11 100032-12 |

3.02 Replacement Items are listed in TABLE 3.

4.0 MECHANICAL MOUNTING

4.01 The Filtered Fuse & Alarm Panel is designed to fit a 19" rack (1 mounting space of 1.75"), or a 23" rack with mounting brackets supplied. The recommended mounting position is at the top of the rack with all cabling coming from the right side facing the bay. This allows the Panel to be swung out for access to the circuit board, and connections. Access from the rear of the bay is very limited due to the short depth and mounting position of the Panel.

5.0 ELECTRICAL CONNECTIONS

for all connections except BATT and GND which are screw terminals. Refer to the Assembly Drawing A600149 for the wire wrap pin positions.

TABLE 3. REPLACEMENT ITEMS

| PART # | COMPONENT DESIGNATOR | DESCRIPTION |
|---------|-------------------------|-------------------|
| MJE 722 | Q1 | NPN silicon power |
| MPSA06 | Q4, Q5, Q6, Q7 | NPN silicon |
| MPSA56 | Q2, Q3 | PNP silicon |
| 48-C | LP1, LP2, LP3 | slide base lamp |

WIRE SIZE SELECTION

Panel, wire sizes to the Panel and to the fused circuits must be carefully selected to prevent overloading. The wire size should be large enough to limit the voltage drop to a maximum of 0.1 volts between the row feeder and Fuse Panel and 0.25 volts between the Fuse Panel and the unit being fused. The formula for determining wire size is: (CM = Circular Mills)

10.6 X wire length X current
----- = CM
voltage drop

When determining wire size, the calculation should be based on the actual current to be carried, not the fuse size. The wire size for example, of a shelf with ten electronic trunks that require 200 ma each in the busy condition would be calculated based on the combined load of 2 amps. However, the fuse rating would be 3 amps (150% of max. load). The following tables can be used as a guide for selecting wire size. Loop length refers to both the Battery and the Ground wire, thus a 3 ft. loop length is 6 ft. wire length.

TABLE 4. MAXIMUM CURRENT CAPACITY OF FUSE DISTRIBUTION WIRE (Max. 0.25 Volt Drop)

| LOOP LENTH FROM FUSE TO LOAD | | | | | | | | | |
|--|--------------------------------------|--|------------------------------------|---|--|--|--|--|--|
| Wire Size | 3 ft. | 6 ft. | 9 ft. | 12 ft. | | | | | |
| 24 Gauge 22 Gauge 20 Gauge 18 Gauge 16 Gauge | 1.5A 2.5A 4.0A 6.5A 6.7A | .75A 1.2 A 2.0 A 3.2 A 5.1 A | .5A .8A 1.4A 2.1A 3.4A | .35A .6 A 1.0 A 1.5 A 2.5 A | | | | | |

NOTE: Fuse rating should be 150% to 200% of the maximum steady state load.


TABLE 5. MAXIMUM CURRENT CAPACITY OF FUSE PANEL FEEDER CABLES (Max. 0.1 Volt Drop)

| LOOP LENGTH FROM ROW FEEDERS TO FUSE PANEL | | | | | | | | | |
|--|------------------------|-------------------------------|---------------------------|---------------------------|-------------------------|--|--|--|--|
| Wire Size | 2 ft. | 3 ft. | 4 ft. | 5 ft. | 6 ft. | | | | |
| 10 Gauge 8 Gauge 6 Gauge 4 Gauge | 25A 38A *45A | 17 A 26 A 40 A *4 5A | 12A 19A 30A *45A | 10A 15A ·25A 40A | 8A 13A 20A 32A | | | | |

*Maximum capacity of 600149 fuse panel

TABLE 6. WIRE SIZE CONVERSION

| Wire Size (AWG) | Circular Mills | Millimeters |
|--|---|--|
| 26 24 22 20 18 16 14 10 8 6 | 253 404 640 1020 1620 2580 4110 10,380 16,510 26,240 41,740 | 0.4 0.5 0.65 0.8 1.0 1.5 2.0 2.5 3.0 4.0 5.0 |

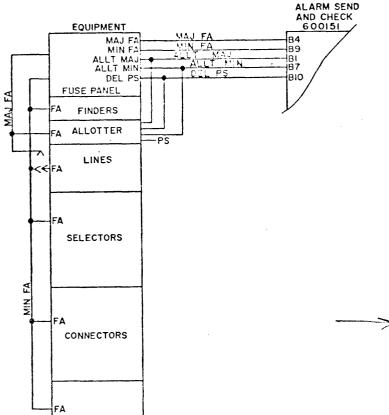

5.03 The Fuse Panel may be interconnected in many different configurations to satisfy engineering requirements. Figure 1 shows the Fuse Panel circuit connections as suggested with ITEC EMS-1 equipment. Consult the factory Customer Service for special applications not covered in this manual.

6.0 INTERNAL STRAPPING

6.01 The Filtered Fuse & Alarm
Panel has a total of four
strapping options, all related to
the Office Alarm outputs. The
Office Alarm outputs may be
strappable for Battery, Ground,
500 ohm battery, or 500 ohm
ground. Refer to TABLE 7 for the
strapping list and Assembly
Drawing A600149 for the strapping
locations.

TABLE 7. OFFICE ALARM STRAPPING

| ALARM OUTPUT | STRAP |
|-----------------|--|
| Battery | A1 - A2 A4 - A5 B1 - B2 B4 - B5 |
| Ground | A2 - A3 A4 - A5 B2 - B3 B4 - B5 |
| 500 ohm Battery | A1 - A2 B1 - B2 |
| 500 ohm Ground | A2 - A3 B2 - B3 |

Figure 1. EMS Interconnections

TRUNKS

SECTION III - OPERATING PROCEDURES

1.0 FUNCTIONAL DESCRIPTION

Alarm Panel consists of one circuit card attached to a 19" rack mountable panel of one mounting space (1.75") height. Mounting hardware is supplied to accomodate 23" rack mounting. All fuses are located on the Front Panel alowing easy viewing and replacement. Three incandescent Front Panel lamps give alarm status and are viewable from all forward angles and lighting conditions.

1.02 Figure 2 is a functional diagram of the Panel showing the logic of the alarm inputs to alarm outputs and displays. As shown, the Allotter Alarm inputs will only light the MAJ and MIN Front Panel lamps and do not affect the Office Alarm outputs. The Equipment FA inputs will affect both the Office Alarm outputs and front panel lamps. The BAY lamp is only turned on by a fuse failure, either the Filter or one or more of the bay fused equipments.

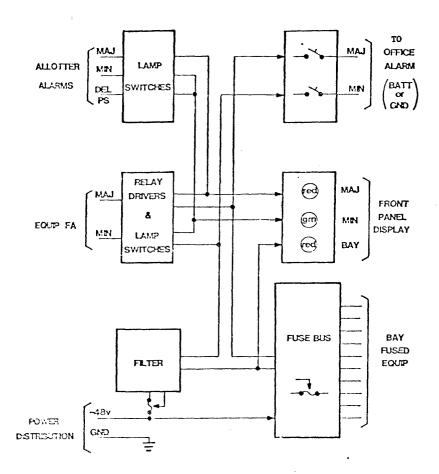


Figure 2. Filtered Fuse Panel Functional Diagram

2.0 OPERATION

2.01 After installation, there are no operator functions necessary unless a front panel lite indicates a problem. The BAY lamp indicates a GMT fuse has operated, and should be replaced with the same size fuse. The MAJ and MIN lamps will require further diagnosis of the equipment mounted in the bay.

3.0 FUNCTIONAL TESTS

3.01 The front panel lamps and Office Alarm outputs may be tested before or after installation by the tests described in TABLE 8. The Filter circuit may also be checked for proper functioning, but only in an operating environment with susceptible noise on the power distribution BATT input.

3.02 All transistors are mounted in sockets for ease of replacement. Ensure the transistors are oriented as shown in Figure 3. The transistor reference designations are shown in Assembly Drawing A600149. Q2 and Q3 (MPSA56) should have a white dot on the top. Q1 must be inserted with the metal-plated side up, and in the right-most three positions of the DIP socket.




Figure 3. Transistor Mounting

TABLE 8. FUNCTIONAL TESTS

| Allotter Alarms | Jumper a ground to each of the Allotter Alarm inputs. The Front Panel MAJ and MIN lamps should lite depending on which input is grounded. (Del P.S. lites the MIN lamp) |
|-----------------|---|
| EQUIP FA | Jumper BATT to the EQUIP FA MAJ and MIN inputs. The Front Panel MAJ and MIN lamps should lite. The Office Alarm MAJ and MIN outputs should have either -48v, ground, or 500 ohms to ground as measured with a multimeter to GND, depending on the straps installed. |
| BAY Alarm | Using a GMT fuse that has been activated, insert into each fuse slot in the Front Panel and ensure the BAY lamp lites. |
| Filter | Use an oscilloscope on the BATT terminal. Set vertical input to AC, 1 v/div. MEASURE noise level. Remove Fl. Noise level should increase noticeably (if there is susceptible noise on the -48v input). |

3.03 The front panel slide base lamps may be replaced by unscrewing the colored lens cap and and pulling forward on the lamp. DO NOT TURN the lamp while in the socket. A 55-C lamp may be substituted for the 48-C with a small loss of intensity, but greater life expectancy. Insert a lamp gently with the metal slides oriented up and down. Ensure the GREEN lens cap is on the MIN lamp. The BAY and MAJ lamps are both RED.

SECTION IV - CIRCUIT DESCRIPTION

- Alarm Panel is comprised of one circuit card mounted to a Front Panel. The Front Panel contains the Alarm lamps and GMT Fuses. The circuit card contains all other components and wiring connections, power distribution BATT and GND are connected via screw terminal posts, all other connections are wire wrap. Refer to Figure 2 for a functional diagram, and Schematic C600149 during the circuit description.
- 1.02 Inputs may be divided into three groups; (a) Allotter Alarms, (b) Equipment Fuse Alarms, and (c) Power Distribution. Outputs may also be divided into three groups; (a) Office Alarms, (b) Front Panel Display; and (c) Fused Equipment.
- **★**1.03 Filtering of -48v office battery is accomplished by two 6000 uf capacitors (C1 and C2) in parallel giving 12,000 uf filter capacity. Upon applying power, C1 and C2 are allowed to charge through R1 for approximately one second. Q1 will then turn on giving less than one ohm of impedance to the filtered supply line. D10 protects Q1 from positive transients. allows for high frequency bypass to ground. R3 is a bleeder resistor to discharge the filter when power is removed. The filter fuse (F1) does not affect the 10 fusei equipment outputs or the alarm sensing circuits. Fl blown causes the BAY lamp to lite through D12.

- 1.04 The Alarm circuits are powered directly from -48v of fice power input through BL1 ballast lamp. BL1 limits the current available to less than 200 ma to protect the alarm circuitry in case a foreign ground is applied to the office alarm outputs.
- 1.05 The Allotter alarm inputs, Major, Minor, and Delayed Permanent Signal, are normally transistor switched 120 ohms to ground, but may be hard ground if necessary. D4 and D5 isolate the Minor and Del P.S. alarms from each other. ohm or lower ground input will turn on Q6 or Q7 which in turn, supply -48v to either MAJ (Red) or MIN (green) front panel alarm lamps through D7 or D6. Office Alarm outputs are not affected by Allotter Alarm inputs.
- The Equipment Fuse Alarm 1.06 inputs, Major and Minor, are normally transistor switched 500 ohms to Battery, but may be hard battery if necessary. and Dll isolate the Equip. F.A. Min. Alarm input from the internal filter fuse alarm (F1). D2 and D9 isolate a Maj. Alarm input from the internal Fused Equipment fuse alarms. A 500 ohm or lower battery input will turn on Q2 or Q3 which will turn on Q4 or Q5. Q4 on will supply -48v to energize the MAJ Alarm relay, and also turn on the MAJ (red) front panel alarm lamp through D3. Q5 on will supply -48V to energize the MIN alarm relay, and then also turn on the MIN (green) front panel alarm lamp through D8.

1.07 The Office Alarm outputs,
MAJOR and MINOR, are individually selectable for either ground or battery output by straps Al, A2, A3 and Bl, B2, B3. 500 ohm (10 watt) resistance is normally in the Office Alarm outputs, but may be strapped out by A4 to A5, and B4 to B5. The ballast lamp BL1 protects the alarm circuitry from a foreign ground on the Office Alarm outputs when the outputs are strapped for battery.

outputs (10 ea.) are available as wire wrap posts directly behind the fuse slots. Multiple ground posts parallel the fused output posts. The total capacity of the fused outputs must not exceed 45 amps. The fuse alarms are tied through D13 to light the BAY (red) front panel alarm lamp.

SECTION IV - DRAWINGS


Assembly Schematic


A600149

C600149

| ISSUE | E.C.O. NO. | DATE | APPROVAL |
|-------|------------|-----------|---------------------------------------|
| _ 1 | RELEASED | 10-24-79 | 1 210 |
| . 2 | 1522 | 11-13-79 | |
| 3 | 1528 | 11-17-79 | m |
| 4 | 1529. | 12-7-79 | 52772 |
| 5 | 1633 | 2-20-80 | ,) ?) |
| 6 | 1634 | 3-19-80 | 113.11 |
| 7 | 1705 | 6-23-80 | 111 com |
| _8 | 1862 | 3-27-81 | |
| 9 | 1588 | 7-20-81 | , , , , , , , , , , , , , , , , , , , |
| 10 | 2003 | 7-30 - PI | (3/5) |

GEDDAWN 3-97-RI

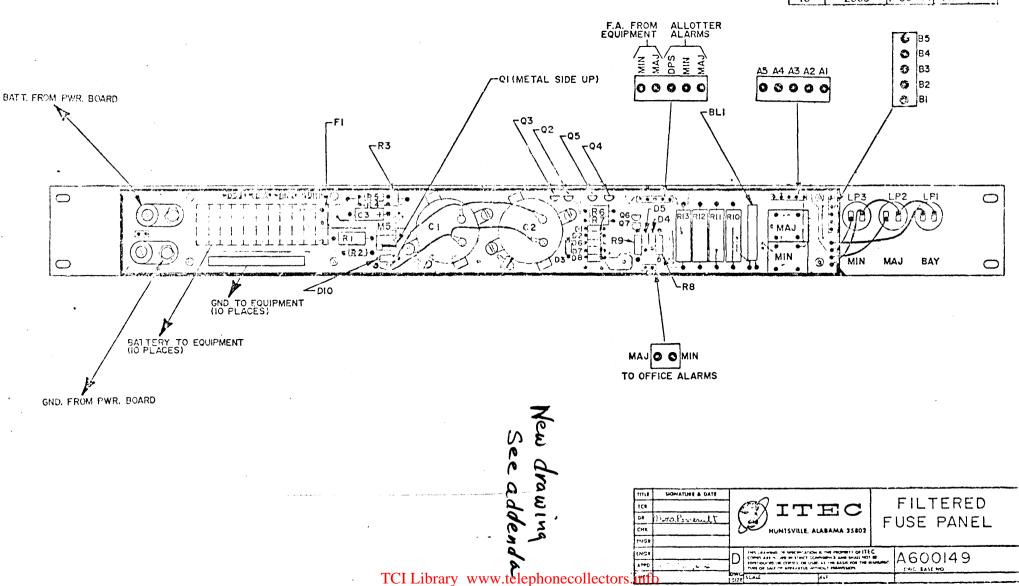

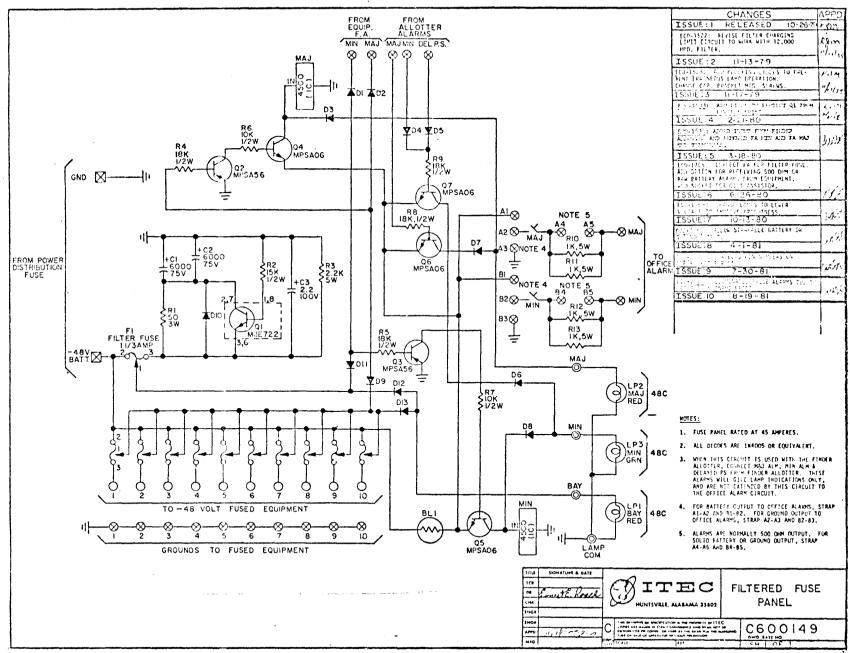

600149

- 1.0 GENERAL
- 1.01 This Addendum supplements the I-2149 Technical Information Manual on the ITEC Filtered Fuse and Alarm Panel Model 600149. The Addendum should be attached to I-2149 Technical Information manuals of Issue 1. Later Issues will have this addendum or its subsequent issue incorporated.
- 1.02 This Addendum is issued to identify new and changed features of the 600149 Filtered Fuse à Alarm Panel. Changes which could be of interest to the end user include:
 - Front Panel Fuse Orientation
 - Fuse Connections
 - Filter Fuse Size
- 2.0 CHANGE TO SECTION
- 2.01 On Page 1-1, Section 2.01 add:

Since the Fuse Panel is normally located at the top of a rack, the fuses are oriented so the fuse indicators may be seen from floor level.

2.02 On Page 1-1, Section 2.03 add:

The filtering circuit provides approximately 8db of noise improvement on a bay input. This filter is not meant to replace other available LC filters for true power filtering, but only to smooth and filter spikes from adjacent equipment to protect EMS or other sensitive equipment in a bay.

2.03 On Page 2-1, TABLE 1. SPECIFICATIONS add:

Filtering 8db approximately Filter Fuse (F) 2 amp

2.04 On Page 2-2, Section 3.01 add:

A 2 amp fuse (=100032-8) is supplied in the F fuse position for the filtering circuits.

2.05 On Page 202, 3mation 5.01 add:

The Fuse Equipment Outputs (10 ea.) are available directly behind each fuse position. Multiple ground posts parallel the fused output posts. The internal straceings are explained in Section 6.0.

2.06 On Page 4-1, Section 1.03 change:

Fl blown causes the BAY lamp to lite through D14.


2.07 On Page 4-1, Section 1.04 delete and replace with:

The Alarm circuits are powered from the filtering circuit through Fl, the Fuse Panel System fuse. If Fl activates, the fuse indicator allows the alarm circuits to continue operation through D14 and lite the BAY lamp through D12 and activate the office alarm.


2.08 On Page 4-2, Section 1.08 change:.

The Fused Ecoipment outputs (10 ea.) are available as wire wrap posts directly behind each fuse position.

2.09 In Section IV - Drawings, replace with the attached schematic and component layout drawings.

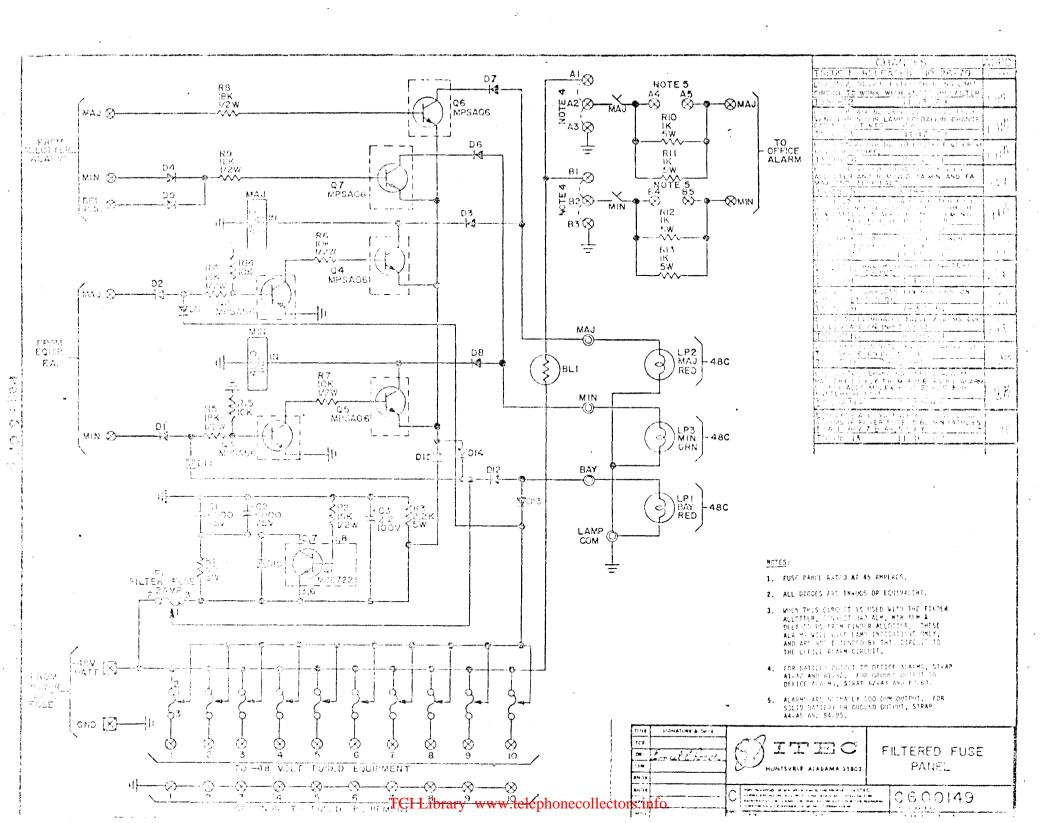

| • | NPPRCVAL | | | | | The state of the s | | | | | | | | | | |
|---|------------|----------|-------|-------|------|--|---------|---------|----------|---------|---------|---------|---------|---|---|---------|
| | DATE | 0.35.70 | 0.1.1 | 62.11 | 0. | 2-55-3 | 3-(8-8) | CH-54-0 | 10-13-91 | 10110-5 | 7-20 ET | 7-30-81 | ia of a | | , | 11-16-8 |
| | E.C.O. NO. | RELEASED | 3337 | 1528 | 1529 | 1633 | 1634 | 1705 | 6971 | 1862 | १९६५ | 2003 | 2051 | | | 2618 |
| | ISSUE | | 2 | n | v | က | (0 | î~ | ω | 6 | 0.1 | = | C. | - | • | 5 |



| 11.5 | SHOWATURE & DATE | | | |
|------|------------------|----------|--|--------------|
| 1 | | `` | 国ーリニュナイグ | THE CHARLE |
| 3 | WOW PERNEAULT | <u>_</u> | | |
| ŧ | | △ | HURISVALE, ALADAMA 35802 | |
| 3 | | | | |
| 3 | | - | Date to suppose and in section of the suppose of 118.0 | |
| £ | | <u>.</u> | — . ¥ | MA000 148-00 |
| 3 | | 3 3 | 31.6 | |