

COIN COLLECTORS — PREPAY
191, 195, 196, 197 (CN, DN, GN, HN)
COMMON BATTERY — CONNECTIONS

Note 1: Dotted lines in diagram show manual set connections.

Note 2: When a 61R filter is required for radio frequency suppression, move yellow dial lead from Y upper housing contact spring to filter bracket terminal and connect filter leads as follows:

Yellow lead to filter bracket terminal

Black lead to BK upper housing contact

Red lead to Y upper housing contact

Note 3: When coin collector is installed in a KS-14611, List 2 booth or a KS-16705 mounting, the tip and ring line terminations are connected directly to the subscriber set.

Note 4: To rearrange for use with 685B subscriber set, disconnect yellow strap between T terminal and coin relay. Tape ends and turn back for future use.

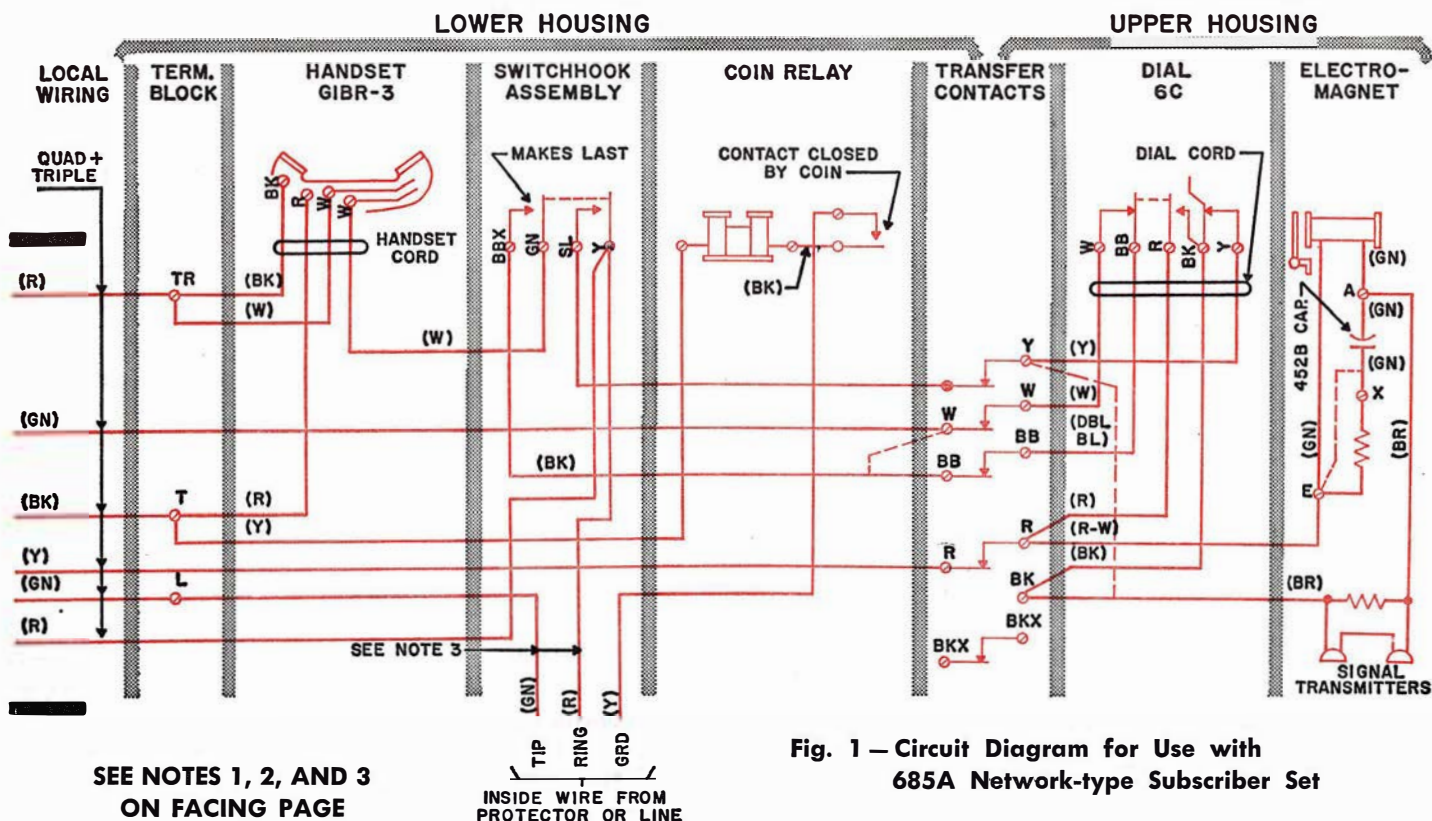


Fig. 1 - Circuit Diagram for Use with 685A Network-type Subscriber Set

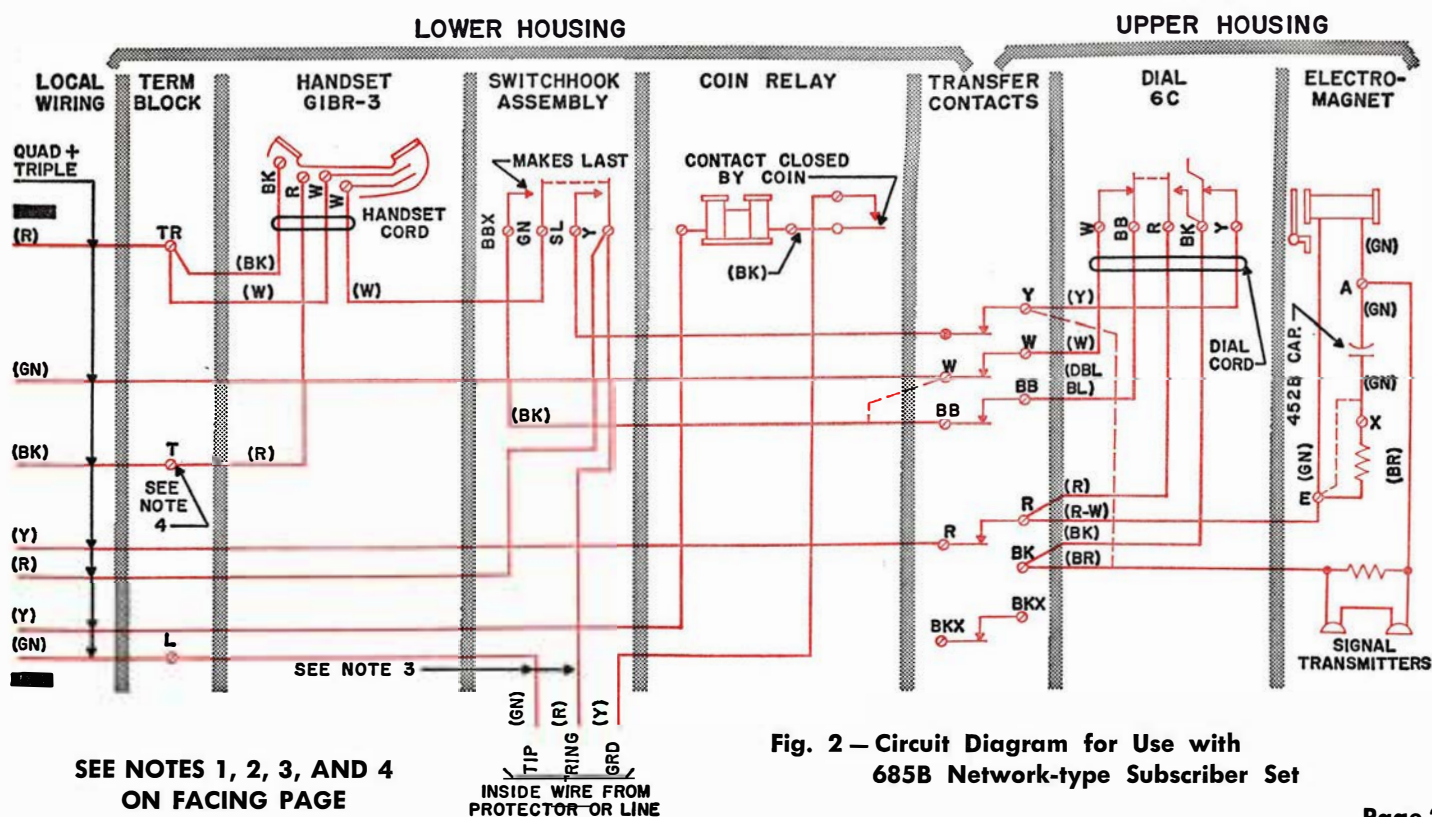


Fig. 2 - Circuit Diagram for Use with 685B Network-type Subscriber Set