
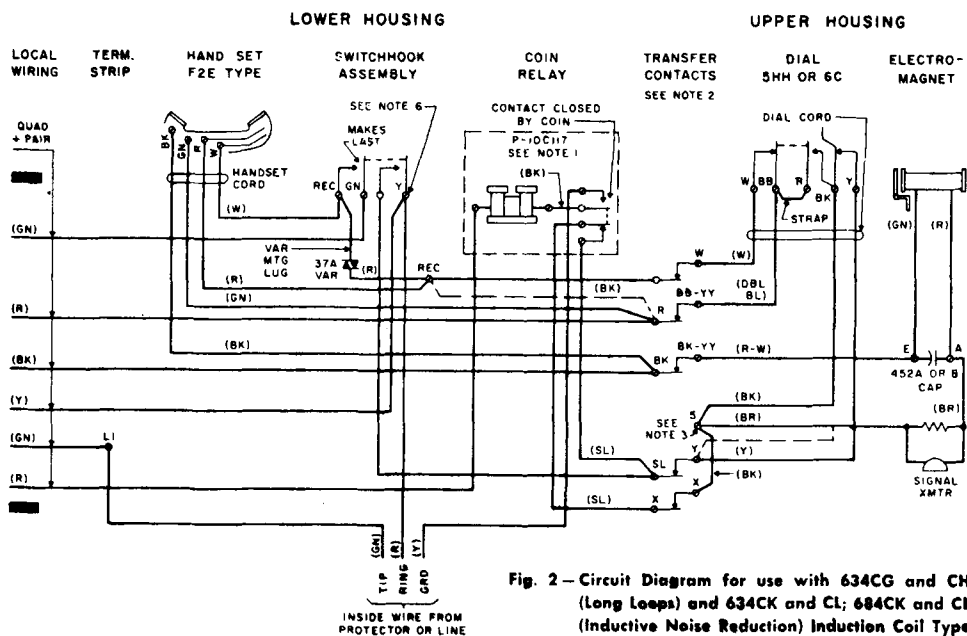



COIN COLLECTORS — PREPAY

176CS, GS; CT, GT

COMMON BATTERY — CONNECTIONS

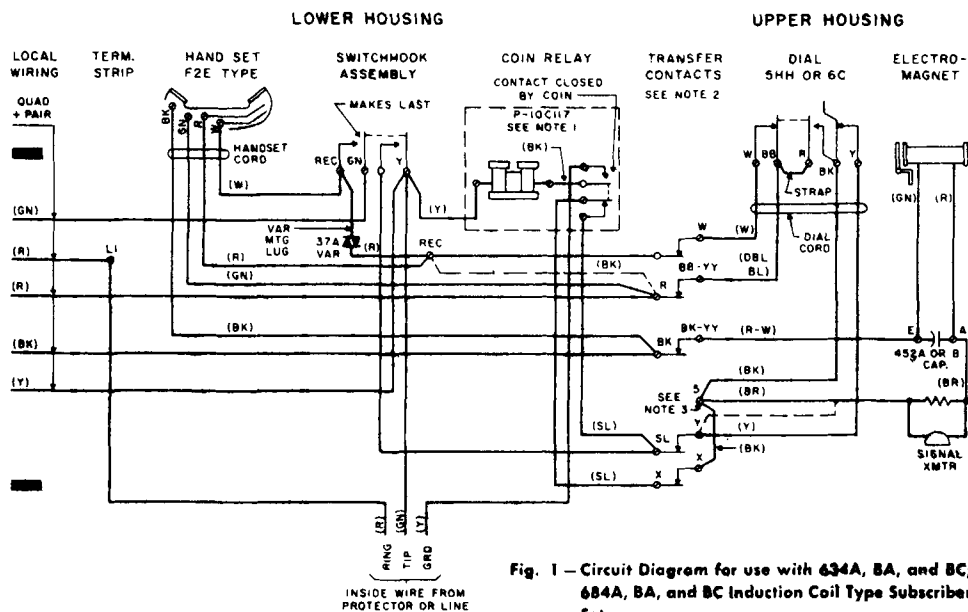

See notes Page 2

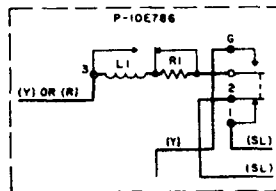

Note 1: 176CT, GT coin collectors are equipped with P-10E786 coin relays wired as shown above.

Note 2: In some upper housings, transfer contacts may be designated W, BB, YY, BK-YY, Y, and X, respectively.

Note 3: Brown gong signal lead or black filter lead may be connected to X terminal on coin chute instead of No. 5 terminal.

Note 4: Dotted lines in diagram show manual set connections.

Note 5: When a 61R filter is required for radio frequency suppression, move yellow dial lead from Y upper housing contact spring to filter bracket terminal and connect filter leads as follows:

Yellow lead to filter bracket terminal.

Black lead to No. 5 upper housing contact.

Red lead to Y upper housing contact.

Note 6: When coin collector is connected to 634 CG, CH, CK, CL; 684 CK and CL subscriber sets, disconnect yellow strap between Y terminal on switchhook assembly and coin relay. Tape ends and turn back for future use.