

GTE AUTOMATIC ELECTRIC
CORD ASSEMBLIES – EIGHT OR MORE CONDUCTORS
DESCRIPTION

1. GENERAL

1.01 This section provides a listing and illustration of the GTE Automatic Electric cord assemblies with eight or more conductors.

2. CORD ASSEMBLIES



2.01 For each illustrated cord assembly, a wiring diagram and all plugs, terminals, and receptacles are shown. A stocklist of major components is also provided. If additional information is required, refer to the appropriate GTE Automatic Electric drawing.

2.02 GTE Automatic Electric cord assemblies of 1, 2, 3, 4 and 5, 6, and 7 conductors are covered in other sections in the 032-210 series of GTE Practices.


2.03 These cord assemblies are presented in alpha-numeric order. For a listing of cord assemblies by the number of conductors, refer to Table 1.

2.04 The following are GTE Automatic Electric cord assemblies with eight or more conductors, arranged in alpha-numerical order:

D-59316-A

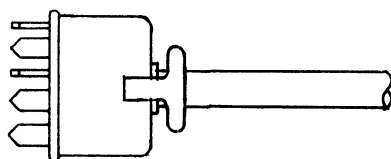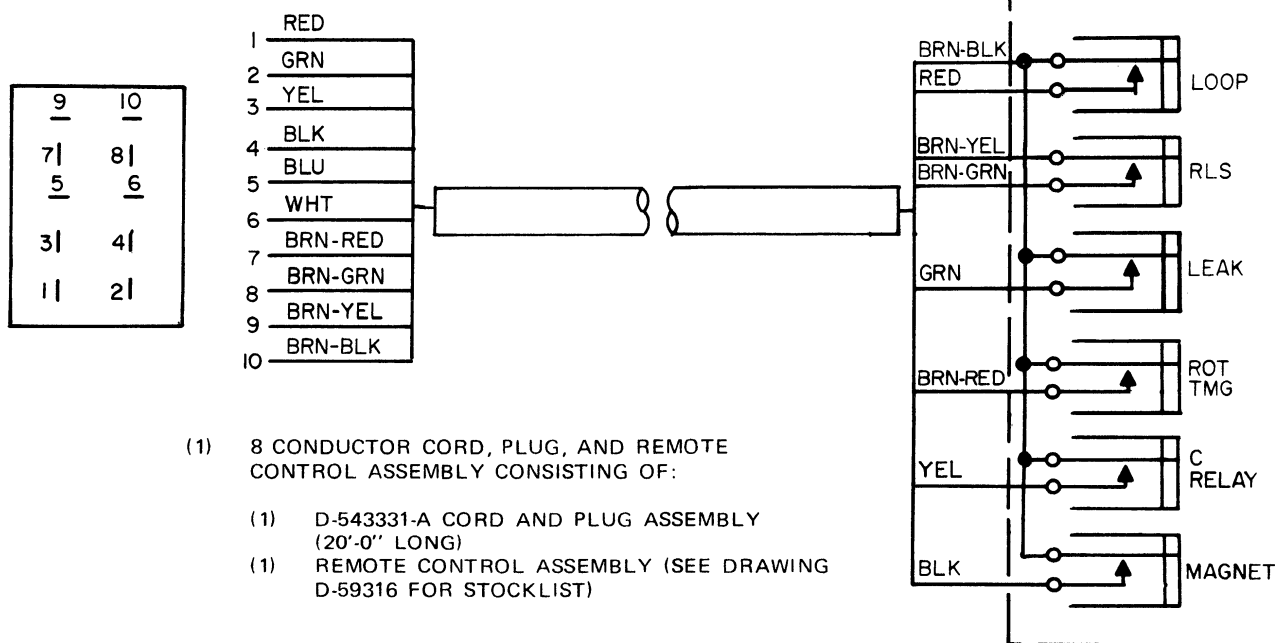

D-543331-A

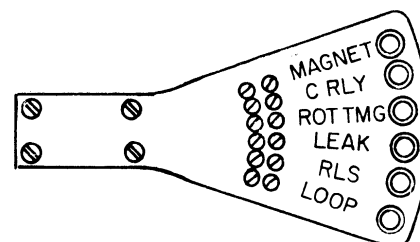


REMOTE CONTROL ASSEMBLY

SECTION 032-210-108
ISSUE 1

Table 1. Listing of Cord Assemblies by Number of Conductors.

<u>8 Conductors</u>	<u>12 Conductors</u>	<u>20 Conductors</u> (Con't.)	<u>30 Conductors</u>	<u>40 Conductors</u>
D-59316-A	D-543617-A		D-543314-A	D-543426-A
D-59316-B	D-543668-A	D-543384-D	D-543533-A	
D-542338-A	H-881899-2	D-543401-A		
D-542430-A	H-881899-5	D-543632-A		<u>44 Conductors</u>
D-543030-A	H-881899-6	H-882146-1	<u>31 Conductors</u>	
D-543057-A		H-882619-3		D-543371-A
D-543170-A	<u>14 Conductors</u>	H-883178-1	D-543564-B	D-543371-B
D-543189-A				D-543379-A
D-543202-A	D-543536-A	<u>22 Conductors</u>	<u>32 Conductors</u>	D-543379-B
D-543266-A				D-543518-A
D-543349-A	<u>15 Conductors</u>	D-543315-A	D-543560-A	D-543518-B
D-543352-A			H-882619-2	
D-543557-A	D-543264-A	<u>23 Conductors</u>		<u>48 Conductors</u>
D-543595-A	D-543494-A		<u>34 Conductors</u>	
D-543598-A	D-543495-A	D-543186-A		D-543384-C
D-543633-A	D-543554-A	D-543283-A	D-543365-A	D-543384-F
D-543634-A	D-543554-B		D-543365-C	
H-881958-5	D-543554-C	<u>24 Conductors</u>	D-543464-A	<u>49 Conductors</u>
	H-881958-1		D-543464-B	
<u>9 Conductors</u>	H-881958-2	D-543405-A	D-543464-C	
	H-881958-3	D-543405-B	D-543464-D	D-543369-A
D-543427-C	H-881958-4	D-543548-A	D-543464-G	
D-543427-D			D-543464-M	<u>50 Conductors</u>
D-543427-E	<u>16 Conductors</u>	<u>25 Conductors</u>	D-543524-A	
D-543427-F			D-543601-A	D-543375-A
	D-320243-A	D-543549-A	D-543601-B	D-543375-B
<u>10 Conductors</u>	D-320243-B	D-543620-A	D-543601-C	D-543400-A
	D-543267-A	H-882596-1	D-543601-D	D-543569-A
D-542996-A	D-543382-A	H-882596-2	D-543601-G	D-543569-B
D-542996-B	D-543555-A	H-882596-3	D-543601-M	D-543569-M
D-543014-A	D-543570-A	H-882596-4		D-543588-A
D-543121-A	D-543570-B	H-885593-1		D-543588-B
D-543121-B	D-543570-M	H-885593-2	<u>35 Conductors</u>	D-543591-A
D-543188-A	D-543597-A			D-543626-A
D-543188-B			D-543080-A	D-543626-B
D-543188-C	<u>17 Conductors</u>	<u>26 Conductors</u>	D-543316-A	
D-543279-A			D-543365-B	<u>64 Conductors</u>
D-543331-A	D-542380-A	D-543283-B	D-543365-D	
D-543427-A		D-543319-A	H-881899-1	D-543399-A
D-543427-B	<u>18 Conductors</u>		H-882144-1	D-543624-A
D-543507-A			H-882619-4	
D-543550-A	D-543402-A	<u>27 Conductors</u>	H-883179-1	
H-87657-5	D-543573-A			<u>120 Conductors</u>
P-60754-A	D-543589-A	D-543186-B		
P-60754-B		D-543186-C	<u>37 Conductors</u>	D-543636-A
	<u>20 Conductors</u>	D-543505-A		D-543636-B
<u>11 Conductors</u>			D-543317-A	
	D-543280-A	<u>28 Conductors</u>		
D-543651-A	D-543340-A		<u>38 Conductors</u>	<u>150 Conductors</u>
H-881958-6	D-543340-B	D-543384-B		
H-881958-7	D-543384-A	D-543384-E	D-543425-A	D-543584-A



D-59316-B

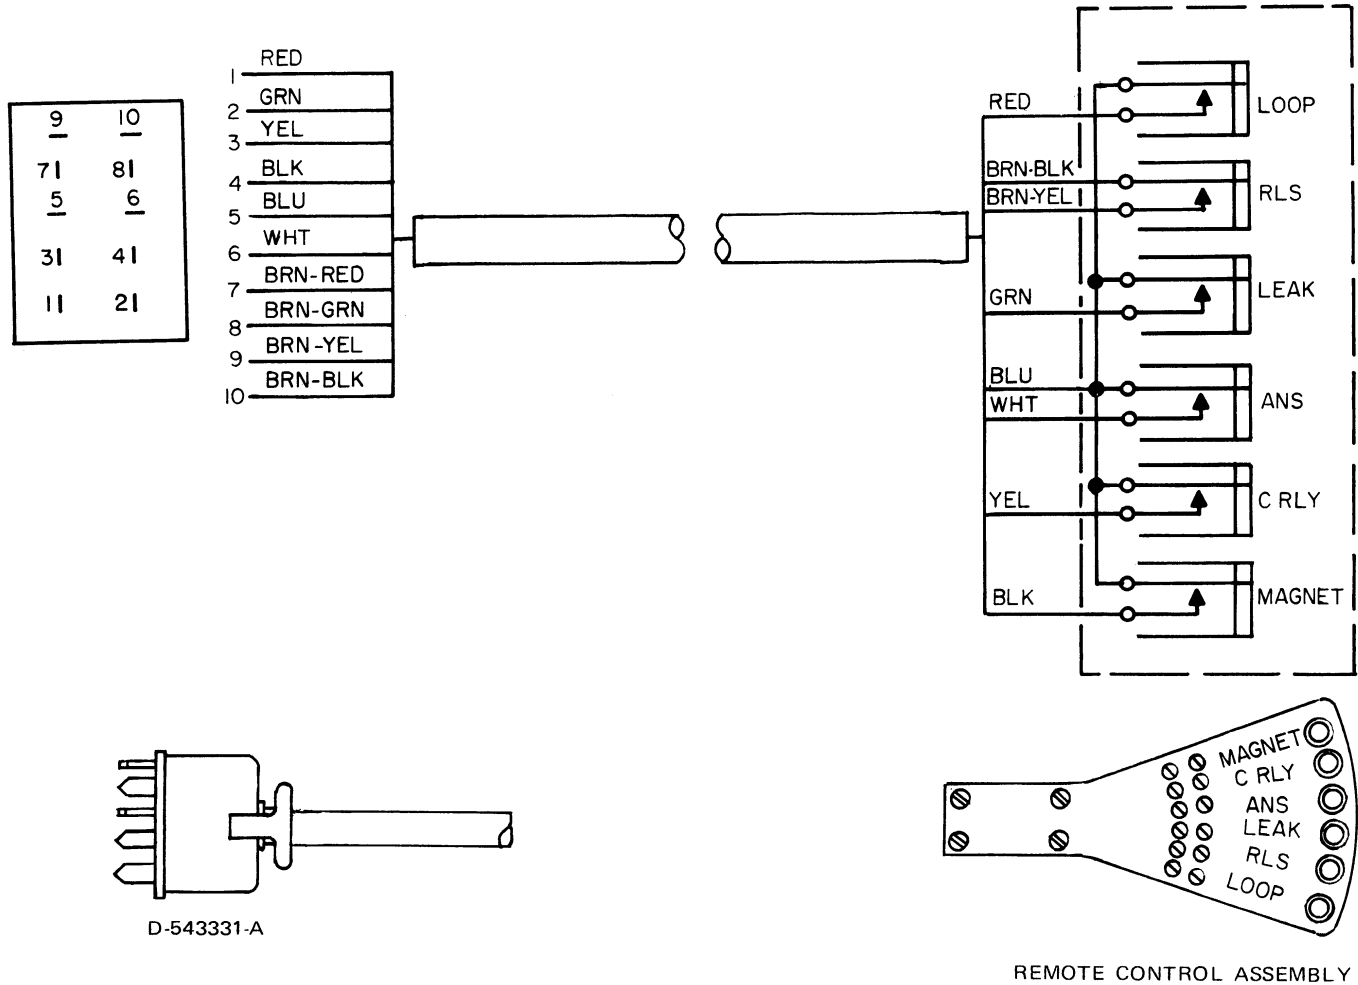

- (1) 8 CONDUCTOR CORD, PLUG, AND REMOTE CONTROL ASSEMBLY CONSISTING OF:
- (1) D-543331-A CORD AND PLUG ASSEMBLY (20'-0" LONG)
 - (1) REMOTE CONTROL ASSEMBLY (SEE DRAWING D-59316 FOR STOCKLIST)

SECTION 032-210-108
ISSUE 1

D-320243-A

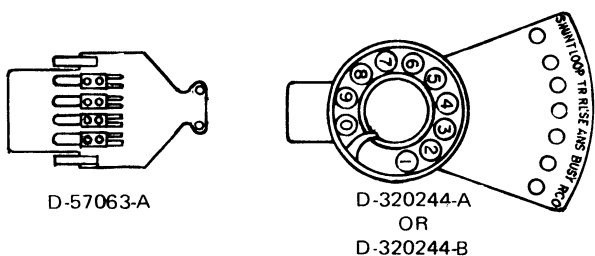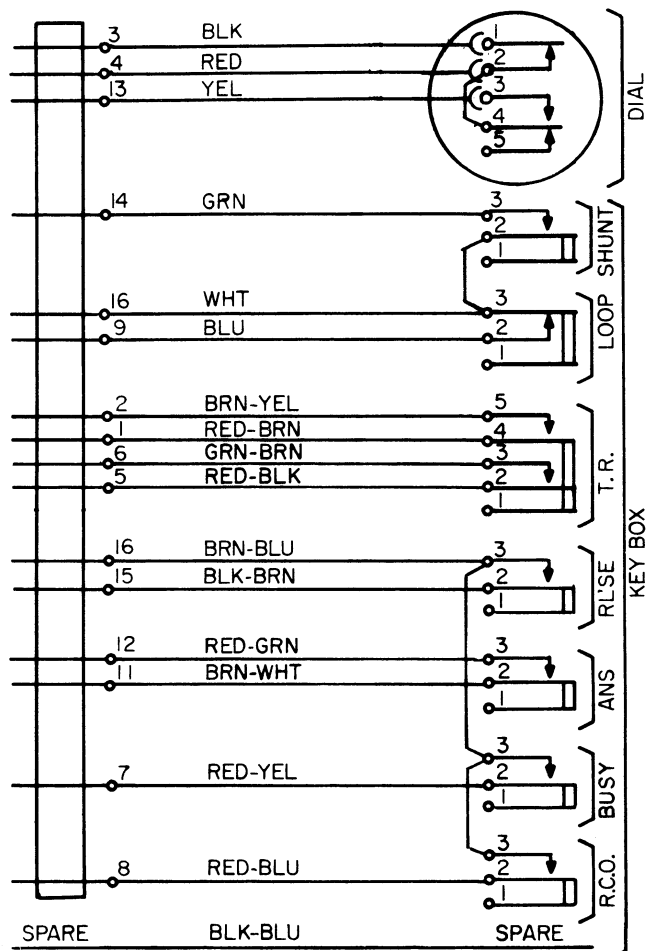


- (1) 16 CONDUCTOR CORD, TEST PLUG, DIAL AND KEYBOX ASSEMBLY CONSISTING OF:
- (1) D-542380-A CORD ASSEMBLY (16'-6" LONG)
 - (1) D-57063-A TEST PLUG ASSEMBLY
 - (1) D-320244-A DIAL AND KEYBOX ASSEMBLY (WITH DELAY DIAL)


D-320243-B

SAME AS D-320243-A EXCEPT USES D-320244-B DIAL AND KEYBOX ASSEMBLY (WITHOUT DELAY DIAL).

D-542338-A

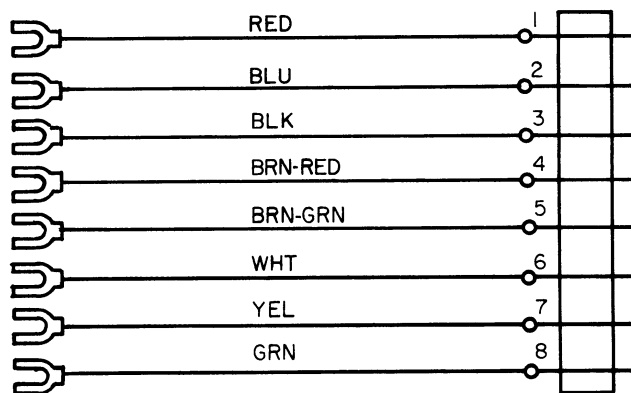



D-150152-B

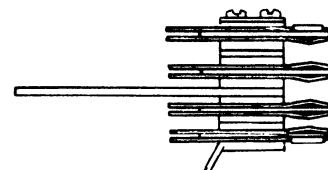

D-57038-A

- (1) 8 CONDUCTOR CORD AND TEST PLUG ASSEMBLY CONSISTING OF:
- (1) 10'-0" LENGTH OF D-543285-A CORDAGE
 - (1) D-57038-A TEST PLUG
 - (8) D-150152-B TERMINAL



D-542380-A

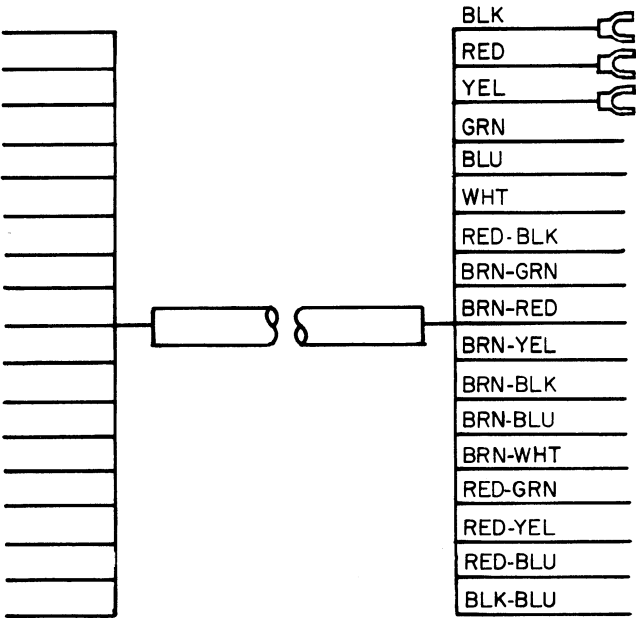

D-150152-B

- (1) 17 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) 16'-6" LENGTH OF D-543285-J CORDAGE
 - (3) D-150152-B TERMINAL


D-542430-A

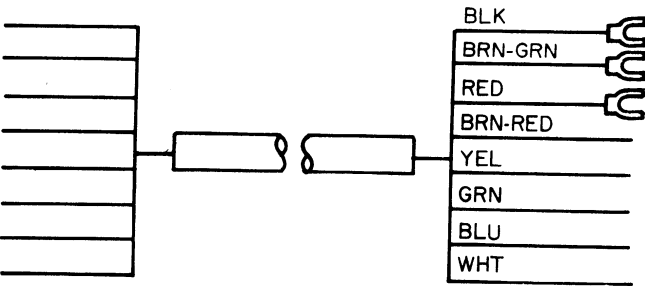

D-150152-B

- (1) 8 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) 16'-0" LENGTH OF D-543285-A CORDAGE
 - (3) D-150152-B TERMINAL

D-542996-A


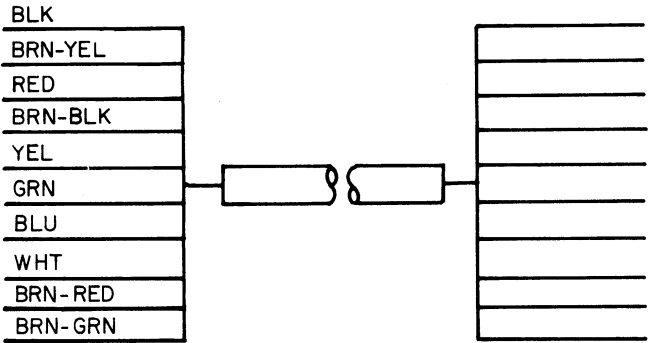


- (1) 10 CONDUCTOR CORD BLANK CONSISTING OF:
- (1) 12'-0" LENGTH OF D-543285-A CORDAGE

D-542996-B

SAME AS D-542996-A EXCEPT CORDAGE IS 8'-0" LONG.


D-543014-A

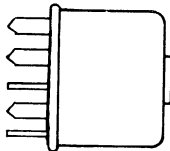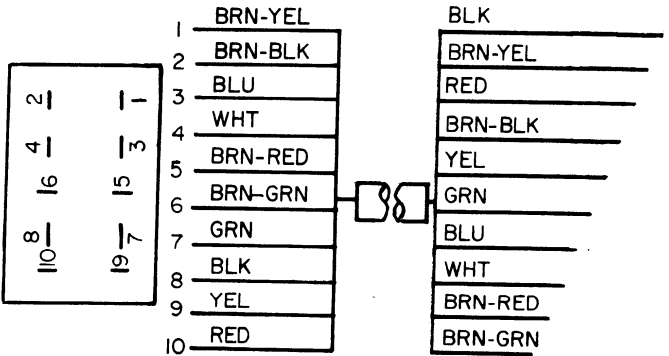

FD-1003-AW


- (1) 10 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 18'-7" LENGTH OF D-543285-A CORDAGE
 - (1) FD-1003-AW PLUG AND CAP

D-543030-A

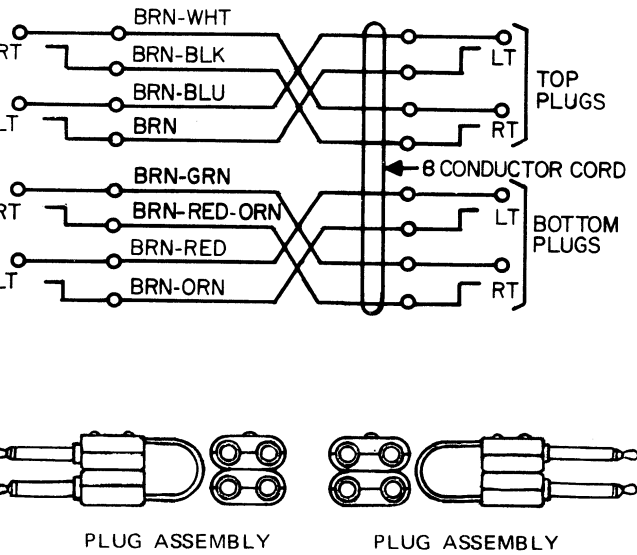


- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) CD-564424 CORD ASSEMBLY (2'-0" LONG)
 - (2) PLUG ASSEMBLIES, EACH CONSISTING OF:
 - (4) D-57096-A PLUG
 - (2) D-52066-A SHELL HALF (INSIDE)
 - (2) D-52074-A SHELL HALF (OUTSIDE)
 - (1) D-32289-A HANDLE
 - (2) 5-40 X 1-1/4" ROUND HEAD IRON
MACHINE SCREW

D-543057-A

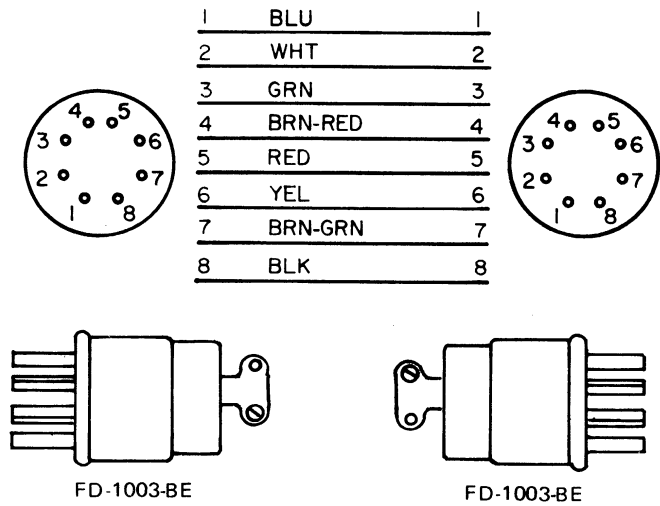

- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 2'- 4-1/2" LENGTH OF D-543285-A CORDAGE
 - (2) FD-1003-BE PLUG AND CAP

D-543080-A


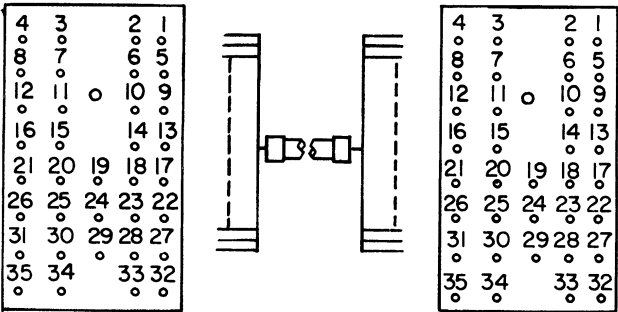


WIRING TABLE - BOTH PLUGS			
TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	ORN	19	SL-WHT
2	GRN	20	RED-BRN
3	BRN	21	RED-ORN
4	SL	22	RED-GRN
5	BLU-WHT	23	RED-BRN
6	BLU-ORN	24	RED-SL
7	BLU-GRN	25	RED-BLU-WHT
8	BLU-BRN	26	RED-BLU-ORN
9	BLU-SL	27	RED-BLU-GRN
10	ORN-WHT	28	RED-BLU-BRN
11	ORN-GRN	29	RED-WHT
12	ORN-BRN	30	BLK-BLU
13	ORN-SL	31	BLK-ORN
14	GRN-WHT	32	BLK-GRN
15	GRN-BRN	33	BLK-BRN
16	GRN-SL	34	RED
17	BRN-WHT	35	BLU
18	BRN-SL		



- (1) 35 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (35) 2'5" LENGTHS OF 10/32 22 AWG INSULATED
TINNED COPPER WIRE
 - (1) 2'-0" LENGTH OF BLACK NYLON BRAID
 - (2) FD-1003-AJ PLUG AND CAP

D-543121-A

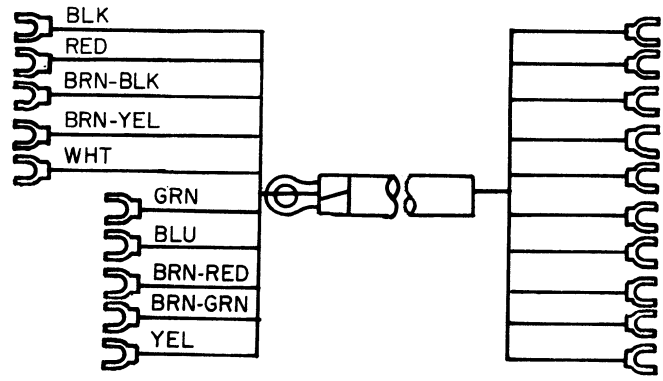

D-150152-B





D-150152-B

- (1) 10 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) 6'-3" LENGTH OF D-543285-A CORDAGE (BLACK)
 - (20) D-150152-B TERMINAL

D-543121-B

SAME AS D-543121-A EXCEPT CORDAGE IS D-543098-A (GRAY)


D-543170-A

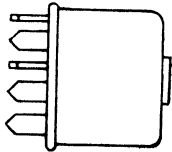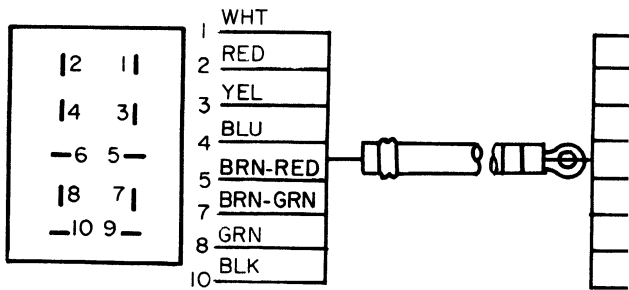

FD-1003-AW


- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 10'-0" LENGTH OF D-543285-A CORDAGE
 - (1) FD-1003-AW PLUG AND CAP

D-543186-A

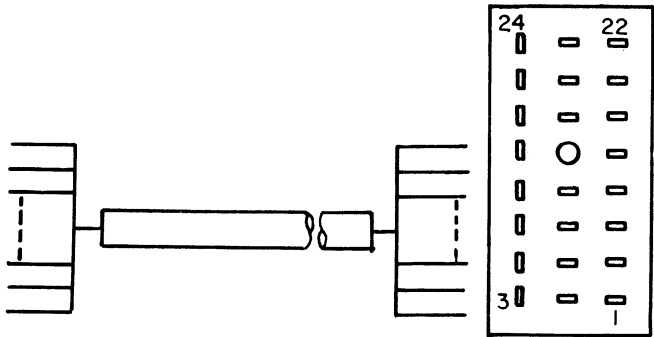

WIRING TABLE


TERM-INAL	CONDUCTOR COLOR	TERM-INAL	CONDUCTOR COLOR
1	BLK	13	RED-YEL
2	YEL	14	RED-BLU
3	GRN	15	BLK-BLU
4	WHT	16	BLK-WHT
5	SL-YEL	17	GRN-WHT
6	BRN-GRN	18	SL-BLK
7	BRN-RED	19	SL-BLU
8	BRN-YEL	20	SL-WHT
9	BRN-BLK	21	SL-BRN
10	BRN-BLU	22	RED
11	BRN-WHT	23	-
12	RED-GRN	24	BLU

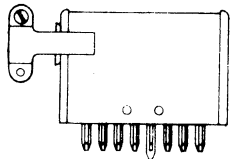

FD-1003-BF


- (1) 23 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 3'-0" LENGTH OF D-543285-J CORDAGE
 - (1) FD-1003-BF PLUG AND CAP

D-543186-B

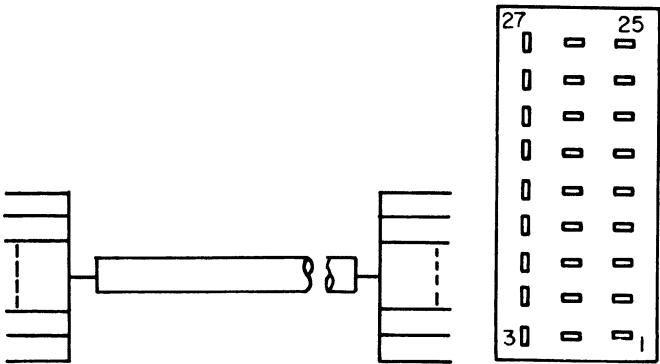

WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BLK	15	BLK-BLU
2	YEL	16	BLK-WHT
3	GRN	17	GRN-WHT
4	WHT	18	SL-BLK
5	SL-YEL	19	SL-BLU
6	BRN-GRN	20	SL-WHT
7	BRN-RED	21	SL-BRN
8	BRN-YEL	22	YEL-BLU
9	BRN-BLK	23	RED-BLK
10	BRN-BLU	24	BRN
11	BRN-WHT	25	RED
12	RED-GRN	26	RED-WHT
13	RED-YEL	27	BLU
14	RED-BLU		

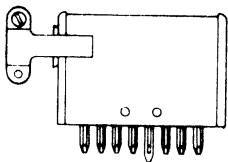



FD-1003-BH

- (1) 27 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 3'-0" LENGTH OF D-543285-J CORDAGE
 - (1) FD-1003-BH PLUG AND CAP


D-543186-C

SAME AS D-543186-B EXCEPT CORDAGE IS
2'-0" LONG.

D-543188-A

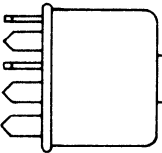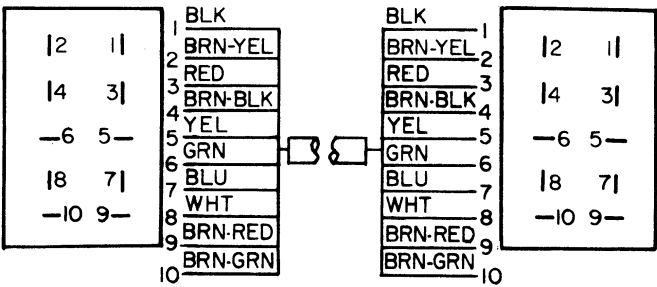

FD-1003-AW

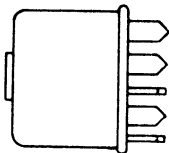

FD-1003-AW

- (1) 10 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 8'-0" LENGTH OF D-543285-A CORDAGE
 - (2) FD-1003-AW PLUG AND CAP


D-543188-B

SAME AS D-543188-A EXCEPT CORDAGE IS
12'-0" LONG.

D-543188-C


SAME AS D-543188-A EXCEPT CORDAGE IS
5'-6" LONG.

D-543189-A

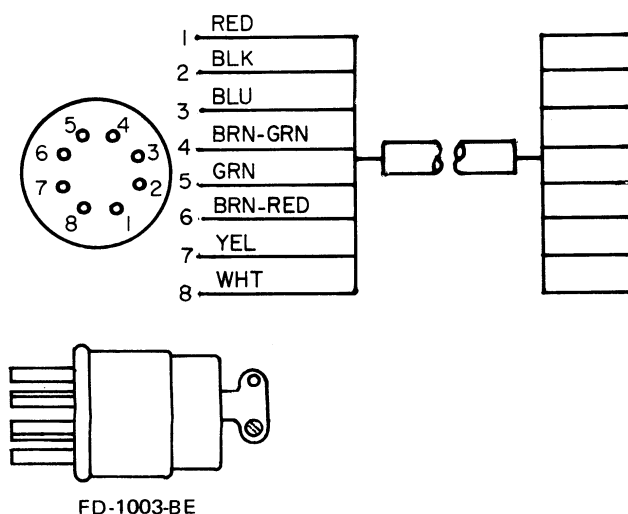

- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 5'-0" LENGTH OF D-543285-A CORDAGE
 - (1) FD-1003-BE PLUG AND CAP

D-543264-A

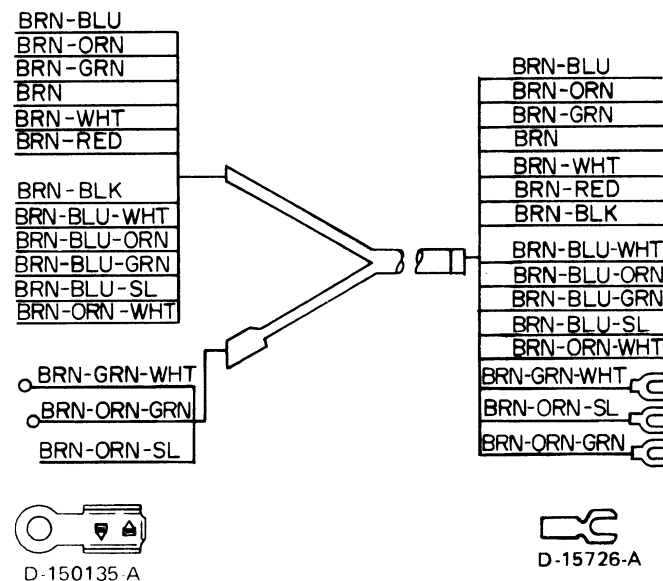


- (1) 15 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) D-543265-A CORD BLANK (16'- 6-7/8" LONG)
 - (2) D-150135-A TERMINAL
 - (3) D-15726-A TERMINAL

D-543265-A


SAME AS D-543264-A LESS THE TERMINALS.

D-543202-A

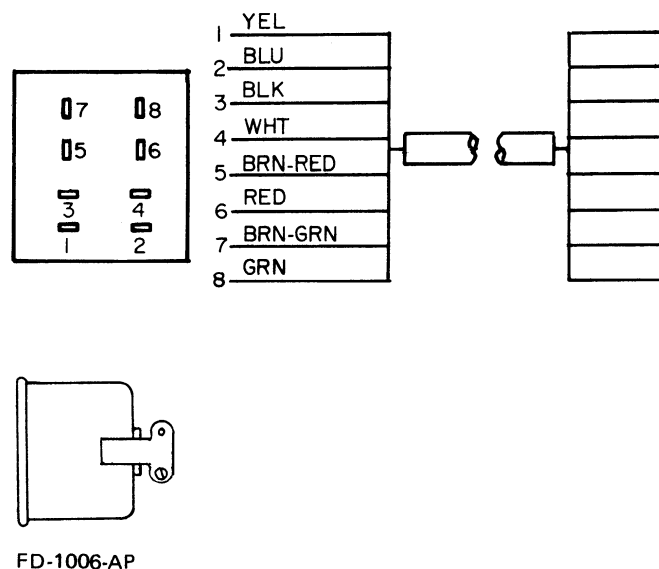

- (1) 8 CONDUCTOR CORD AND RECEPTACLE ASSEMBLY
CONSISTING OF:
- (1) 4'-0" LENGTH OF D-543285-B CORDAGE
 - (1) FD-1006-AP RECEPTACLE AND CAP


D-543266-A

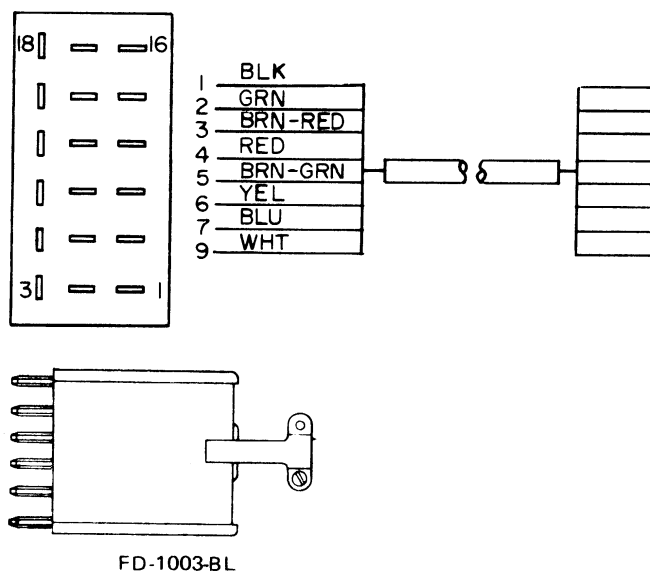

- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 13'-3" LENGTH OF D-543285-A CORDAGE
 - (1) FD-1003-BL PLUG AND CAP


SECTION 032-210-108
ISSUE 1

D-543267-A

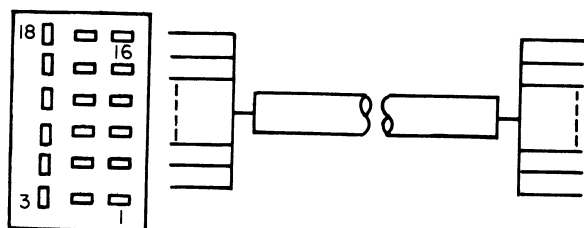

WIRING TABLE

TERMINAL	CONDUCTOR COLOR
1	BRN-RED
2	BRN-YEL
3	BRN-BLK
4	BRN-BLU
5	BRN-WHT
6	RED-GRN
7	RED-YEL
8	-
9	RED-BRN
10	BLK
11	RED
12	YEL
13	GRN
14	BLU
15	WHT
16	YEL-SL
17	-
18	BRN-GRN


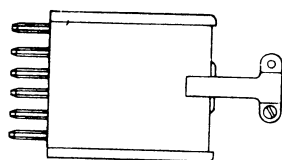


FD-1003-BL

- (1) 16 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:

- (1) 13'-3" LENGTH OF D-543285-J CORDAGE
- (1) FD-1003-BL PLUG AND CAP

D-543279-A

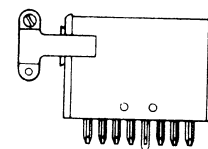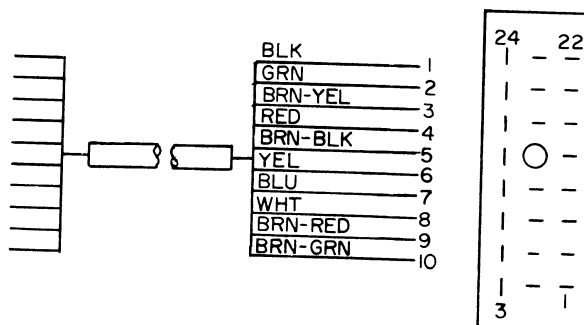


FD-1003-BF

- (1) 10 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:


- (1) 13'-3" LENGTH OF D-543279-A CORDAGE
- (1) FD-1003-BF PLUG AND CAP

D-543283-A

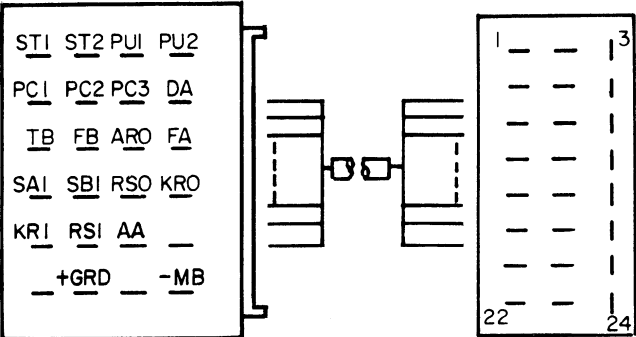

WIRING TABLE

TERMINAL BLOCK DESIG- NATION	CONDUCTOR COLOR	PLUG PIN NO.
ST1	BLK	1
ST2	YEL	2
PU1	GRN	3
PU2	WHT	4
PC1	SL-YEL	5
PC2	BRN-GRN	6
PC3	BRN-RED	7
DA	BRN-YEL	8
TB	BRN-BLK	9
FB	BRN-BLU	10
ARO	BRN-WHT	11
FA	RED-GRN	12
SA1	RED-YEL	13
SB1	RED-BLU	14
RS0	BLK-BLU	15
KR0	BLK-WHT	16
KR1	GRN-WHT	17
RS1	SL-BLK	18
AA	SL-BLU	19
(ROW 1 PIN 5)	SL-WHT	20
(ROW 4 PIN 6)	SL-BRN	21
+GRD	RED	22
-	-	23
-MB	BLU	24

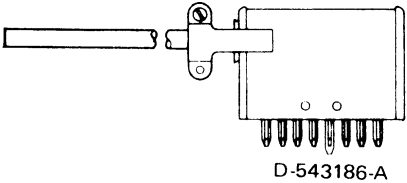


D-543186-A

- (1) 23 CONDUCTOR CORD, PLUG AND TERMINAL
BLOCK ASSEMBLY CONSISTING OF:


- (1) D-543186-A CORD AND PLUG ASSEMBLY
(1) D-660230-A 4 X 6 TERMINAL BLOCK

D-543280-A

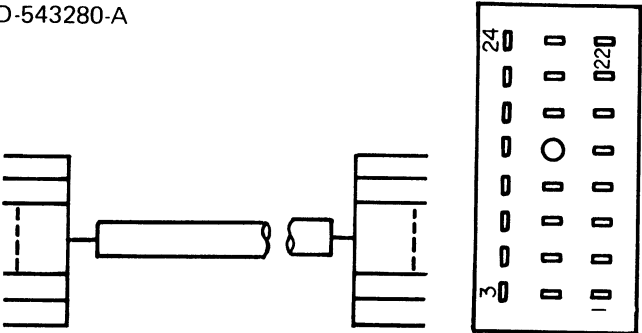

WIRING TABLE

TERMINAL	CONDUCTOR COLOR	TERMINAL	CONDUCTOR COLOR
1	BRN-RED	13	YEL
2	BRN-YEL	14	GRN
3	BRN-BLK	15	BLU
4	BRN-BLU	16	WHT
5	BRN-WHT	17	RED-BLK
6	RED-GRN	18	GRN-WHT
7	RED-YEL	19	BRN-GRN
8	BLK-BLU	20	SL-YEL
9	RED-BLU	21	-
10	BLK-WHT	22	-
11	BLK	23	-
12	RED	24	-

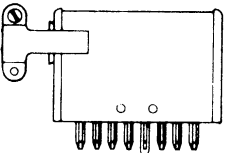


FD-1003-BF

- (1) 20 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:


- (1) 14'-6" LENGTH OF D-543285-J CORDAGE
(1) FD-1003-BF PLUG AND CAP

D-543283-B

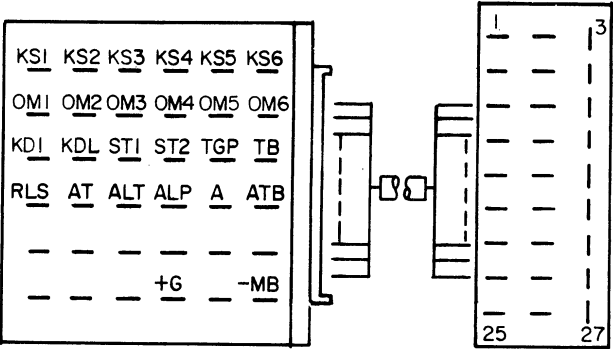

WIRING TABLE

TERMINAL BLOCK DESIG- NATION	CONDUCTOR COLOR	PLUG PIN NO.
KS1	BLK	1
KS2	YEL	2
KS3	GRN	3
KS4	WHT	4
KS5	SL-YEL	5
KS6	BRN-GRN	6
TGP	BRN-RED	7
ST1	BRN-YEL	8
ST2	BRN-BLK	9
TB	BRN-BLU	10
AT	BRN-WHT	11
ATB	RED-GRN	12
RLS	RED-YEL	13
A	RED-BLU	14
ALP	BLK-BLU	15
KD1	BLK-WHT	16
OM1	GRN-WHT	17
OM2	SL-BLK	18
OM3	SL-BLU	19
OM4	SL-WHT	20
OM5	SL-BRN	21
OM6	YEL-BLU	22
KDL	RED-BLK	23
ALT	BRN	24
+G	RED	25
-	RED-WHT	26
-MB	BLU	27

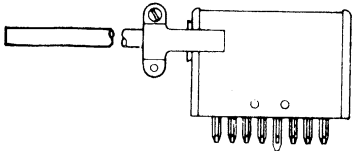


D-543186-B

(1) 26 CONDUCTOR CORD, PLUG, AND TERMINAL
BLOCK ASSEMBLY CONSISTING OF:


- (1) D-543186-B CORD AND PLUG ASSEMBLY
- (1) D-660231-A 6 X 6 TERMINAL
BLOCK
ASSEMBLY

D-543314-A

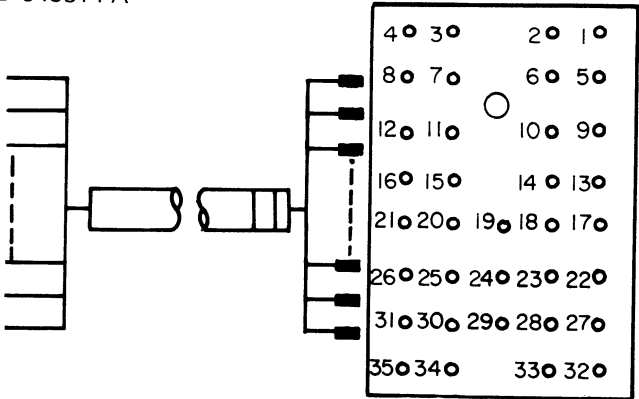


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	SL-BRN	19	-
2	BRN	20	GRN-BLU
3	YEL	21	GRN-WHT
4	BLK	22	YEL-BLK
5	SL	23	YEL-BLU
6	BLU-WHT	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	-
10	BRN-BLK	28	-
11	BRN-BLU	29	-
12	BRN-WHT	30	-
13	RED-GRN	31	-
14	RED-YEL	32	RED AND GRN
15	RED-BLK	33	SL-WHT
16	RED-BLU	34	-
17	RED-WHT	35	BLU AND WHT
18	GRN-YEL		



D-150122-A

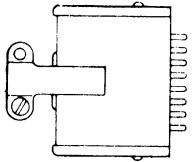


FD-1003-AJ

(1) 30 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:


- (1) 3'-0" LENGTH OF D-543285-K CORDAGE
- (1) FD-1003-AJ PLUG AND CAP
- (28) D-150122-A TERMINAL

D-543315-A

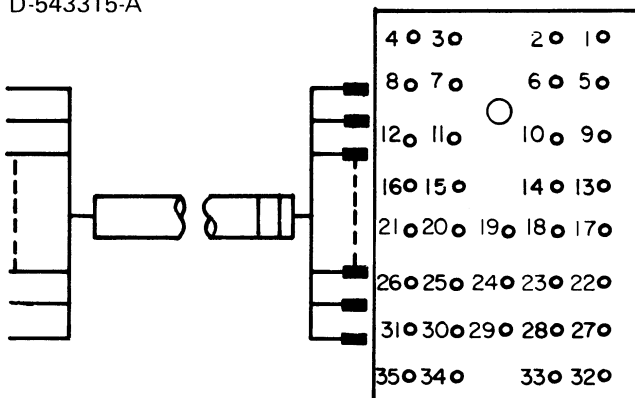


WIRING TABLE

TERMINAL	CONDUCTOR COLOR	TERMINAL	CONDUCTOR COLOR
1	BRN-RED	19	—
2	BRN-GRN	20	—
3	SL-WHT	21	—
4	BRN-YEL	22	—
5	BRN-BLK	23	—
6	BLK-BLU	24	—
7	RED-YEL	25	—
8	RED-GRN	26	—
9	BRN-BLU	27	BLK
10	BRN-WHT	28	—
11	RED-BLK	29	—
12	RED-BLU	30	—
13	BRN	31	—
14	GRN-WHT	32	RED AND GRN
15	YEL-BLK	33	—
16	—	34	—
17	SL-YEL	35	BLU AND WHT
18	SL-BLK		




D-150122-A

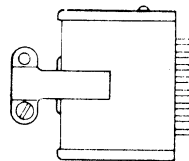

FD-1003-AJ


- (1) 22 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 3'-0" LENGTH OF D-543285-K CORDAGE
 - (1) FD-1003-AJ PLUG AND CAP
 - (20) D-150122-A TERMINAL

D-543316-A

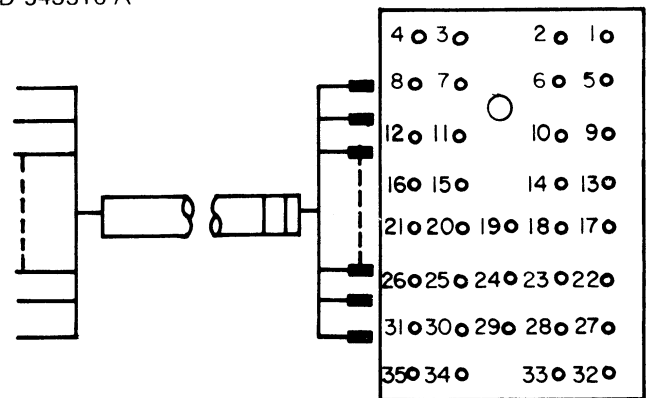


WIRING TABLE

TERMINAL	CONDUCTOR COLOR	TERMINAL	CONDUCTOR COLOR
1	RED	19	GRN-BLK
2	ORN-BLU	20	YEL-BLK
3	YEL	21	GRN-WHT
4	GRN	22	GRN-BLU
5	ORN-WHT	23	YEL-BLU
6	BLK	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	BLU-WHT
10	BRN-BLK	28	SL
11	BRN-BLU	29	SL-YEL
12	BRN-WHT	30	SL-BLK
13	RED-GRN	31	SL-BLU
14	RED-YEL	32	SL-WHT
15	RED-BLK	33	SL-BRN
16	GRN-YEL	34	BRN
17	RED-WHT	35	ORN-RED
18	RED-BLU		




D-150122-A

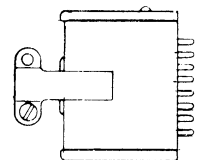

FD-1003-AJ


- (1) 35 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 3'-0" LENGTH OF D-543285-AE CORDAGE
 - (1) FD-1003-AJ PLUG AND CAP
 - (35) D-150122-A TERMINAL

D-543317-A

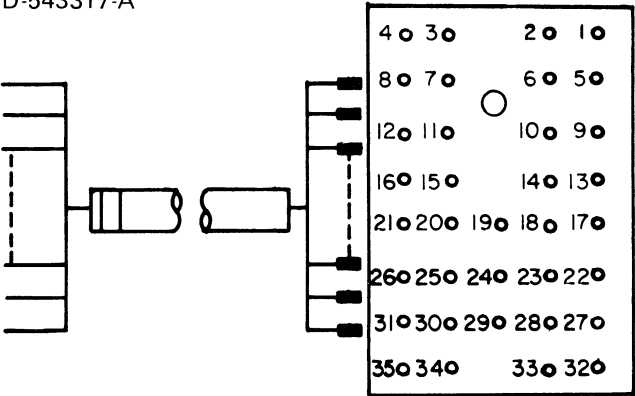


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	VIO-GRN	19	GRN-WHT
2	VIO-YEL	20	GRN-YEL
3	YEL	21	GRN-BLU
4	ORN	22	YEL-BLK
5	ORN-BLU	23	YEL-BLU
6	VIO	24	YEL-WHT
7	ORN-BLK	25	BLK-BLU
8	ORN-WHT	26	BLK-WHT
9	VIO-RED	27	BLU-WHT
10	BRN-BLK	28	SL-WHT
11	BRN-BLU	29	SL-YEL
12	RED-BLK	30	SL
13	RED-GRN	31	SL-BLU
14	BRN-YEL	32	SL-BLK
15	BRN-WHT	33	RED AND GRN
16	RED-BLU	34	BRN
17	RED-WHT	35	BLU AND WHT
18	GRN-BLK		




D-150122-A

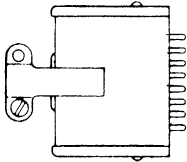

FD-1003-AJ


- (1) 37 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 3'-0" LENGTH OF D-543285-AE CORDAGE
 - (1) FD-1003-AJ PLUG AND CAP
 - (35) D-150122-A TERMINAL

D-543319-A

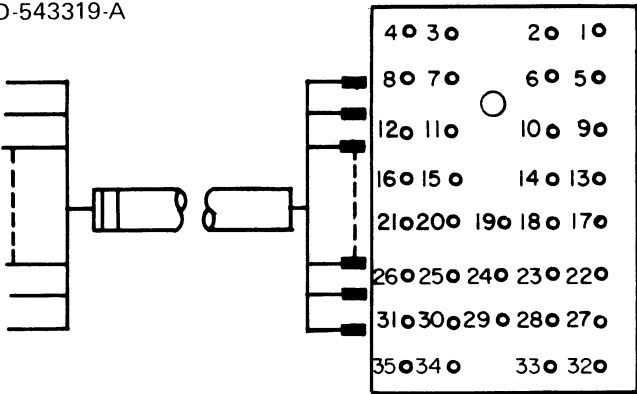


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BRN-RED	19	YEL-BLU
2	BRN-GRN	20	BLK-BLU
3	SL-YEL	21	BLK-WHT
4	SL-BLK	22	-
5	BRN-BLK	23	-
6	BRN-YEL	24	-
7	RED-YEL	25	-
8	RED-GRN	26	-
9	BRN-BLU	27	-
10	BRN-WHT	28	-
11	RED-BLK	29	-
12	RED-BLU	30	-
13	RED-WHT	31	-
14	GRN-YEL	32	BLK
15	GRN-BLK	33	RED AND GRN
16	GRN-BLU	34	-
17	GRN-WHT	35	BLU AND WHT
18	YEL-BLK		




D-150122-A

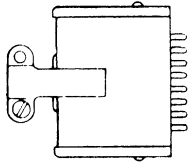

FD-1003-AJ


- (1) 26 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 3'-0" LENGTH OF D-543285-K CORDAGE
 - (1) FD-1003-AJ PLUG AND CAP
 - (24) D-150122-A TERMINAL

D-543331-A

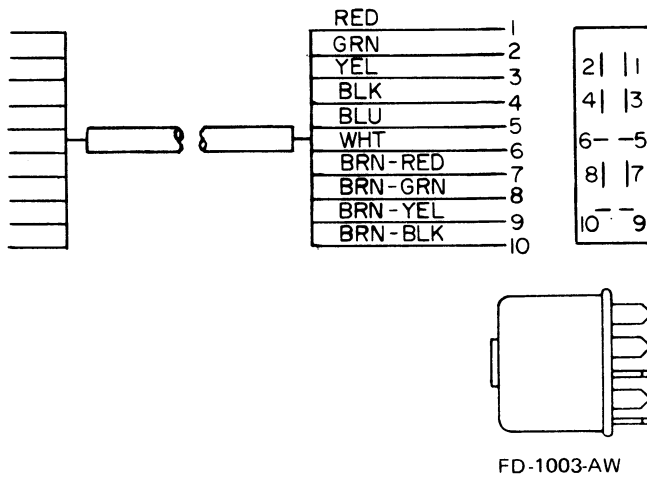


- (1) 10 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 20'-0" LENGTH OF D-543285-A CORDAGE
 - (1) FD-1003-AW PLUG AND CAP

D-543340-B

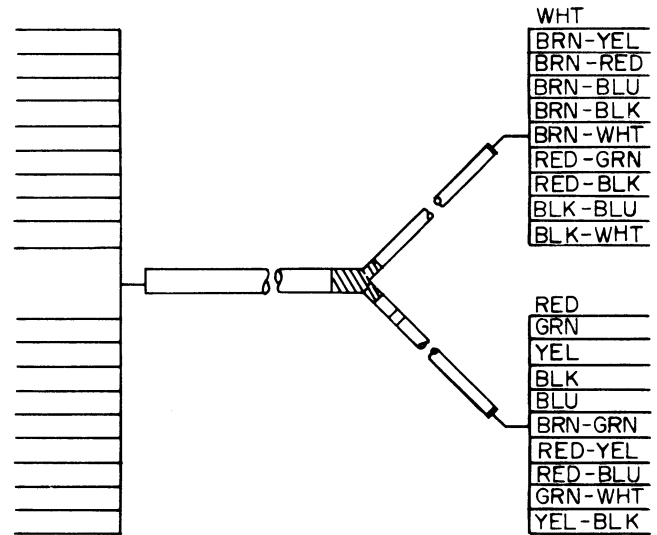


- (1) 20 CONDUCTOR PATCH CORD ASSEMBLY
CONSISTING OF:
- (1) 8'-6" LENGTH OF D-543285-E CORDAGE

D-543340-A

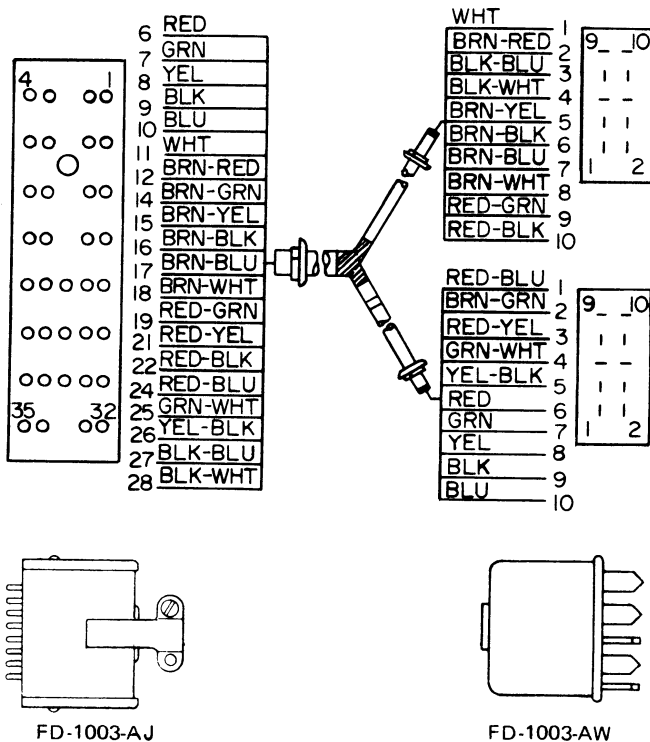

- (1) 20 CONDUCTOR "Y" CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) D-543340-B PATCH CORD (8'-6" LONG)
 - (1) FD-1003-AJ PLUG AND CAP
 - (2) FD-1003-AW PLUG AND CAP



D-543349-A

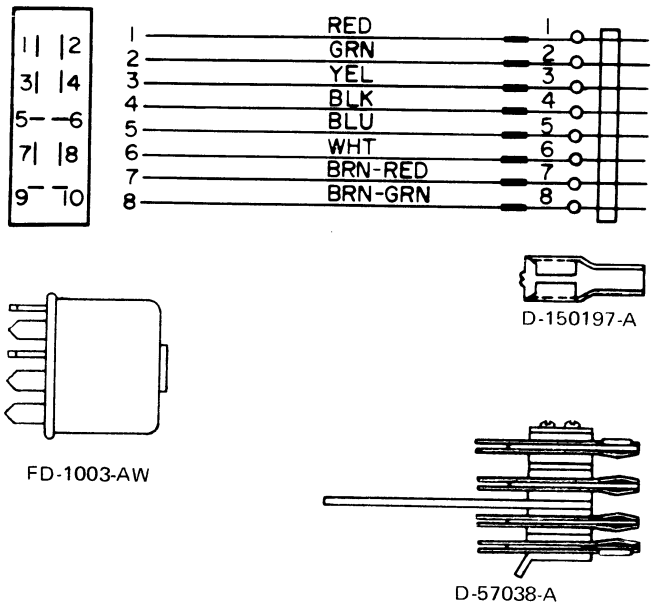

- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 12'- 3-1/2" LENGTH OF D-543285-B CORDAGE
 - (1) FD-1003-AW PLUG AND CAP
 - (8) D-150197-A TERMINAL
 - (1) D-57038-A TEST PLUG

D-543365-A

D-543352-A

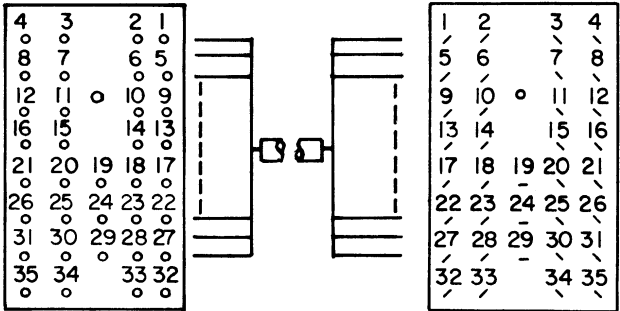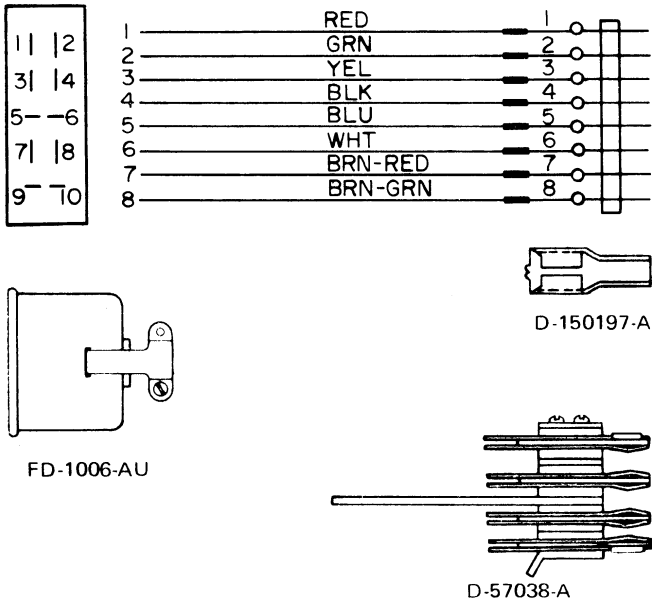

WIRING TABLE


TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	GRN-BLK
2	GRN	20	GRN-BLU
3	YEL	21	GRN-WHT
4	BLK	22	YEL-BLK
5	BLU	23	YEL-BLU
6	WHT	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	BLU-WHT
10	BRN-BLK	28	SL
11	BRN-BLU	29	SL-YEL
12	BRN-WHT	30	SL-BLK
13	RED-GRN	31	SL-BLU
14	RED-YEL	32	SL-WHT
15	RED-BLK	33	SL-BRN
16	RED-BLU	34	BRN
17	RED-WHT	35	—
18	GRN-YEL		

- (1) 8 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 10'-4" LENGTH OF D-543285-A CORDAGE
 - (1) FD-1006-AU RECEPTACLE AND CAP
 - (8) D-150197-A TERMINAL
 - (1) D-57038-A TEST PLUG




- (1) 34 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 8'-3" LENGTH OF D-543285-J CORDAGE
 - (1) FD-1003-AJ PLUG AND CAP
 - (1) FD-1006-AE RECEPTACLE AND CAP

D-543365-B

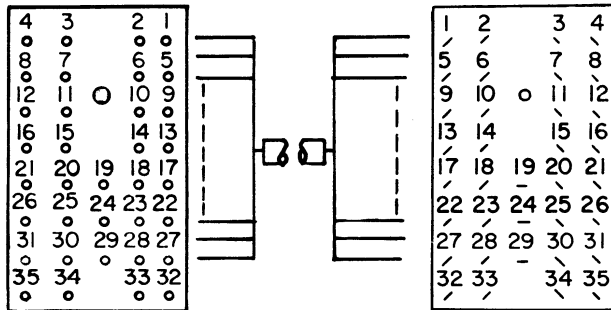


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	GRN-BLK
2	GRN	20	GRN-BLU
3	YEL	21	GRN-WHT
4	BLK	22	YEL-BLK
5	BLU	23	YEL-BLU
6	WHT	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	BLU-WHT
10	BRN-BLK	28	SL
11	BRN-BLU	29	SL-YEL
12	BRN-WHT	30	SL-BLK
13	RED-GRN	31	SL-BLU
14	RED-YEL	32	SL-WHT
15	RED-BLK	33	SL-BRN
16	RED-BLU	34	BRN
17	RED-WHT	35	ORN-RED
18	GRN-YEL		

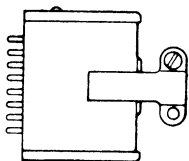

FD-1003-AJ

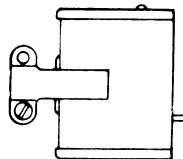


FD-1006-AE

- (1) 35 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:


- (1) 15'-3" LENGTH OF D-543285-AE CORDAGE
- (1) FD-1003-AJ PLUG AND CAP
- (1) FD-1006-AE RECEPTACLE AND CAP

D-543365-C

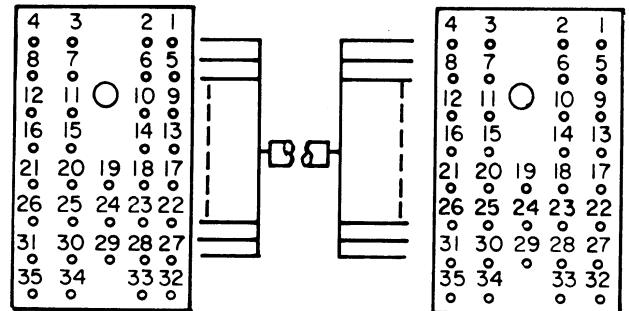


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	GRN-BLK
2	GRN	20	GRN-BLU
3	YEL	21	GRN-WHT
4	BLK	22	YEL-BLK
5	BLU	23	YEL-BLU
6	WHT	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	BLU-WHT
10	BRN-BLK	28	SL
11	BRN-BLU	29	SL-YEL
12	BRN-WHT	30	SL-BLK
13	RED-GRN	31	SL-BLU
14	RED-YEL	32	SL-WHT
15	RED-BLK	33	SL-BRN
16	RED-BLU	34	BRN
17	RED-WHT	35	—
18	GRN-YEL		

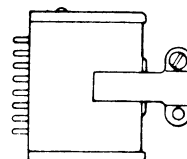

FD-1003-AJ

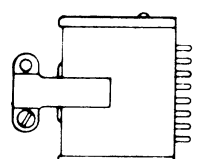


FD-1003-AJ

- (1) 34 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:

- (1) 12'-3" LENGTH OF D-543285-J CORDAGE
- (2) FD-1003-AJ PLUG AND CAP


D-543369-A

D-543365-D

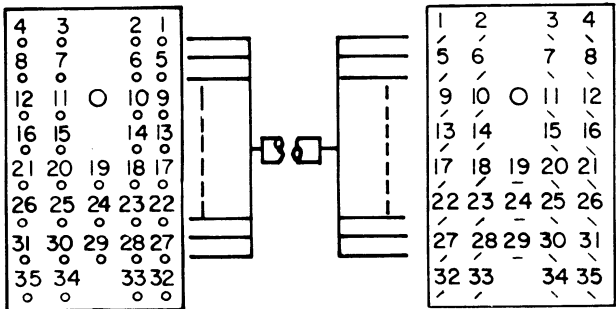


WIRING TABLE

TERMINAL	CONDUCTOR COLOR	TERMINAL	CONDUCTOR COLOR
1	RED	19	GRN-BLK
2	GRN	20	GRN-BLU
3	YEL	21	GRN-WHT
4	BLK	22	YEL-BLK
5	BLU	23	YEL-BLU
6	WHT	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	BLU-WHT
10	BRN-BLK	28	SL
11	BRN-BLU	29	SL-YEL
12	BRN-WHT	30	SL-BLK
13	RED-GRN	31	SL-BLU
14	RED-YEL	32	SL-WHT
15	RED-BLK	33	SL-BRN
16	RED-BLU	34	BRN
17	RED-WHT	35	ORN-RED
18	GRN-YEL		



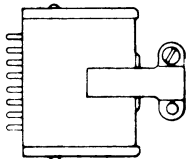


FD-1003-AJ

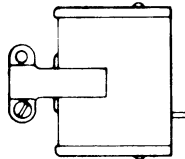

FD-1006-AE


- (1) 35 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 8'-3" LENGTH OF D-543285-AE CORDAGE
 - (1) FD-1003-AJ PLUG AND CAP
 - (1) FD-1006-AE RECEPTACLE AND CAP

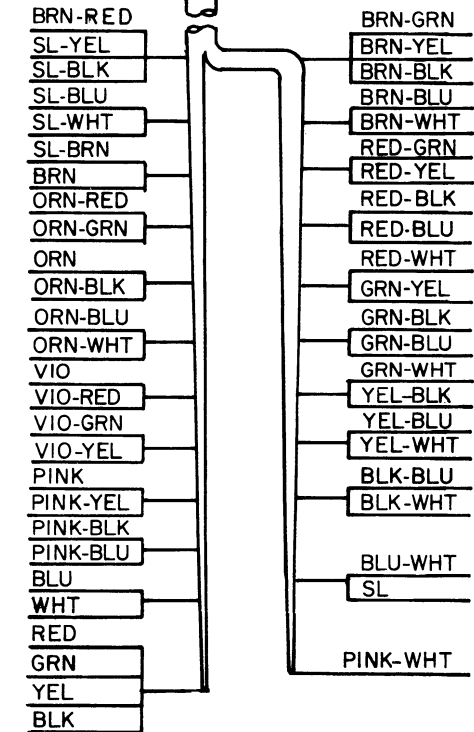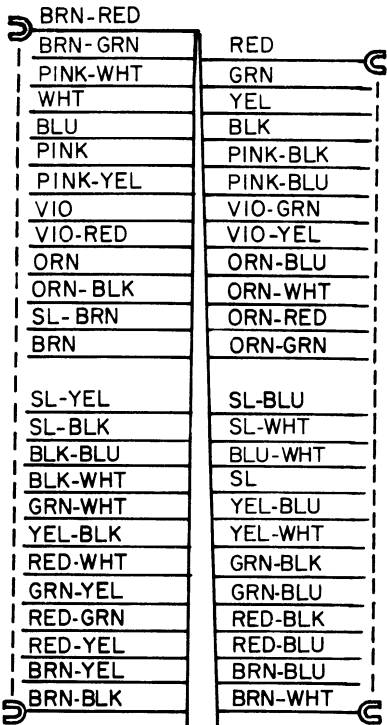

D-150152-B


- (1) 49 CONDUCTOR FORMED CORD ASSEMBLY CONSISTING OF:
- (1) 9'-3" LENGTH OF D-543285-AE CORDAGE
 - (49) D-150152-B TERMINAL

D-543371-A

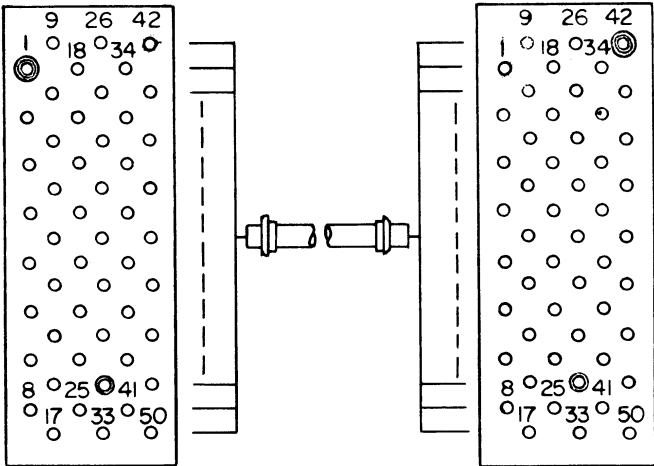


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	26	BLK-WHT
2	GRN	27	BLU-WHT
3	YEL	28	SL
4	BLK	29	SL-YEL
5	BLU	30	SL-BLK
6	WHT	31	SL-BLU
7	BRN-RED	32	SL-WHT
8	BRN-GRN	33	SL-BRN
9	BRN-YEL	34	BRN
10	BRN-BLK	35	ORN-RED
11	BRN-BLU	36	ORN-GRN
12	BRN-WHT	37	ORN
13	RED-GRN	38	ORN-BLK
14	RED-YEL	39	ORN-BLU
15	RED-BLK	40	ORN-WHT
16	RED-BLU	41	VIO
17	RED-WHT	42	VIO-RED
18	GRN-YEL	43	VIO-GRN
19	GRN-BLK	44	VIO-YEL
20	GRN-BLU	45	-
21	GRN-WHT	46	-
22	YEL-BLK	47	-
23	YEL-BLU	48	-
24	YEL-WHT	49	-
25	BLK-BLU	50	-

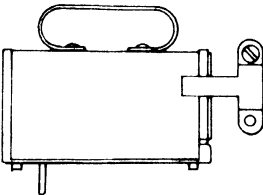


FD-1006-AJ

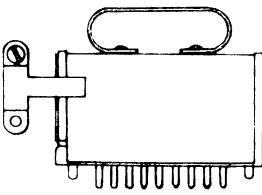

FD-1003-AS


- (1) 44 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 20'-5" LENGTH OF D-543285-AE CORDAGE
 - (1) FD-1006-AJ RECEPTACLE AND CAP
 - (1) FD-1003-AS PLUG AND CAP

D-543371-B

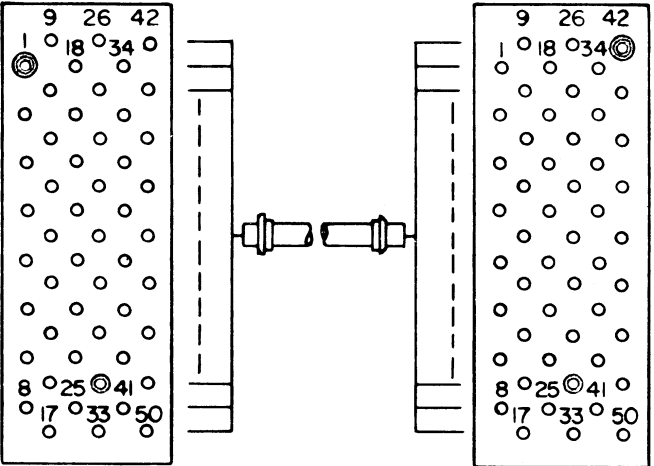


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	26	BLK-WHT
2	GRN	27	BLU-WHT
3	YEL	28	SL
4	BLK	29	SL-YEL
5	BLU	30	SL-BLK
6	WHT	31	SL-BLU
7	BRN-RED	32	SL-WHT
8	BRN-GRN	33	SL-BRN
9	BRN-YEL	34	BRN
10	BRN-BLK	35	ORN-RED
11	BRN-BLU	36	ORN-GRN
12	BRN-WHT	37	ORN
13	RED-GRN	38	ORN-BLK
14	RED-YEL	39	ORN-BLU
15	RED-BLK	40	ORN-WHT
16	RED-BLU	41	VIO
17	RED-WHT	42	VIO-RED
18	GRN-YEL	43	VIO-GRN
19	GRN-BLK	44	VIO-YEL
20	GRN-BLU	45	PINK
21	GRN-WHT	46	PINK-YEL
22	YEL-BLK	47	PINK-BLK
23	YEL-BLU	48	PINK-BLU
24	YEL-WHT	49	PINK-WHT
25	BLK-BLU	50	PINK-BRN

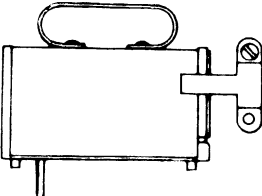


FD-1006-AJ

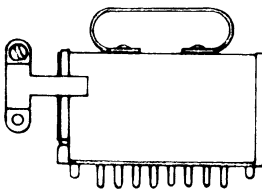

FD-1003-AS


- (1) 44 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 20'-5" LENGTH OF D-543285-AE CORDAGE
 - (1) FD-1006-AJ RECEPTACLE AND CAP
 - (1) FD-1003-AS PLUG AND CAP

D-543375-A

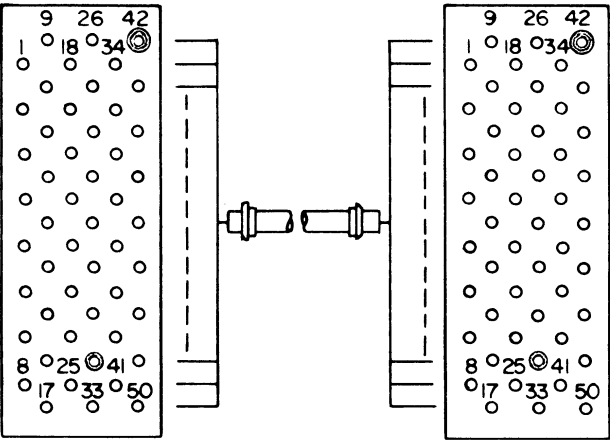

WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	26	BLK-WHT
2	GRN	27	BLU-WHT
3	YEL	28	SL
4	BLK	29	SL-YEL
5	BLU	30	SL-BLK
6	WHT	31	SL-BLU
7	BRN-RED	32	SL-WHT
8	BRN-GRN	33	SL-BRN
9	BRN-YEL	34	BRN
10	BRN-BLK	35	ORN-RED
11	BRN-BLU	36	ORN-GRN
12	BRN-WHT	37	ORN
13	RED-GRN	38	ORN-BLK
14	RED-YEL	39	ORN-BLU
15	RED-BLK	40	ORN-WHT
16	RED-BLU	41	VIO
17	RED-WHT	42	VIO-RED
18	GRN-YEL	43	VIO-GRN
19	GRN-BLK	44	VIO-YEL
20	GRN-BLU	45	PINK
21	GRN-WHT	46	PINK-YEL
22	YEL-BLK	47	PINK-BLK
23	YEL-BLU	48	PINK-BLU
24	YEL-WHT	49	PINK-WHT
25	BLK-BLU	50	PINK-BRN

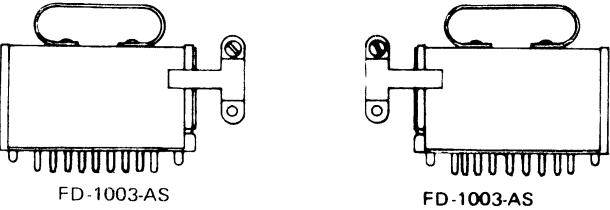


- (1) 50 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 12'-6" LENGTH OF D-543285-AE CORDAGE
 - (2) FD-1003-AS PLUG AND CAP

D-543375-B

SAME AS D-543375-A EXCEPT TERMINAL 26 IS
STRAPPED TO TERMINAL 27 AND TERMINAL 28
IS STRAPPED TO TERMINAL 29.

D-543379-A

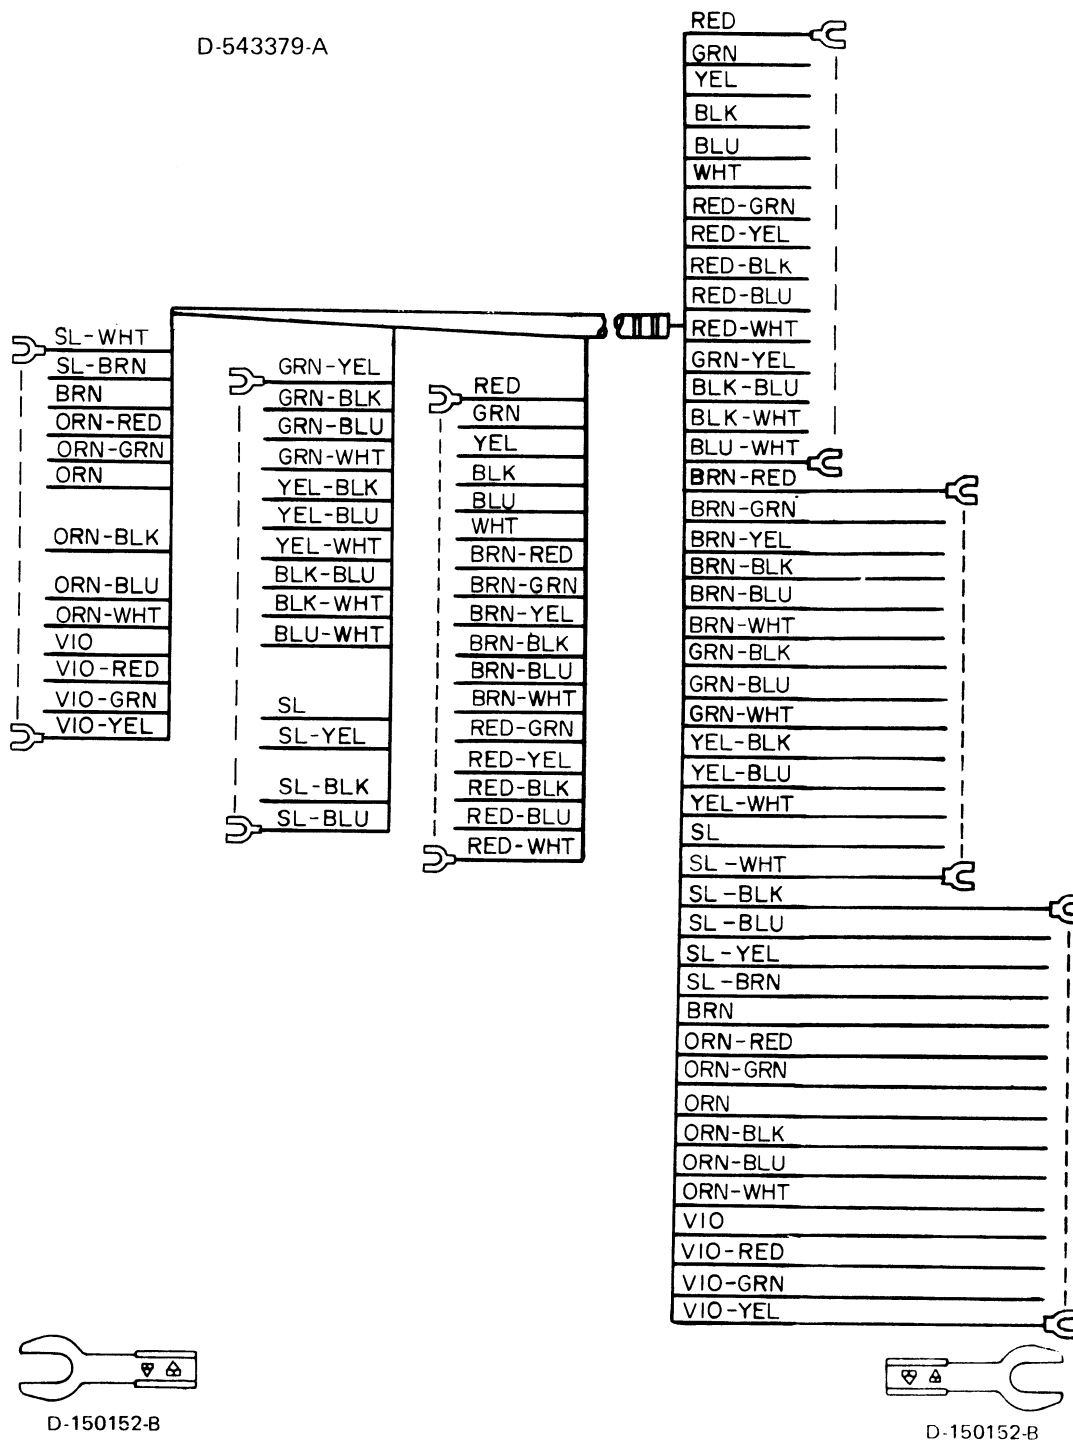


- (1) 44 CONDUCTOR FORMED CORD ASSEMBLY
CONSISTING OF:

- (1) 4'-6" LENGTH OF D-543285-AE CORDAGE
(88) D-150152-B TERMINAL

D-543379-B


SAME AS D-543379-A EXCEPT CORDAGE IS
8'-0" LONG.

D-543382-A

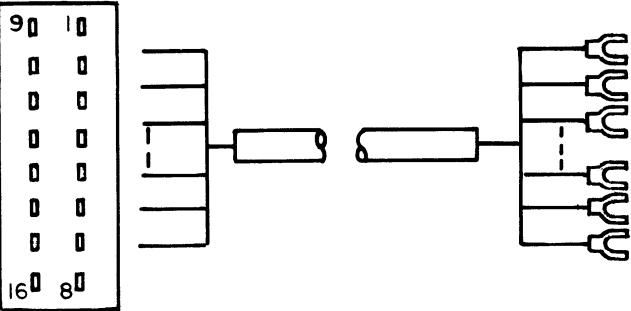


WIRING TABLE

TER-MINAL	CONDUCTOR COLOR	TER-MINAL	CONDUCTOR COLOR
1	RED	9	BRN-YEL
2	GRN	10	BRN-BLK
3	YEL	11	BRN-BLU
4	BLK	12	BRN-WHT
5	BLU	13	RED-GRN
6	WHT	14	RED-YEL
7	BRN-RED	15	RED-BLK
8	BRN-GRN	16	RED-BLU

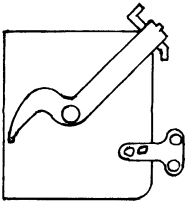

FD-1006-AY






D-150152-B

(1) 16 CONDUCTOR CORD AND RECEPTACLE ASSEMBLY
CONSISTING OF:

- (1) 9'-0" LENGTH OF D-543285-D CORDAGE
- (1) FD-1006-AY RECEPTACLE AND CAP
- (16) D-150152-B TERMINAL

D-543384-A

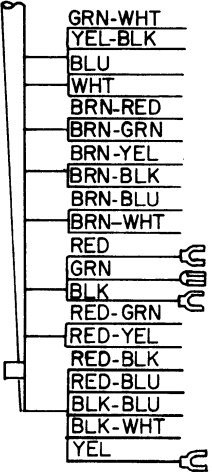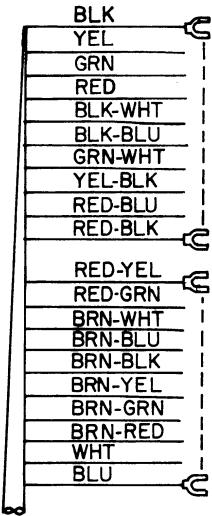

D-150152-B




D-150197-F

(1) 20 CONDUCTOR FORMED CORD ASSEMBLY
CONSISTING OF:

- (1) 8'-8" LENGTH OF D-543285-K CORDAGE (GRAY)
- (23) D-150152-B TERMINAL
- (1) D-150197-F TERMINAL

D-543400-A

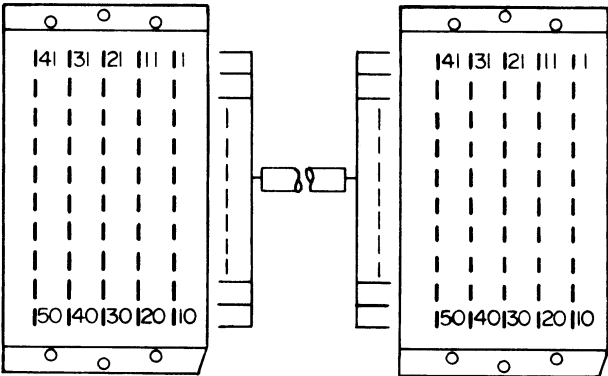

D-543384-D

SAME AS D-543384-A EXCEPT CORDAGE IS D-543285-W (SAND BEIGE).

D-543384-E

SAME AS D-543384-B EXCEPT CORDAGE IS D-543285-W (SAND BEIGE).


D-543384-F

SAME AS D-543384-C EXCEPT CORDAGE IS D-543285-AF (SAND BEIGE).


WIRING DIAGRAM - BOTH ENDS

TER-M INAL	CONDUCTOR COLOR	TER-M INAL	CONDUCTOR COLOR
1	SL-YEL	26	SL
2	SL-RED	27	SL-WHT
3	RED-SL	28	GRN
4	BLU-BLK	29	GRN-WHT
5	BLK-BLU	30	BRN-BLK
6	ORN-BLK	31	YEL-BRN
7	BLK-ORN	32	BLU-RED-WHT
8	ORN-WHT	33	RED-BLU
9	WHT-ORN	34	BLU-RED
10	GRN-BLK	35	YEL-ORN
11	YEL-SL	36	YEL-BLU
12	ORN-RED	37	WHT-SL
13	GRN-RED-WHT	38	BRN
14	BRN-RED	39	WHT-GRN
15	BRN-RED-WHT	40	BLK-BRN
16	BLU- WHT	41	GRN-RED
17	WHT-BLU	42	RED-GRN
18	BLU	43	GRN-YEL
19	ORN	44	YEL-GRN
20	BLK-GRN	45	ORN-YEL
21	BRN-YEL	46	BLU-YEL
22	RED-ORN	47	BLK-SL
23	ORN-RED-WHT	48	SL-BLK
24	RED-BRN	49	WHT-BRN
25	SL-RED-WHT	50	BRN-WHT

D-543399-A




- (1) 64 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (4) 5'- 2-1/2" LENGTHS OF D-543285-D CORDAGE HEAT BONDED ADJACENT TO EACH OTHER


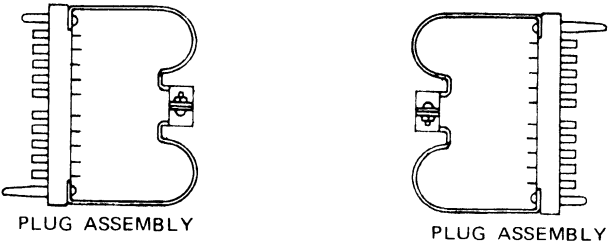


- (1) 50 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
 - (1) 1'- 4-7/16" LENGTH OF D-910011-A CORDAGE
 - (2) PLUG ASSEMBLIES EACH CONSISTING OF:
 - (1) FD-1005-CF PLUG
 - (2) FD-1032-BD BRACKET HALF
 - (6) D-762044-F SCREW 4-40 X 7/16"
 - (6) D-77299-C HEX NUT 4-40
 - (2) D-17541-A NUMBER 4 LOCKWASHER


D-543401-A

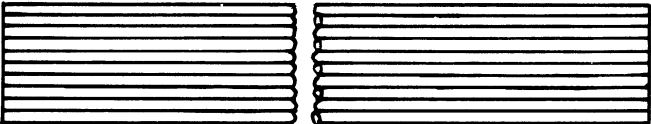

- (1) 20 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
 - (10) 5'-6" LENGTHS OF BELDON 8451 CORDAGE (TWISTED SHIELDED PAIR) HEAT BONDED ADJACENT TO EACH OTHER

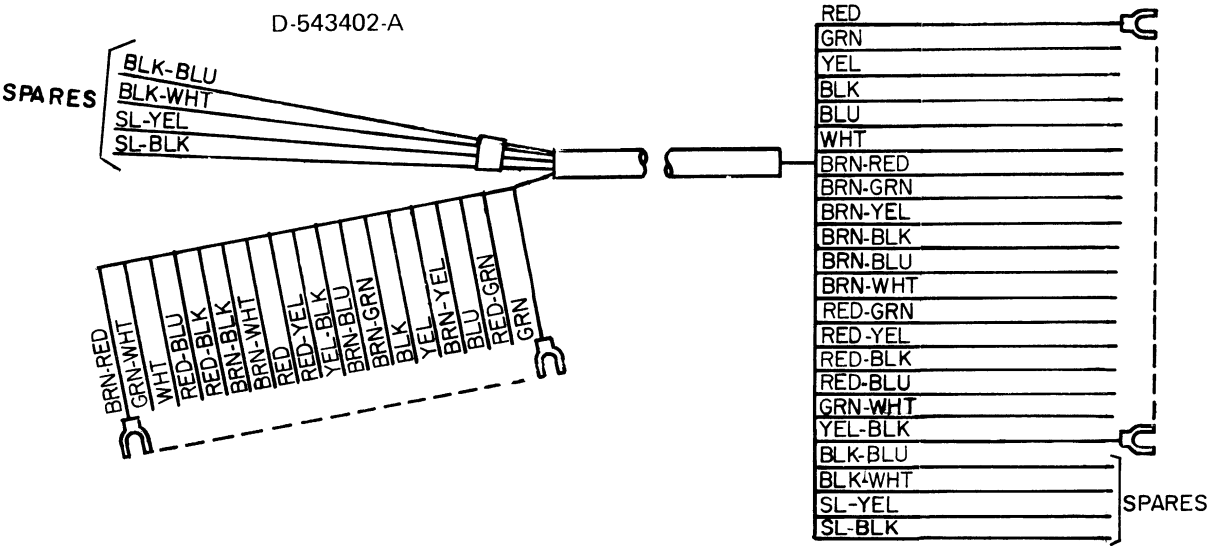


D-150152-B



D-150152-B


- (1) 18 CONDUCTOR FORMED CORD ASSEMBLY CONSISTING OF:
 - (1) 7'- 6-5/8" LENGTH OF D-543285-K CORDAGE
 - (36) D-150152-B TERMINAL

D-543405-A

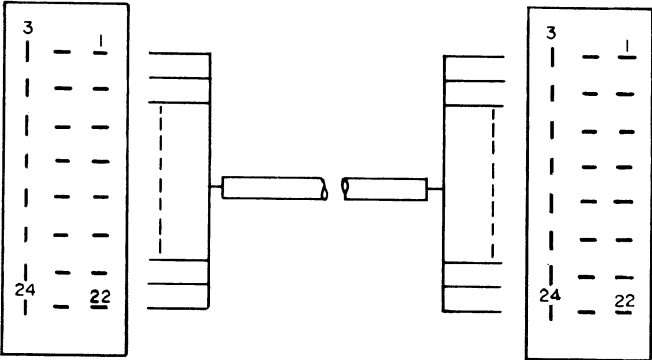


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	13	RED-GRN
2	GRN	14	RED-YEL
3	YEL	15	RED-BLK
4	BLK	16	RED-BLU
5	BLU	17	GRN-WHT
6	WHT	18	YEL-BLK
7	BRN-RED	19	BLK-BLU
8	BRN-GRN	20	BLK-WHT
9	BRN-YEL	21	SL-YEL
10	BRN-BLK	22	SL-BLK
11	BRN-BLU	23	SL-BLU
12	BRN-WHT	24	SL-WHT

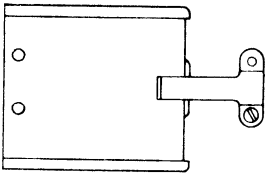

FD-1006-AD

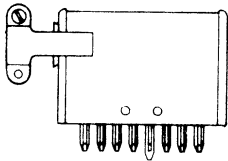

FD-1003-BF


- (1) 24 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:

- (1) 12'-6" LENGTH OF D-543285-J CORDAGE
- (1) FD-1006-AD RECEPTACLE AND CAP
- (1) FD-1003-BF PLUG AND CAP

D-543405-B

SAME AS D-543405-A EXCEPT CORDAGE IS 25'-6" LONG.


D-543425-A

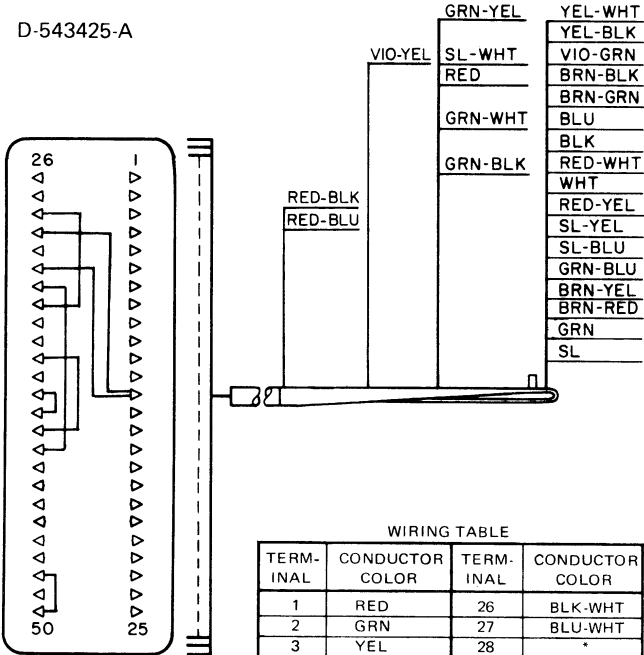

WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	26	BLK-WHT
2	GRN	27	BLU-WHT
3	YEL	28	*
4	BLK	29	*RED-GRN
5	BLU	30	SL-BLK
6	WHT	31	*
7	BRN-RED	32	*
8	BRN-GRN	33	*
9	BRN-YEL	34	BRN
10	BRN-BLK	35	ORN-RED
11	BRN-BLU	36	*
12	BRN-WHT	37	ORN
13	*	38	*
14	RED-YEL	39	*
15	RED-BLK	40	*
16	RED-BLU	41	*
17	RED-WHT	42	VIO-RED
18	GRN-YEL	43	VIO-GRN
19	GRN-BLK	44	VIO-YEL
20	GRN-BLU	45	SL
21	GRN-WHT	46	SL-YEL
22	YEL-BLK	47	SL-BLU
23	YEL-BLU	48	*
24	YEL-WHT	49	SL-WHT
25	BLK-BLU	50	*

*STRAPPING REQUIRED: SEE VIEW OF PLUG AND USE W-6026-100 STRAP WIRE.




FD-1006-AS

- (1) 38 CONDUCTOR FORMED CORD AND RECEPTACLE ASSEMBLY CONSISTING OF:


- (1) 4'-7" LENGTH OF D-543285-AE CORDAGE
- (1) FD-1006-AS RECEPTACLE AND CAP

D-543426-A

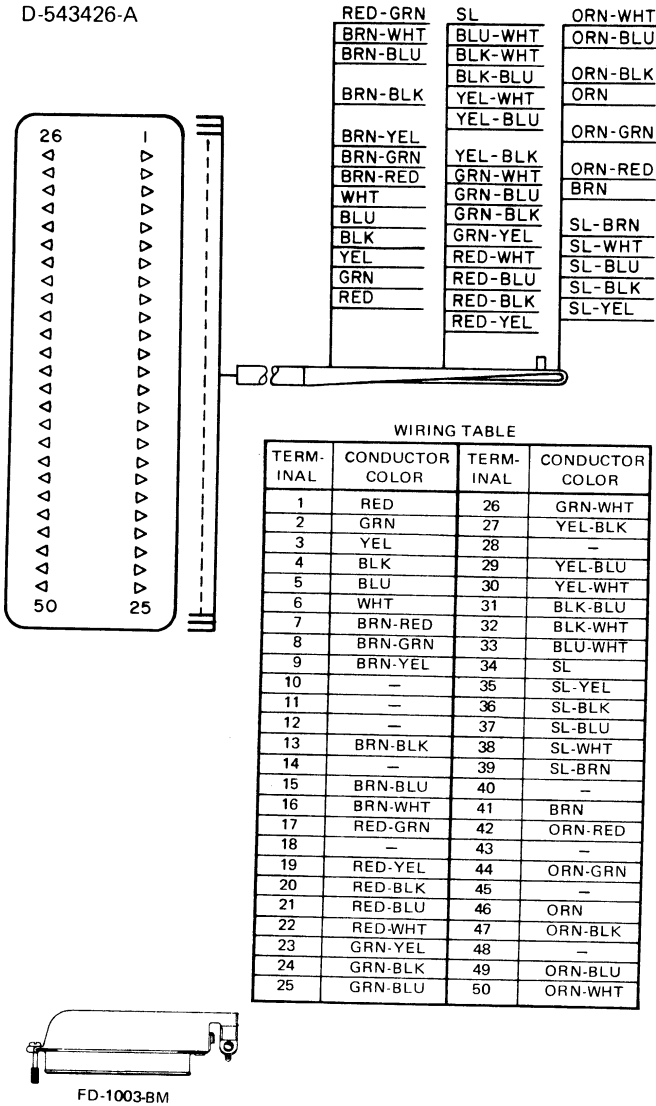

- (1) 40 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 4'-7" LENGTH OF D-543285-AE CORDAGE
 - (1) FD-1003-BM PLUG AND CAP

D-543427-A

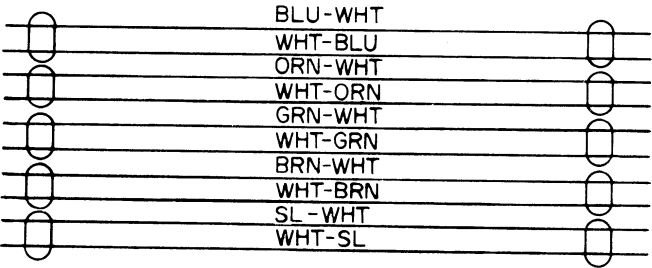


- (1) 10 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) 2'-8" LENGTH OF D-910001-A CORDAGE

D-543427-B

SAME AS D-543427-A EXCEPT CORDAGE IS
2'-4" LONG.

D-543427-C

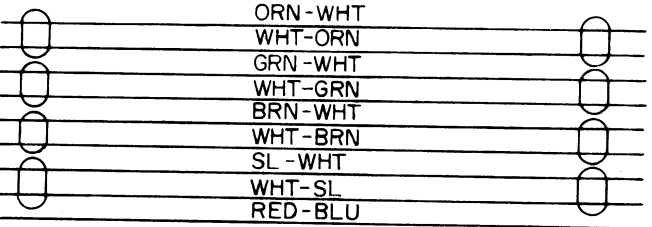

- (1) 9 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) 2'-5" LENGTH OF D-910001-A CORDAGE

D-543427-D

SAME AS D-543427-C EXCEPT CORDAGE IS
2'-3" LONG.


D-543427-E

SAME AS D-543427-C EXCEPT CORDAGE IS
2'-8" LONG.

D-543427-F

SAME AS D-543427-C EXCEPT CORDAGE IS
3'-5" LONG.

D-543464-A (MFG DISC - REPLACED BY D-543601-A)

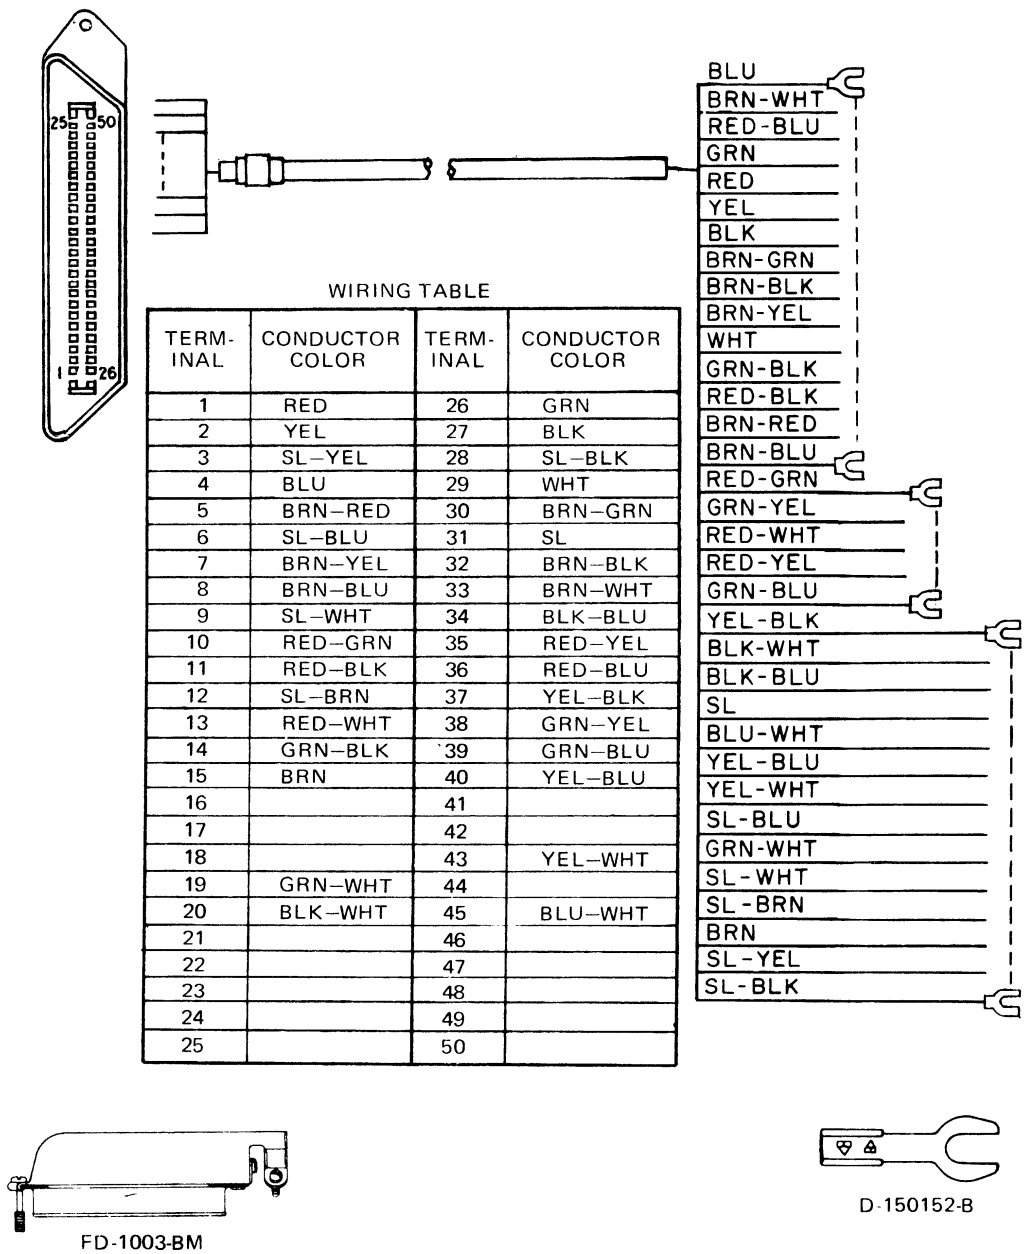

- (1) 34 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 6'- 7-3/4" LENGTH OF D-543285-J BLACK
CORDAGE
 - (1) FD-1003-BM PLUG AND CAP
 - (34) D-150152-B TERMINAL

D-543464-B (MFG DISC - REPLACED BY D-543601-B)
SAME AS D-543464-A EXCEPT CORDAGE IS SAND
BEIGE IN COLOR (D-543285-W).


D-543464-C
SAME AS D-543464-A EXCEPT CORDAGE IS
GRAY IN COLOR (D-543285-K).

D-543464-D (MFG DISC - REPLACED BY D-543601-D)
SAME AS D-543464-A EXCEPT CORDAGE IS
JADE GREEN IN COLOR (D-543285-Y).

D-543464-G
SAME AS D-543464-A EXCEPT CORDAGE IS
TURQUOISE IN COLOR (D-543285-AB).

D-543464-M (MFG DISC - REPLACED BY D-543601-M)
SAME AS D-543464-A EXCEPT CORDAGE IS
GARDENIA WHITE IN COLOR (D-543285-AA).



D-543494-A

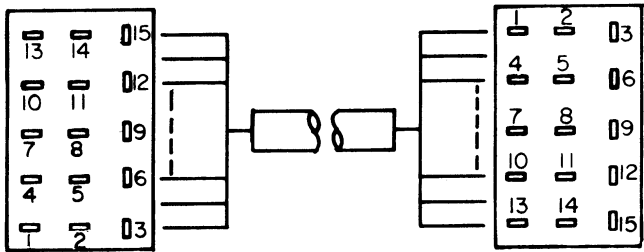


WIRING TABLE - BOTH ENDS

TERMI- NAL	CONDUCTOR COLOR	TERMI- NAL	CONDUCTOR COLOR
1	RED	9	BRN-YEL
2	GRN	10	BRN-BLK
3	YEL	11	BRN-BLU
4	BLK	12	BRN-WHT
5	BLU	13	RED-GRN
6	WHT	14	RED-YEL
7	BRN-RED	15	RED-BLK
8	BRN-GRN		

D-543495-A

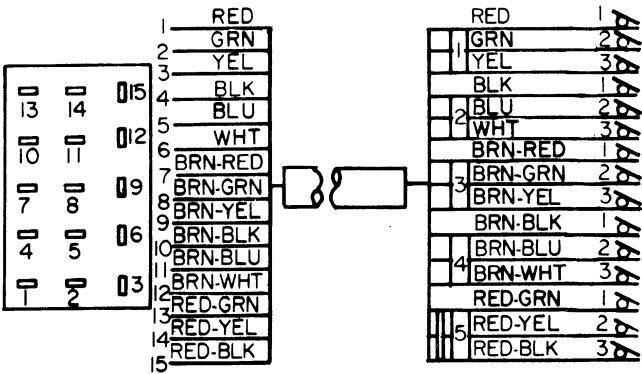


FD-1006-AB




FD-1015-AG

- (1) 15 CONDUCTOR CORD, RECEPTACLE AND TEST
CLIP ASSEMBLY CONSISTING OF:

- (1) 21'-5" LENGTH OF D-543285-D CORDAGE
- (1) FD-1006-AB RECEPTACLE AND CAP
- (15) FD-1015-AG MINI-GATOR TEST CLIP



FD-1006-AB




FD-1003-BK

- (1) 15 CONDUCTOR CORD, PLUG, AND RECEPTACLE
ASSEMBLY CONSISTING OF:


- (1) 20'-4" LENGTH OF D-543285-D CORDAGE
- (1) FD-1006-AB RECEPTACLE AND CAP
- (1) FD-1003-BK PLUG AND CAP

D-543505-A

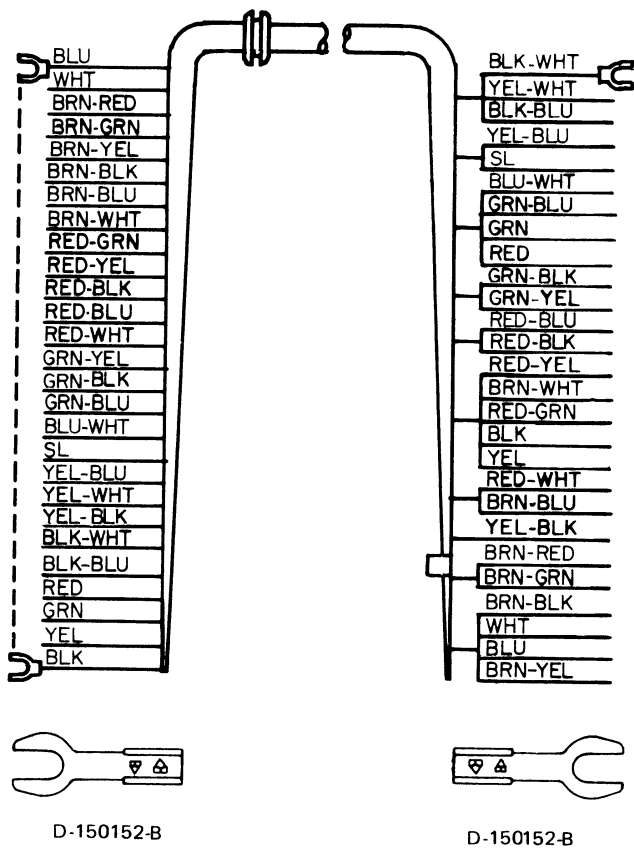


- (1) 27 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) 9'-3" LENGTH OF D-543285-K CORDAGE
 - (28) D-150152-B TERMINAL
 - (1) D-87431-A20 GROMMET

D-543507-A

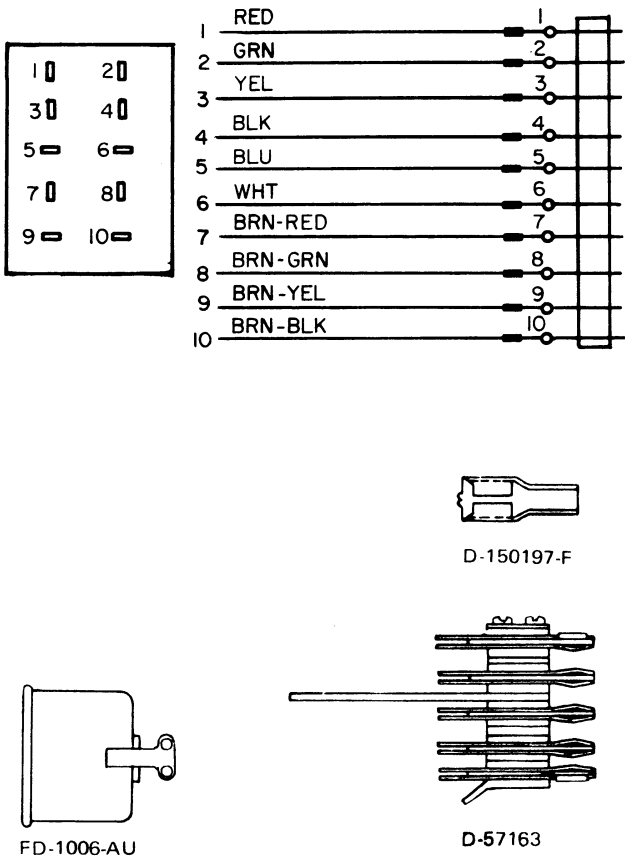


- (1) 10 CONDUCTOR CORD, RECEPTACLE AND TEST PLUG ASSEMBLY CONSISTING OF:
- (1) 10'-0" LENGTH OF D-543285-A CORDAGE
 - (1) FD-1006-AU RECEPTACLE AND CAP
 - (10) D-150197-F TERMINAL
 - (1) D-57163-A TEST PLUG

D-543518-A

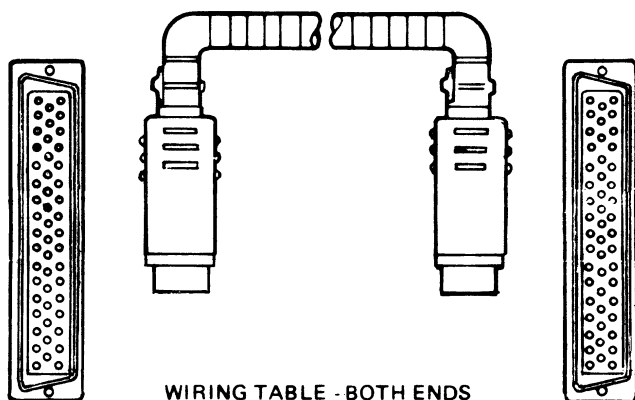

WIRING TABLE - BOTH ENDS

TER-MINAL	CONDUCTOR COLOR	TER-MINAL	CONDUCTOR COLOR
1	BLU-WHT	26	ORN-WHT
2		27	
3	ORN-WHT	28	BLU-WHT
4		29	
5	BLU-WHT	30	ORN-WHT
6		31	
7	ORN-WHT	32	BLU-WHT
8		33	
9	BLU-WHT	34	BLU-WHT
10		35	
11	ORN-WHT	36	ORN-WHT
12		37	
13	BLU-WHT	38	BLU-WHT
14		39	
15	ORN-WHT	40	ORN-WHT
16		41	
17	ORN-WHT	42	BLU-WHT
18		43	
19	BLU-WHT	44	ORN-WHT
20		45	
21	ORN-WHT	46	
22		47	
23	BLU-WHT	48	
24		49	
25		50	



PLUG ASSEMBLY




PLUG ASSEMBLY

- (1) 44 CONDUCTOR FORMED CORD AND PLUG ASSEMBLY CONSISTING OF:


- (22) 9-1/2" LENGTHS OF W-6002-109 WIRE (BLUE-WHITE)
- (22) 9-1/2" LENGTHS OF W-6002-114 WIRE (ORANGE-WHITE)
- (2) PLUG ASSEMBLIES EACH CONSISTING OF:
 - (1) FD-1004-FK MINI CONNECTOR
 - (1) FD-1038-BY JUNCTION SHELL
 - (2) FD-1032-AY LOCK SCREW

D-543518-B

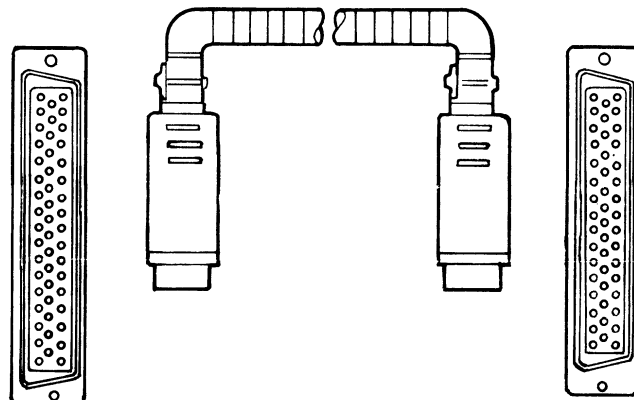


WIRING TABLE - BOTH ENDS

TER-MINAL	CONDUCTOR COLOR	TER-MINAL	CONDUCTOR COLOR
1		26	BLU
2		27	
3		28	ORN
4		29	
5		30	BLU
6		31	
7	ORN	32	ORN
8		33	
9	BLU	34	
10		35	
11	ORN	36	ORN
12		37	
13	BLU	38	BLU
14		39	
15	ORN	40	ORN
16		41	
17	BLU	42	BLU
18		43	
19	BLU	44	ORN
20		45	
21	ORN	46	BLU
22		47	
23	BLU	48	ORN
24		49	
25	ORN	50	BLU



PLUG ASSEMBLY




PLUG ASSEMBLY

- (1) 44 CONDUCTOR FORMED CORD AND PLUG ASSEMBLY CONSISTING OF:


- (22) 9-1/2" LENGTHS OF W-6002-100 WIRE (BLUE)
- (22) 9-1/2" LENGTHS OF W-6002-101 WIRE (ORANGE)
- (2) PLUG ASSEMBLIES, EACH CONSISTING OF:
 - (1) FD-1004-FK MINI CONNECTOR
 - (1) FD-1038-BY JUNCTION SHELL
 - (2) FD-1032-AY LOCK SCREW

D-543524-A

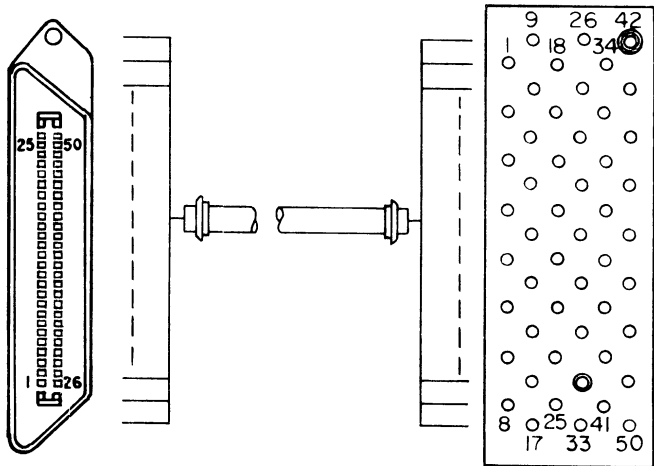


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	26	BLK-WHT
2	GRN	27	BLU-WHT
3	YEL	28	SL
4	BLK	29	SL-YEL
5	BLU	30	SL-BLK
6	WHT	31	--
7	BRN-RED	32	--
8	BRN-GRN	33	SL-BLU
9	BRN-YEL	34	--
10	BRN-BLK	35	SL-WHT
11	BRN-BLU	36	--
12	BRN-WHT	37	--
13	RED-GRN	38	--
14	RED-YEL	39	SL-BRN
15	RED-BLK	40	--
16	RED-BLU	41	BRN
17	RED-WHT	42	--
18	GRN-YEL	43	--
19	GRN-BLK	44	--
20	GRN-BLU	45	--
21	GRN-WHT	46	--
22	YEL-BLK	47	--
23	YEL-BLU	48	--
24	YEL-WHT	49	--
25	BLK-BLU	50	--




FD-1003-BM

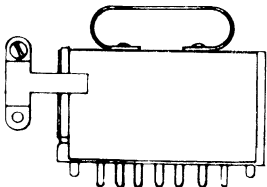

FD-1003-AS


- (1) 34 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 15'-0" LENGTH OF D-543285-K CORDAGE
 - (1) FD-1003-BM PLUG AND CAP
 - (1) FD-1003-AS PLUG AND CAP

D-543533-A

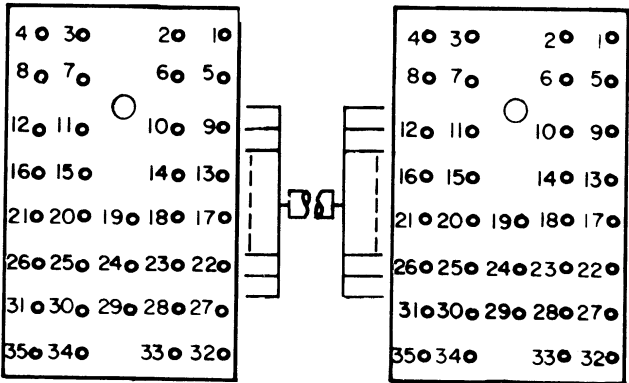


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BLU-WHT	19	SL-RED
2	WHT-BLU	20	RED-SL
3	ORN-WHT	21	BLU
4	WHT-ORN	22	ORN
5	GRN-WHT	23	GRN
6	WHT-GRN	24	BRN
7	BRN-WHT	25	SL
8	WHT-BRN	26	BLU-RED-WHT
9	SL-WHT	27	ORN-RED-WHT
10	WHT-SL	28	GRN-RED-WHT
11	BLU-RED	29	BRN-RED-WHT
12	RED-BLU	30	SL-RED-WHT
13	ORN-RED	31	--
14	RED-ORN	32	--
15	GRN-RED	33	--
16	RED-GRN	34	--
17	BRN-RED	35	--
18	RED-BRN		

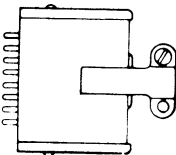



FD-1003-AJ

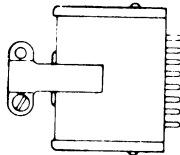

FD-1003-AJ

- (1) 30 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 15'-6" LENGTH OF D-910006-A CORDAGE
 - (2) FD-1003-AJ PLUGS


D-543536-A

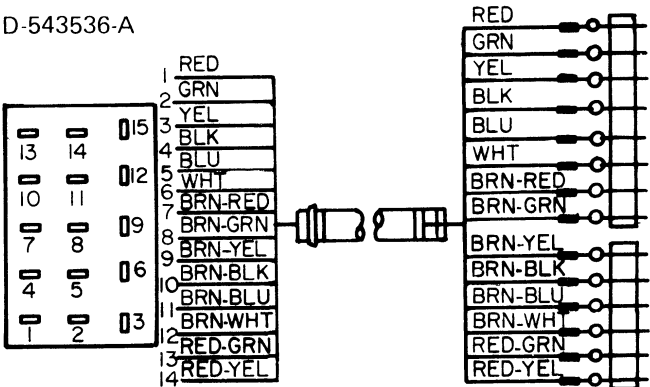


FD-1006-AB



D-150197-F

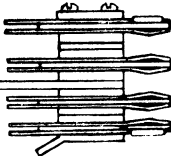

D-57038-A




D-57037-A

- (1) 14 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:


- (1) 10'-9" LENGTH OF D-543285-C CORDAGE
- (1) FD-1006-AB RECEPTACLE AND CAP
- (14) D-150197-F TERMINAL
- (1) D-57038-A TEST PLUG
- (1) D-57037-A TEST PLUG

D-543548-A

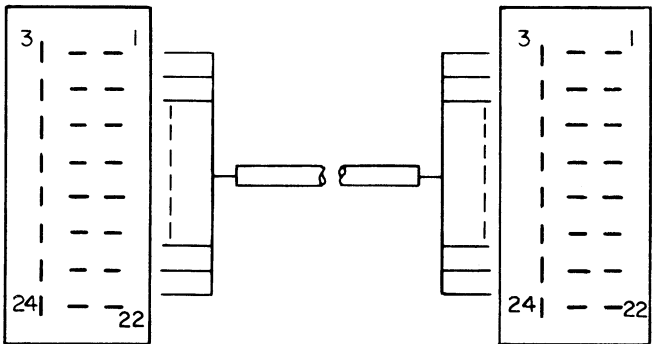


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	13	RED-GRN
2	GRN	14	RED-YEL
3	YEL	15	RED-BLK
4	BLK	16	RED-BLU
5	BLU	17	GRN-WHT
6	WHT	18	YEL-BLK
7	BRN-RED	19	BLK-BLU
8	BRN-GRN	20	BLK-WHT
9	BRN-YEL	21	SL-YEL
10	BRN-BLK	22	SL-BLK
11	BRN-BLU	23	SL-BLU
12	BRN-WHT	24	SL-WHT

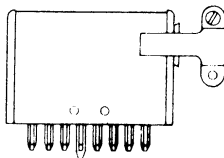

FD-1003-BF

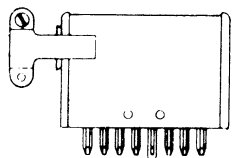


FD-1003-BF

- (1) 24 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:


- (1) 12'-6" LENGTH OF D-543285-J CORDAGE
- (2) FD-1003-BF PLUG AND CAP

D-543549-A

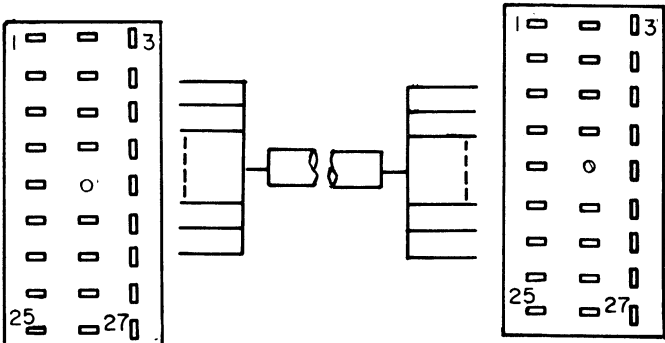


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BLU-WHT	15	-
2	ORN-WHT	16	SL-RED
3	GRN-WHT	17	BLU-BLK
4	WHT-BLU	18	ORN-BLK
5	WHT-ORN	19	RED-SL
6	WHT-GRN	20	BLK-BLU
7	BLU-RED	21	BLK-ORN
8	SL-WHT	22	BRN-RED
9	BRN-WHT	23	GRN-RED
10	RED-BLU	24	ORN-RED
11	WHT-SL	25	RED-BRN
12	WHT-BRN	26	RED-GRN
13	-	27	RED-ORN
14	GRN-BLK & DRAIN		

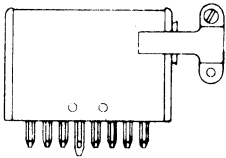


FD-1003-BH

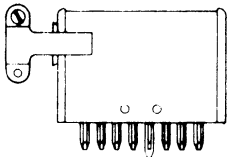

FD-1003-BH


- (1) 25 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 15'-3" LENGTH OF D-910042-A CORDAGE
 - (2) FD-1003-BH PLUG AND CAP

D-543550-A

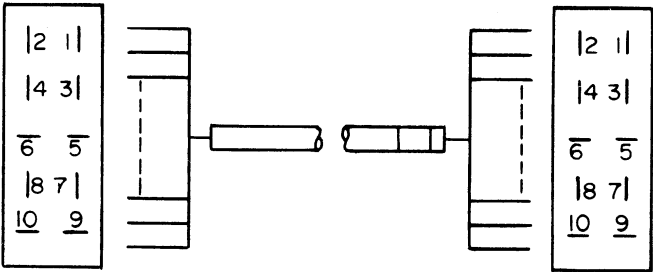


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BLU-WHT	6	WHT-GRN
2	WHT-BLU	7	BRN-WHT
3	ORN-WHT	8	WHT-BRN
4	WHT-ORN	9	SL-WHT
5	GRN-WHT	10	WHT-SL

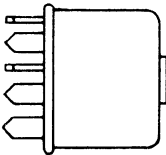


FD-1003-AE

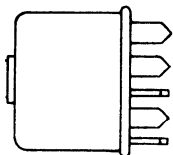

FD-1003-AE


- (1) 10 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 15'-3" LENGTH OF D-910001-A CORDAGE
 - (2) FD-1003-AE PLUG AND CAP

D-543554-A

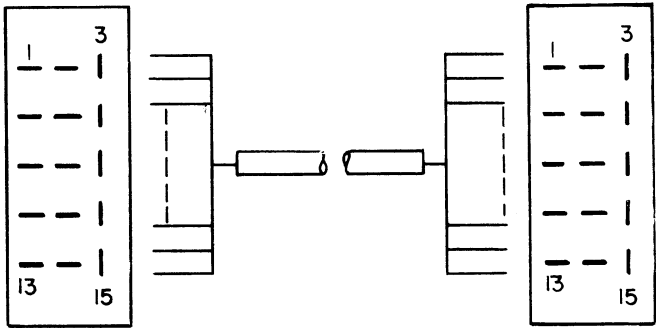

WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	9	BRN-YEL
2	GRN	10	BRN-BLK
3	YEL	11	BRN-BLU
4	BLK	12	BRN-WHT
5	BLU	13	RED-GRN
6	WHT	14	RED-YEL
7	BRN-RED	15	RED-BLK
8	BRN-GRN		

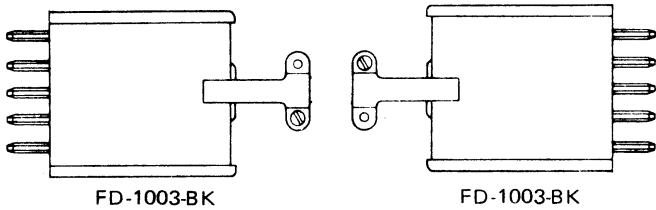

- (1) 15 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 12'-6" LENGTH OF D-543285-D CORDAGE
 - (2) FD-1003-BK PLUG AND CAP


D-543554-B

SAME AS D-543554-A EXCEPT CORDAGE IS
5'-6" LONG.

D-543554-C

SAME AS D-543554-A EXCEPT CORDAGE IS
8'-6" LONG.


D-543555-A

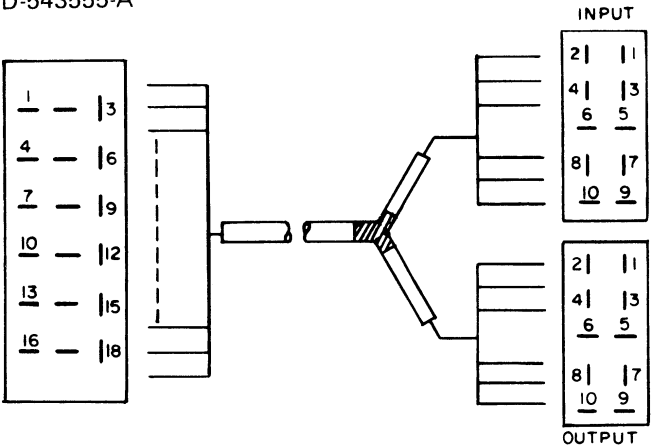

WIRING TABLE


PLUG FD-1003-BL			
TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	10	BRN-BLK
2	GRN	11	BRN-BLU
3	YEL	12	BRN-WHT
4	BLK	13	RED-GRN
5	BLU	14	RED-YEL
6	WHT	15	RED-BLK
7	BRN-RED	16	RED-BLU
8	BRN-GRN	17	-
9	BRN-YEL	18	-

PLUG FD-1003-AE (INPUT)		PLUG FD-1003-AE (OUTPUT)	
TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	1	BRN-YEL
2	GRN	2	BRN-BLK
3	YEL	3	BRN-BLU
4	BLK	4	BRN-WHT
5	BLU	5	RED-GRN
6	WHT	6	RED-YEL
7	BRN-RED	7	RED-BLK
8	BRN-GRN	8	RED-BLU
9	-	9	-
10	-	10	-

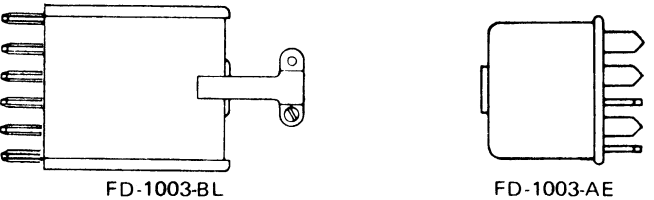


- (1) 16 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 13'-4" LENGTH OF D-543285-C CORDAGE
 - (1) FD-1003-BL PLUG AND CAP
 - (2) FD-1003-AE PLUG AND CAP

D-543560-A

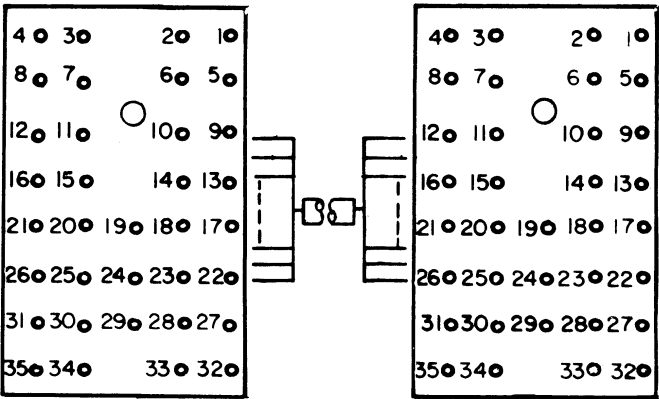


D-543557-A

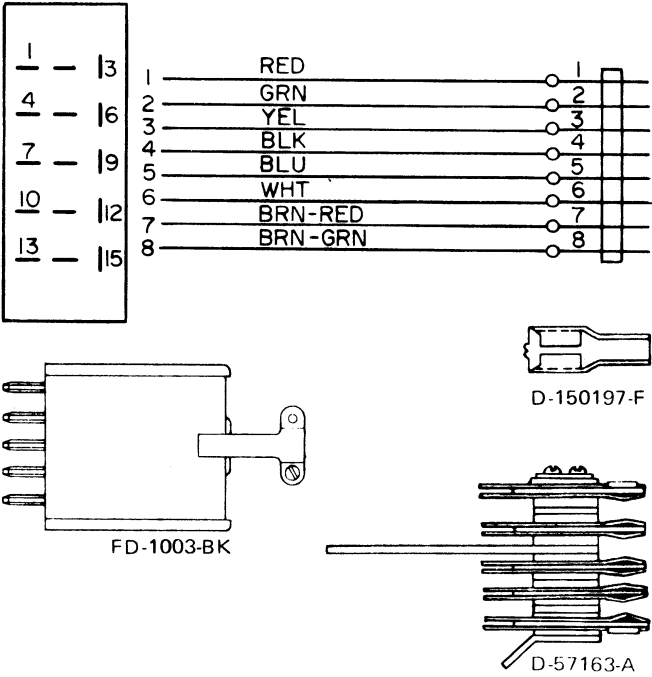


WIRING TABLE - BOTH ENDS


TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	SL-YEL
2	GRN	20	SL-BLK
3	YEL	21	SL-BLU
4	BLK	22	GRN-WHT
5	BLU	23	YEL-BLU
6	WHT	24	YEL-WHT
7	BRN-RED	25	YEL-BLK
8	BRN-GRN	26	-
9	BRN-YEL	27	-
10	BRN-BLK	28	RED-WHT
11	BRN-BLU	29	GRN-YEL
12	BRN-WHT	30	GRN-BLK
13	RED-GRN	31	GRN-BLU
14	RED-YEL	32	BLK-BLU
15	RED-BLK	33	BLK-WHT
16	SL-WHT	34	BLU-WHT
17	RED-BLU	35	SL
18	-		




D-150122-A



D-150122-A

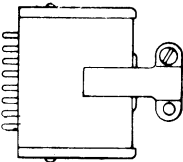

FD-1003-AJ

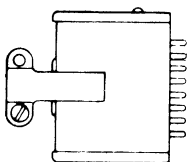


FD-1003-AJ



- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 12'-5" LENGTH OF D-543285-B CORDAGE
 - (1) FD-1003-BK PLUG AND CAP
 - (8) D-150197-F TERMINAL
 - (1) D-57163-A TEST PLUG

- (1) 32 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 8'-3" LENGTH OF D-543285-J CORDAGE
 - (64) D-150122-A TERMINAL
 - (2) FD-1003-AJ PLUG AND CAP

D-543564-B

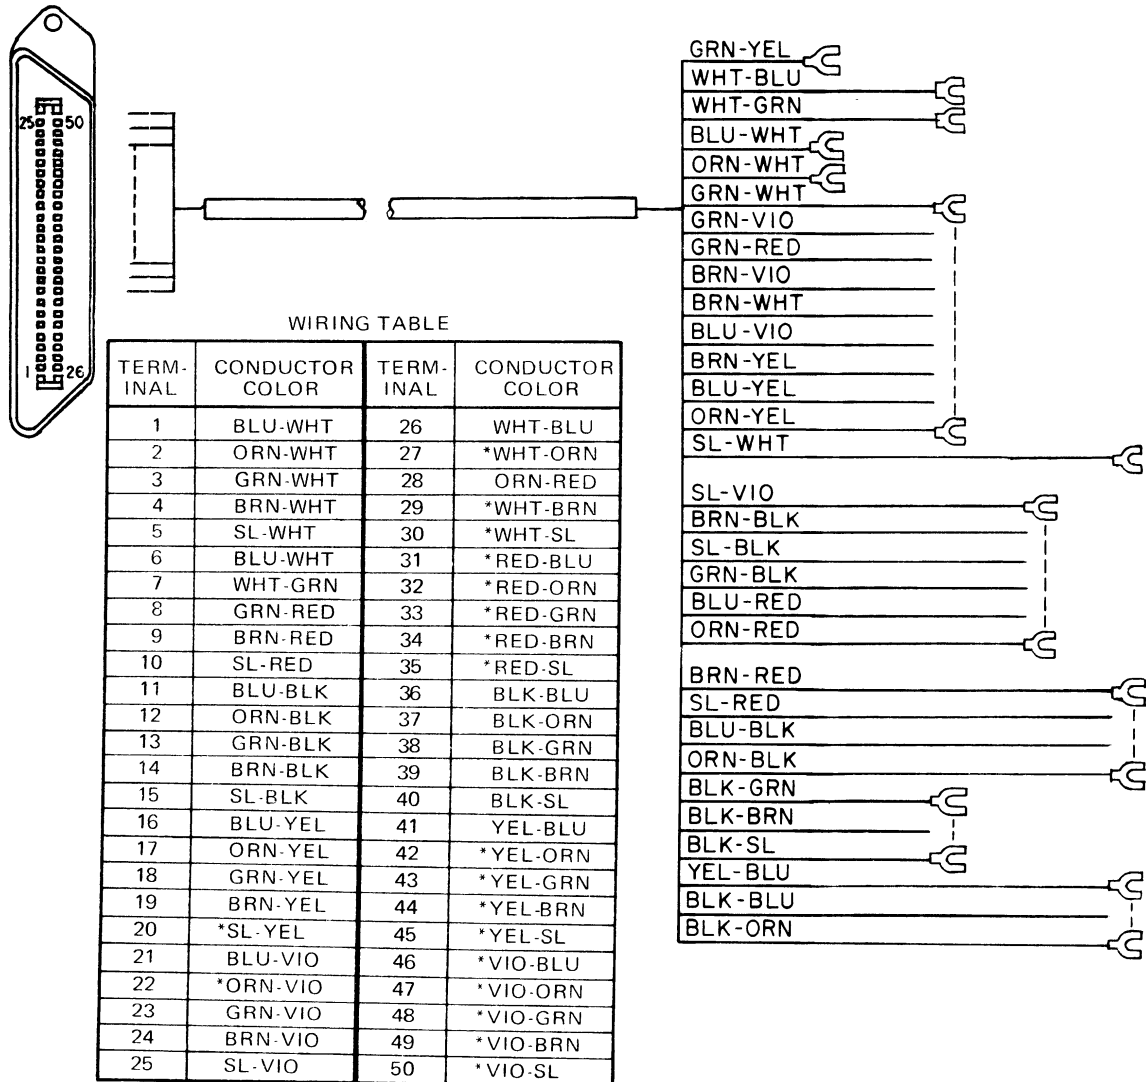


NOTE: CONDUCTORS MARKED WITH AN ASTERISK (*) ARE CLIPPED OFF AT BUTT OF CORD ON TERMINAL END.

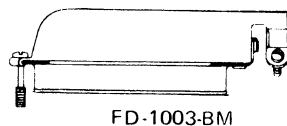

- (1) 31 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 6' 9-3/4" LENGTH OF D-543452-B CORDAGE
 - (1) FD-1003-BM PLUG AND CAP
 - (31) D-150152-B TERMINAL

D-543569-A

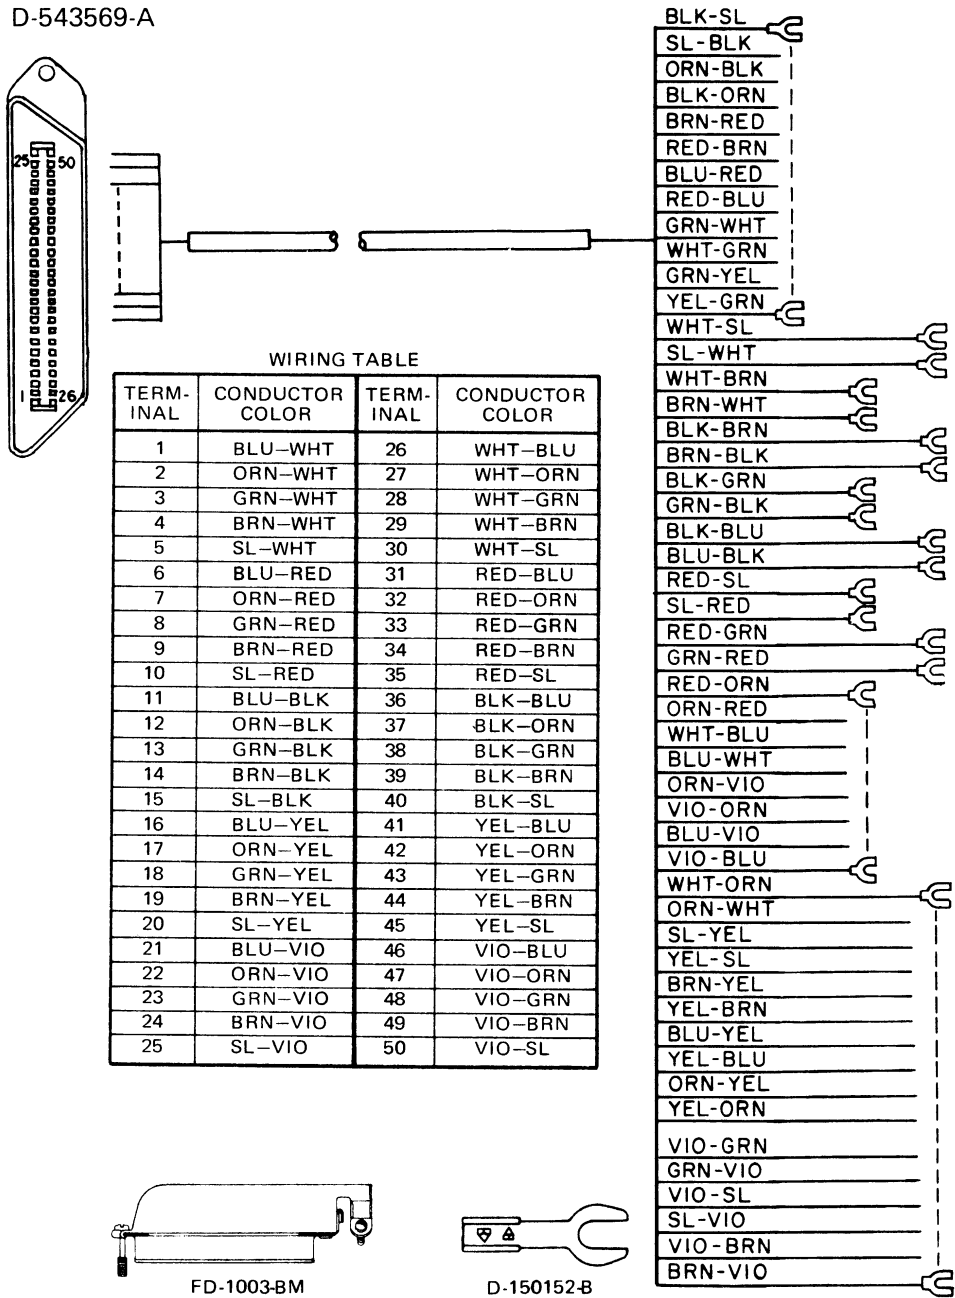

- (1) 50 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) 6'- 10-3/4" LENGTH OF D-543452-A CORDAGE
(BLACK)
 - (1) FD-1003-BM PLUG AND CAP
 - (50) D-150152-B TERMINAL


D-543569-B

SAME AS D-543569-A EXCEPT CORDAGE IS
D-543452-B (SAND BEIGE).

D-543569-M

SAME AS D-543569-A EXCEPT CORDAGE IS
D-543452-F (WHITE)

D-543570-A

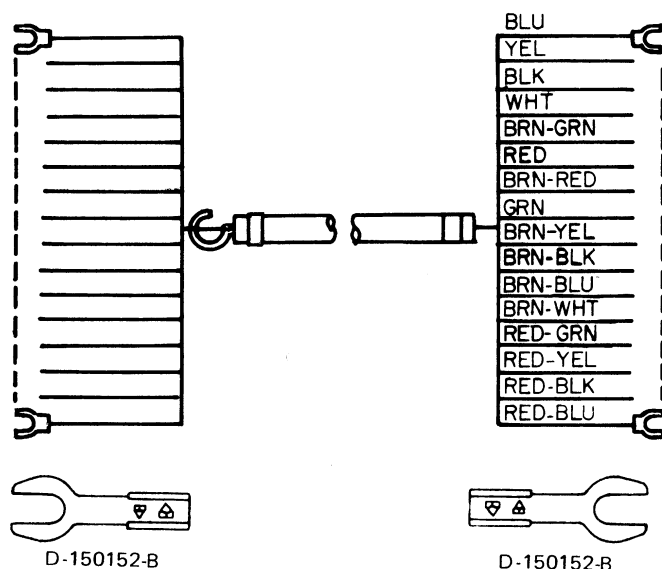

- (1) 16 CONDUCTOR CORD ASSEMBLY CONSISTING OF:
- (1) 6'-3" LENGTH OF D-543285-C CORDAGE (BLACK)
 - (32) D-150152-B TERMINAL


D-543570-B

SAME AS D-543570-A EXCEPT CORDAGE IS D-543285-AH (SAND BEIGE).

D-543570-M

SAME AS D-543570-A EXCEPT CORDAGE IS D-543285-AJ (WHITE)

D-543573-A

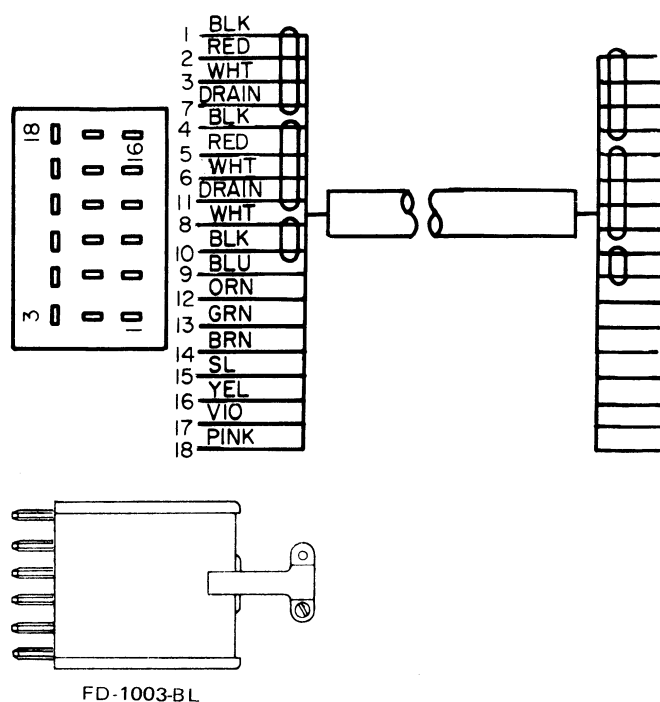


- (1) 18 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:

- (1) 9'-3" LENGTH OF 18 CONDUCTOR CORDAGE (NOT AVAILABLE SEPARATELY)
- (1) FD-1003-BL PLUG AND CAP


SECTION 032-210-108
ISSUE 1

D-543584-A

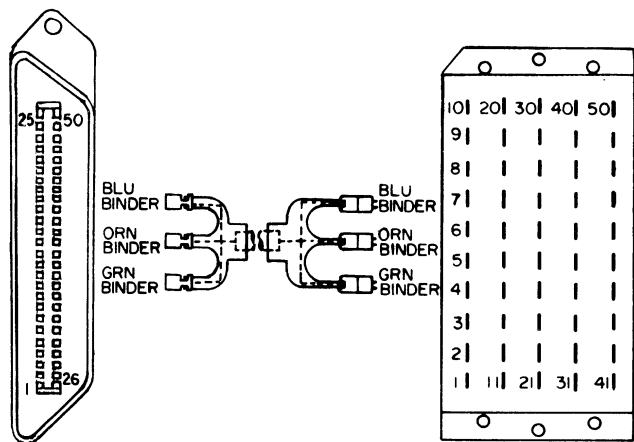


WIRING TABLE - ALL PLUGS AND RECEPTACLES

TERMINAL	CONDUCTOR COLOR	TERMINAL	CONDUCTOR COLOR
1	BLU-WHT	26	WHT-BLU
2	ORN-WHT	27	WHT-ORN
3	GRN-WHT	28	WHT-GRN
4	BRN-WHT	29	WHT-BRN
5	SL-WHT	30	WHT-SL
6	BLU-RED	31	RED-BLU
7	ORN-RED	32	RED-ORN
8	GRN-RED	33	RED-GRN
9	BRN-RED	34	RED-BRN
10	SL-RED	35	RED-SL
11	BLU-BLK	36	BLK-BLU
12	ORN-BLK	37	BLK-ORN
13	GRN-BLK	38	BLK-GRN
14	BRN-BLK	39	BLK-BRN
15	BLU-BLK	40	BLK-SL
16	BLU-YEL	41	YEL-BLU
17	ORN-YEL	42	YEL-ORN
18	GRN-YEL	43	YEL-GRN
19	BRN-YEL	44	YEL-BRN
20	SL-YEL	45	YEL-SL
21	BLU-VIO	46	VIO-BLU
22	ORN-VIO	47	VIO-ORN
23	GRN-VIO	48	VIO-GRN
24	BRN-VIO	49	VIO-BRN
25	SL-VIO	50	VIO-SL

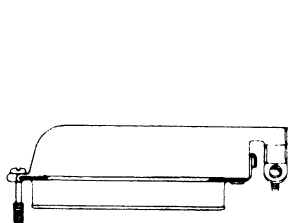

FD-1006-AS

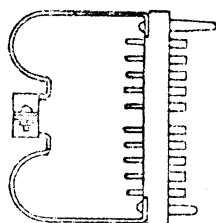


PLUG ASSEMBLY

- (1) 150 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:

- (1) 15'-10" LENGTH OF D-543294-B CORDAGE
- (3) FD-1006-AS RECEPTACLE AND CAP
- (3) PLUG ASSEMBLIES, EACH CONSISTING OF:


- (1) FD-1005-CF PLUG
- (2) FD-1032-BD BRACKET HALF

D-543588-A

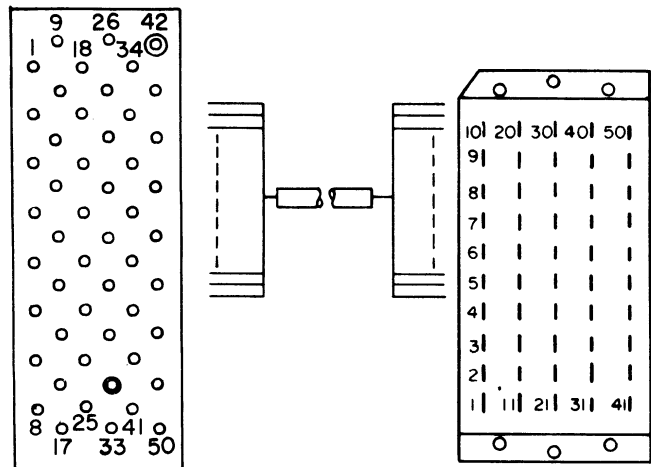


WIRING TABLE - BOTH PLUGS

TERMINAL	CONDUCTOR COLOR	TERMINAL	CONDUCTOR COLOR
1	BLU-WHT	26	BLK-GRN
2	WHT-BLU	27	BRN-BLK
3	ORN-WHT	28	BLK-BRN
4	WHT-ORN	29	SL-BLK
5	GRN-WHT	30	BLK-SL
6	WHT-GRN	31	BLU-YEL
7	BRN-WHT	32	YEL-BLU
8	WHT-BRN	33	ORN-YEL
9	SL-WHT	34	YEL-ORN
10	WHT-SL	35	GRN-YEL
11	BLU-RED	36	YEL-GRN
12	RED-BLU	37	BRN-YEL
13	ORN-RED	38	YEL-BRN
14	RED-ORN	39	SL-YEL
15	GRN-RED	40	YEL-SL
16	RED-GRN	41	BLU-VIO
17	BRN-RED	42	VIO-BLU
18	RED-BRN	43	ORN-VIO
19	SL-RED	44	VIO-ORN
20	RED-SL	45	GRN-VIO
21	BLU-BLK	46	VIO-GRN
22	BLK-BLU	47	BRN-VIO
23	ORN-BLK	48	VIO-BRN
24	BLK-ORN	49	SL-VIO
25	GRN-BLK	50	VIO-SL

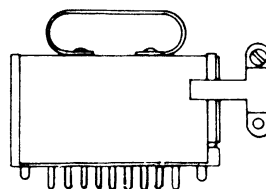

FD-1003-AS

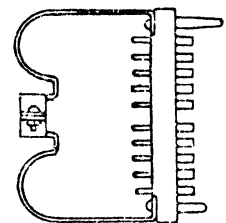


PLUG ASSEMBLY

- (1) 50 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:

- (1) 15'-1" LENGTH OF D-543452-C CORDAGE
- (1) FD-1003-AS PLUG AND CAP
- (1) PLUG ASSEMBLY CONSISTING OF:

- (1) FD-1005-CF PLUG
- (2) FD-1032-BD BRACKET HALF

D-543591-A

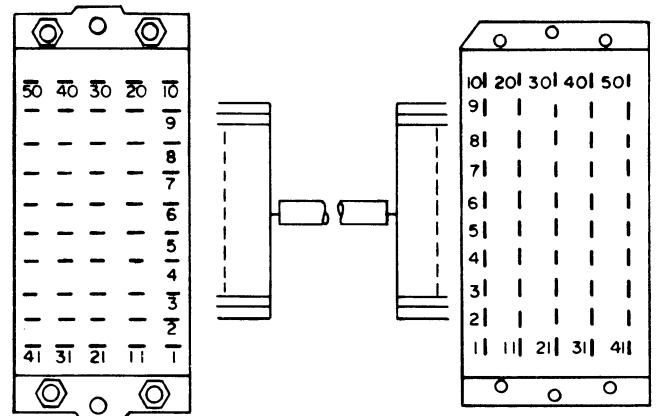



WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	SL-YEL	26	SL
2	SL-RED	27	SL-WHT
3	RED-SL	28	GRN
4	BLU-BLK	29	GRN-WHT
5	BLK-BLU	30	BRN-BLK
6	ORN-BLK	31	YEL-BRN
7	BLK-ORN	32	BLU-RED-WHT
8	ORN-WHT	33	RED-BLU
9	WHT-ORN	34	BLU-RED
10	GRN-BLK	35	YEL-ORN
11	YEL-SL	36	YEL-BLU
12	ORN-RED	37	WHT-SL
13	GRN-RED-WHT	38	BRN
14	BRN-RED	39	WHT-GRN
15	BRN-RED-WHT	40	BLK-BRN
16	BLU-WHT	41	GRN-RED
17	WHT-BLU	42	RED-GRN
18	BLU	43	GRN-YEL
19	ORN	44	YEL-GRN
20	BLK-GRN	45	ORN-YEL
21	BRN-YEL	46	BLU-YEL
22	RED-ORN	47	BLK-SL
23	ORN-RED-WHT	48	SL-BLK
24	RED-BRN	49	WHT-BRN
25	SL-RED-WHT	50	BRN-WHT

D-543588-B


SAME AS D-543588-A EXCEPT CORDAGE IS
5'-5" LONG.

D-543589-A

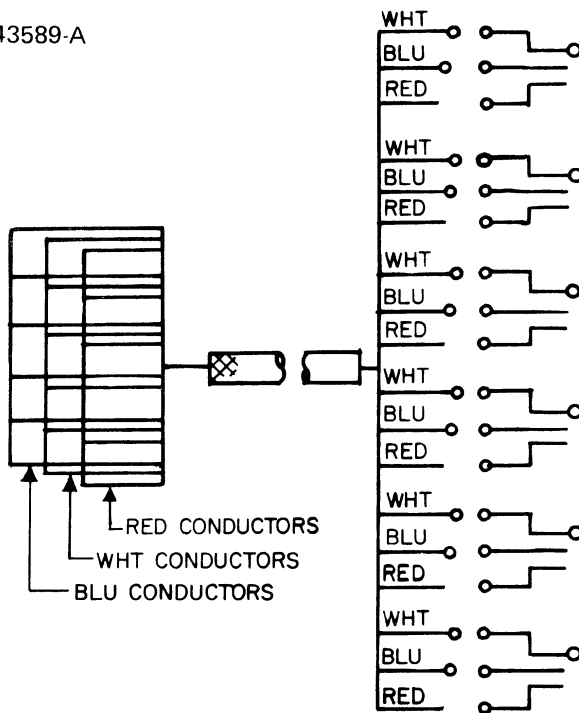


D-57132-L

- (1) 18 CONDUCTOR SPIDER CORD AND PLUG
ASSEMBLY CONSISTING OF:
- (6) CD-490224-W CORD BLANK (2'-0" LONG)
 - (6) D-150135-A TERMINAL
 - (6) D-57132-L PLUG

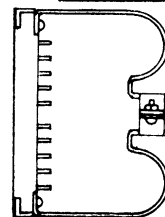



RECEPTACLE
ASSEMBLY

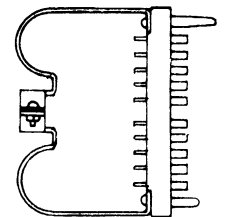

PLUG
ASSEMBLY

- (1) 50 CONDUCTOR CORD, PLUG, AND RECEPTACLE
ASSEMBLY CONSISTING OF:
- (1) 8'-9" LENGTH OF D-910032-A CORDAGE
 - (1) RECEPTACLE ASSEMBLY CONSISTING OF:
 - (1) FD-1004-FU RECEPTACLE
 - (2) FD-1032-BD BRACKET HALF
 - (1) PLUG ASSEMBLY CONSISTING OF:
 - (1) FD-1005-CF PLUG
 - (2) FD-1032-BD BRACKET HALF



D-543595-A

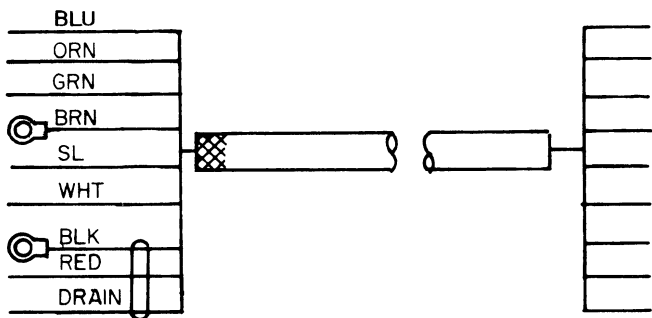


D-150080-A

- (1) 8 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 3'- 11-1/2" LENGTH OF D-910033-C CORDAGE
 - (1) 3'- 11-1/2" LENGTH OF W-6116-100 WIRE
 - (1) 3'- 11-1/2" LENGTH OF W-6116-101 WIRE
 - (1) 3'- 11-1/2" LENGTH OF W-6116-102 WIRE
 - (1) 3'- 11-1/2" LENGTH OF W-6116-103 WIRE
 - (1) 3'- 11-1/2" LENGTH OF W-6116-104 WIRE
 - (1) 3'- 11-1/2" LENGTH OF W-6116-107 WIRE
 - (2) D-150080-A TERMINAL
 - (1) BLACK NYLON BRAID

D-543597-A

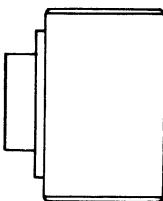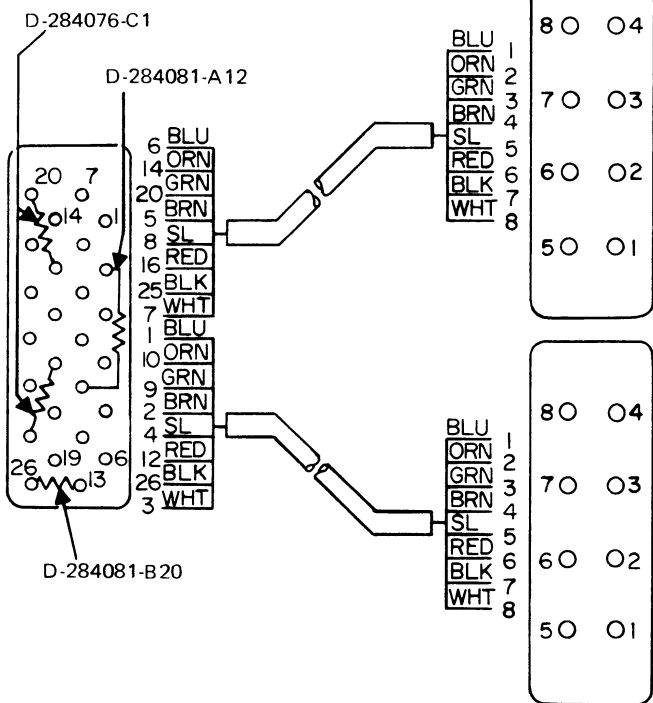


PLUG
ASSEMBLY

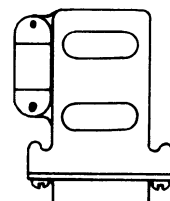

RECEPTACLE
ASSEMBLY

- (1) 16 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (2) D-543598-A CORD BLANK (3'- 11-1/2" LONG)
 - (1) PLUG ASSEMBLY CONSISTING OF:
 - (1) FD-1005-CL PLUG
 - (1) H-887976-7 JUNCTION SHELL
 - (2) RECEPTACLE ASSEMBLIES, EACH CONSISTING OF:
 - (1) FD-1003-EL RECEPTACLE
 - (1) FD-1038-CK JUNCTION SHELL
 - (2) D-284076-C1 RESISTOR
 - (1) D-284081-A12 RESISTOR
 - (1) D-284081-B20 RESISTOR

D-543598-A

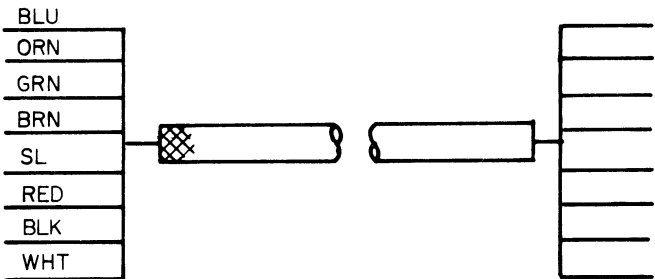

- (1) 8 CONDUCTOR CORD BLANK CONSISTING OF:
- (8) 3'- 11-1/2" LENGTHS OF 19/29 16 AWG MACHINE TOOL WIRE
- (1) BLACK NYLON BRAID

D-543601-B

SAME AS D-543601-A EXCEPT CORDAGE IS TURQUOISE IN COLOR (D-543285-AB).

D-543601-C

SAME AS D-543601-A EXCEPT CORDAGE IS BLACK IN COLOR (D-543285-J).

D-543601-D

SAME AS D-543601-A EXCEPT CORDAGE IS GRAY IN COLOR (D-543285-K).


D-543601-G

SAME AS D-543601-A EXCEPT CORDAGE IS SAND BEIGE IN COLOR (D-543285-W).

D-543601-M


SAME AS D-543601-A EXCEPT CORDAGE IS JADE GREEN IN COLOR (D-543285-Y).

D-543601-A

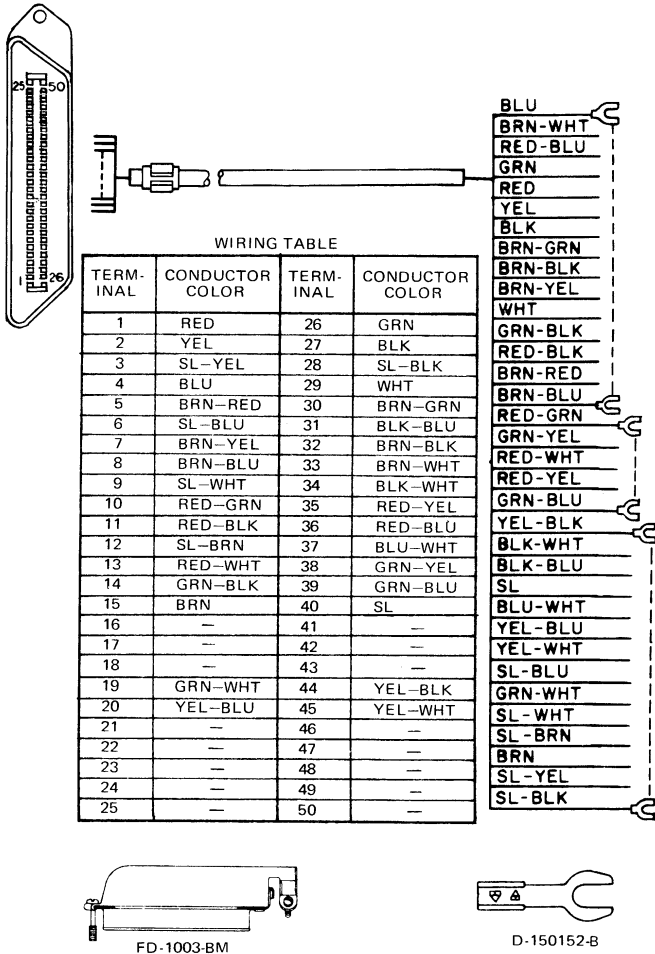


- (1) 34 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 6'- 7-3/4" LENGTH OF D-543285-J CORDAGE (BLACK)
- (1) FD-1003-BM PLUG AND CAP
- (34) D-150152-B TERMINAL

D-543617-A

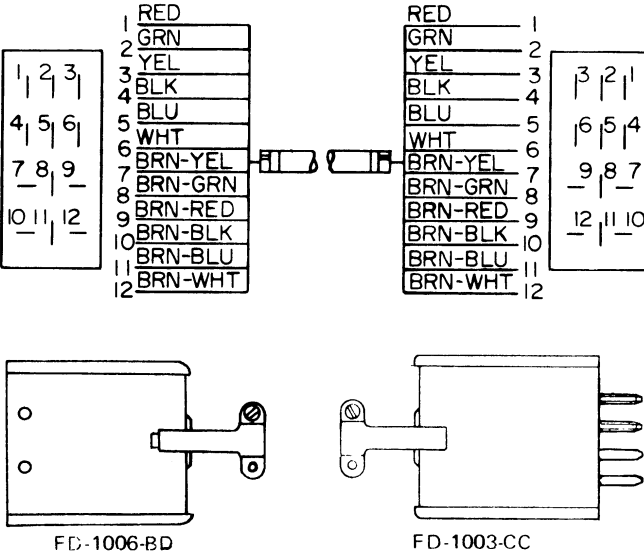


- (1) 12 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 10'-4" LENGTH OF D-543285-D CORDAGE
- (1) FD-1006-BD RECEPTACLE AND CAP
- (1) FD-1003-CC PLUG AND CAP

D-543620-A

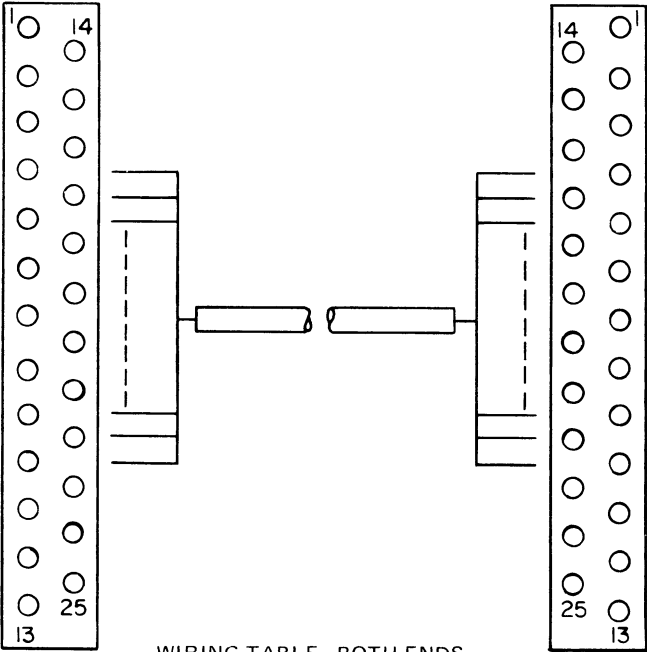


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	14	RED-YEL
2	GRN	15	RED-BLK
3	YEL	16	RED-BLU
4	BLK	17	RED-WHT
5	BLU	18	GRN-YEL
6	WHT	19	GRN-BLK
7	BRN-RED	20	GRN-BLU
8	BRN-GRN	21	GRN-WHT
9	BRN-YEL	22	YEL-BLK
10	BRN-BLK	23	YEL-BLU
11	BRN-BLU	24	YEL-WHT
12	BRN-WHT	25	BLK-BLU
13	RED-GRN		

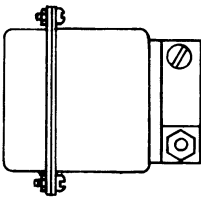


PLUG
ASSEMBLY

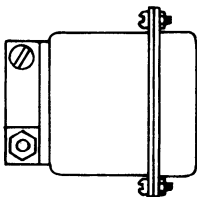

RECEPTACLE
ASSEMBLY


- (1) 25 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 6'-4" LENGTH OF D-543285-K CORDAGE
 - (1) PLUG ASSEMBLY CONSISTING OF:
 - (1) FD-1005-CG PLUG
 - (1) FD-1038-CM JUNCTION SHELL
 - (1) RECEPTACLE ASSEMBLY CONSISTING OF:
 - (1) FD-1004-FA RECEPTACLE
 - (1) FD-1038-CM JUNCTION SHELL

D-543624-A

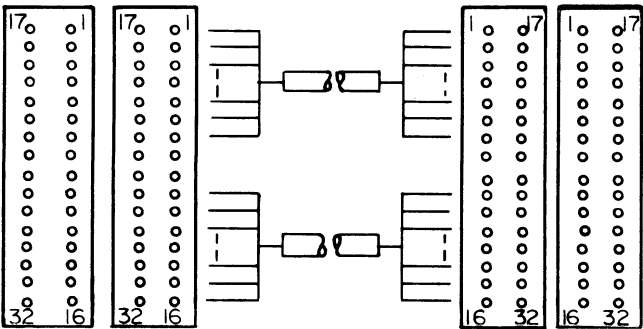


WIRING TABLE - ALL PLUGS AND RECEPTACLES

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BLU-WHT	17	WHT-BLU
2	ORN-WHT	18	WHT-ORN
3	GRN-WHT	19	WHT-GRN
4	BRN-WHT	20	WHT-BRN
5	SL-WHT	21	WHT-SL
6	BLU-RED	22	RED-BLU
7	ORN-RED	23	RED-ORN
8	GRN-RED	24	RED-GRN
9	BRN-RED	25	RED-BRN
10	SL-RED	26	RED-SL
11	BLU-BLK	27	BLK-BLU
12	ORN-BLK	28	BLK-ORN
13	GRN-BLK	29	BLK-GRN
14	BRN-BLK	30	BLK-BRN
15	SL-BLK	31	BLK-SL
16	BLU-YEL	32	YEL-BLU

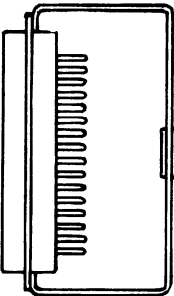


RECEPTACLE ASSEMBLY

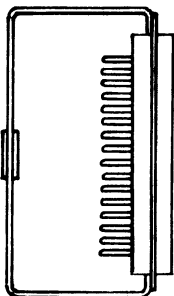

PLUG ASSEMBLY


- (1) 64 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (2) 8'-0" LENGTHS OF D-910005-A CORDAGE
 - (1) PLUG ASSEMBLY CONSISTING OF:
 - (2) FD-1005-CB PLUG
 - (1) D-732226-A BRACKET
 - (1) RECEPTACLE ASSEMBLY CONSISTING OF:
 - (2) FD-1004-FG RECEPTACLE
 - (1) D-732226-A BRACKET

D-543626-A

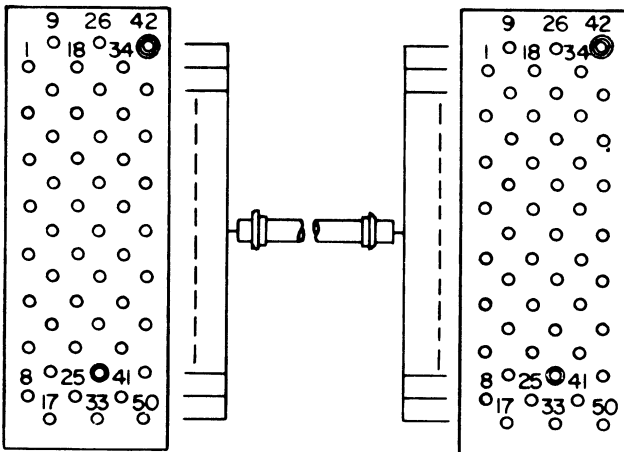


WIRING TABLE - BOTH ENDS

TERMINAL	CONDUCTOR COLOR	TERMINAL	CONDUCTOR COLOR
1	RED	26	BLK-WHT
2	GRN	27	BLU-WHT
3	YEL	28	SL
4	BLK	29	SL-YEL
5	BLU	30	SL-BLK
6	WHT	31	SL-BLU
7	BRN-RED	32	SL-WHT
8	BRN-GRN	33	SL-BRN
9	BRN-YEL	34	BRN
10	BRN-BLK	35	ORN-RED
11	BRN-BLU	36	ORN-GRN
12	BRN-WHT	37	ORN
13	RED-GRN	38	ORN-BLK
14	RED-YEL	39	ORN-BLU
15	RED-BLK	40	ORN-WHT
16	RED-BLU	41	VIO
17	RED-WHT	42	VIO-RED
18	GRN-YEL	43	VIO-GRN
19	GRN-BLK	44	VIO-YEL
20	GRN-BLU	45	PINK
21	GRN-WHT	46	PINK-YEL
22	YEL-BLK	47	PINK-BLK
23	YEL-BLU	48	PINK-BLU
24	YEL-WHT	49	PINK-WHT
25	BLK-BLU	50	PINK-BRN

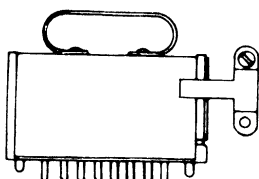

FD-1003-AS

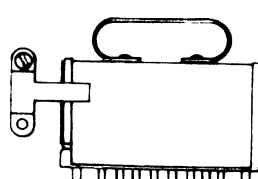


FD-1003-AS

- (1) 50 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 5'-5" LENGTH OF D-543285-AE CORDAGE
 - (2) FD-1003-AS PLUG AND CAP

D-543626-B

SAME AS D-543626-A EXCEPT CORDAGE IS 44'-2" LONG.


D-543632-A

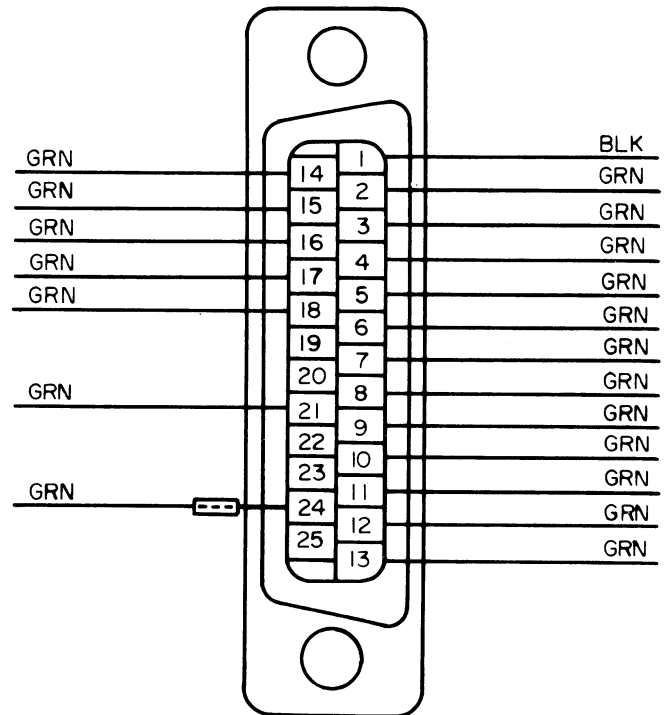

- (1) 20 CONDUCTOR CORD AND RECEPTACLE ASSEMBLY CONSISTING OF:

- (19) D-543630-AC2 CORDAGE (2" LONG)
- (1) D-543630-AG2 CORDAGE (2" LONG)
- (1) FD-1004-FW RECEPTACLE

D-543633-A

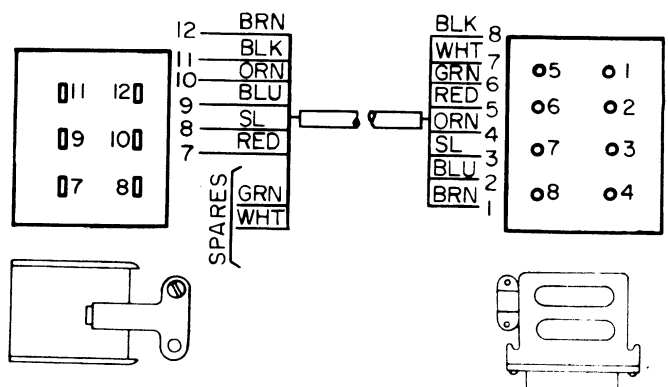


FD-1006-AT

PLUG ASSEMBLY



- (1) 8 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) D-543634-A CORD BLANK (12'- 3-3/4" LONG)
 - (1) FD-1006-AT RECEPTACLE AND CAP
 - (1) PLUG ASSEMBLY CONSISTING OF:
 - (1) FD-1005-BP PLUG
 - (1) FD-1038-CK JUNCTION SHELL

D-543634-A

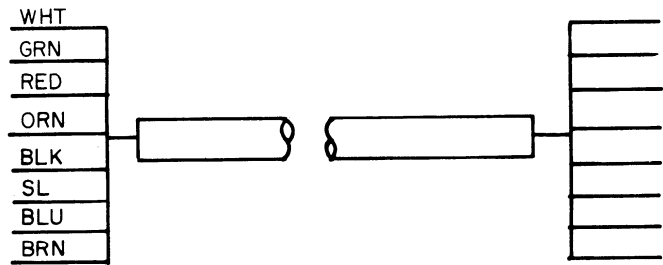


- (1) 8 CONDUCTOR CORD BLANK CONSISTING OF:
- (8) 12'- 3-3/4" LENGTHS OF 19/29 16 AWG MACHINE TOOL WIRE
- (1) BLACK NYLON BRAID


D-543636-A

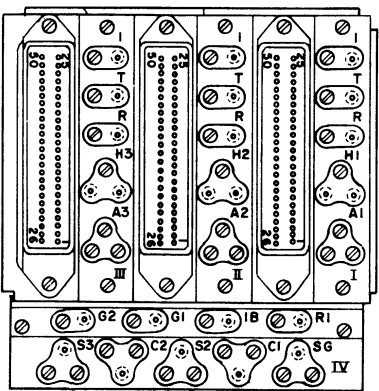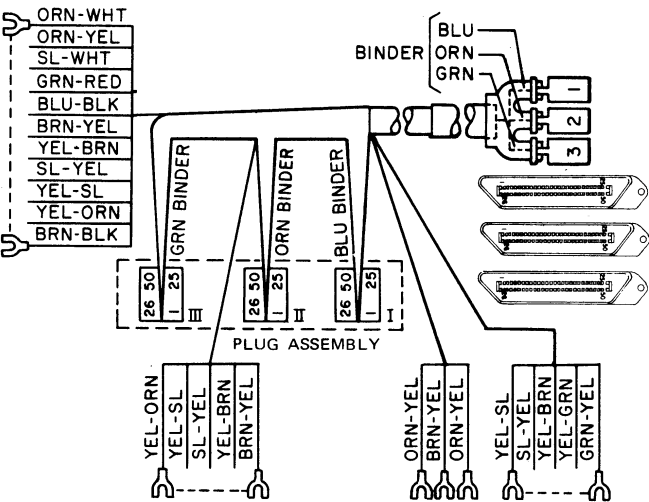

PLUG ASSEMBLY



D-150152-B



FD-1003-BM

NOTE:
SEE DRAWING
D-543636 FOR
WIRING DETAILS




- (1) 120 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 10'-0" LENGTH OF D-543635-A CORDAGE (BLACK)
- (22) D-150152-B TERMINAL
- (3) FD-1003-BM PLUG AND CAP
- (1) PLUG ASSEMBLY (SEE DRAWING D-543636 FOR STOCKLIST)

D-543636-B

SAME AS D-543636-A EXCEPT CORDAGE IS D-543635-B (BEIGE).


D-543668-A

D-543651-A

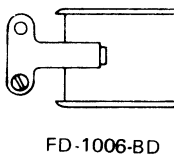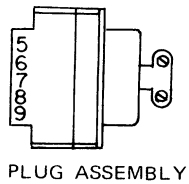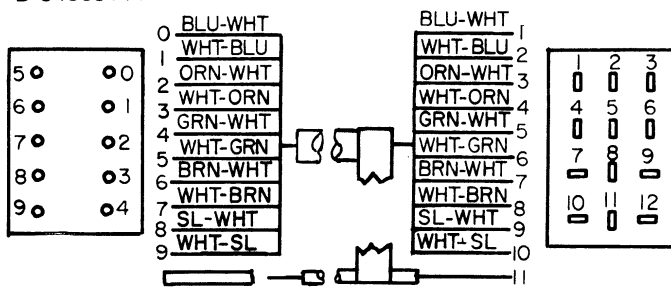



D-150318-A

- (1) 11 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 12'-0" LENGTH OF D-543285-B CORDAGE
 - (1) 12'-0" LENGTH OF W-6125-4-WIRE
 - (1) FD-1006-BD RECEPTACLE AND CAP
 - (1) D-150318-A CONTACT
 - (1) PLUG ASSEMBLY CONSISTING OF:
 - (1) D-660446-A TERMINAL BOARD
 - (1) D-660447-A TERMINAL BOARD
 - (1) FD-1038-CG JUNCTION SHELL
 - (10) D-150318-A CONTACTS

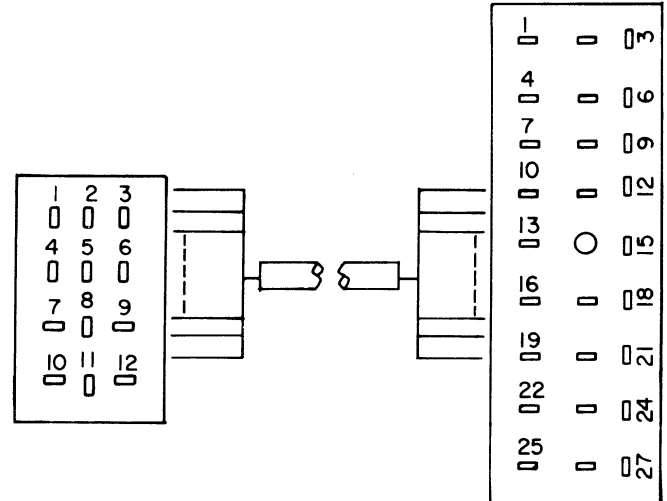


WIRING TABLE

FD-1006-BD PIN NUMBER	CONDUCTOR COLOR	FD-1003-BH PIN NUMBER
1	BLU-WHT	1
2	WHT-BLU	3
3	ORN-WHT	5
4	WHT-ORN	7
5	GRN-WHT	9
6	WHT-GRN	11
7	BRN-WHT	13
8	WHT-BRN	15
9	SL-WHT	17
10	WHT-SL	19
11	BLU-RED	21
12	RED-BLU	23
-	DRAIN	27

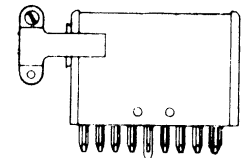


- (1) 12 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 25'-0" LENGTH OF D-910213-A CORDAGE
 - (1) FD-1006-BD RECEPTACLE AND CAP
 - (1) FD-1003-BH PLUG AND CAP

H-87657-5
(MFG. DISC. - SUPERSEDED BY D-543188-B)

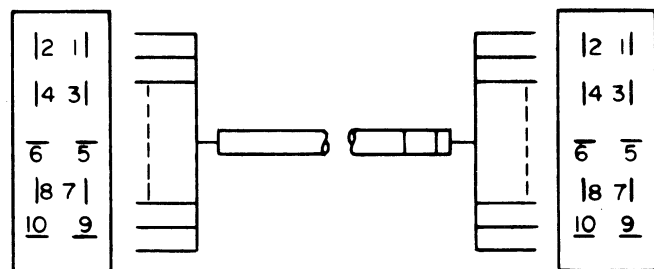


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BRN-BLU	6	BRN-RED
2	BRN-ORN	7	BRN-BLU-WHT
3	BRN-GRN	8	BRN-WHT
4	BRN-BLK	9	BRN
5	BRN-BLU-ORN	10	BRN-BLU-GRN

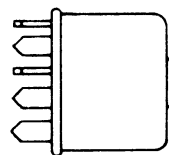


FD-1003-AE

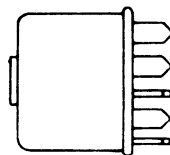

FD-1003-AE


- (1) 10 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) D-542996-A CORD BLANK
 - (2) FD-1003-AE PLUG AND CAP

H-881958-1

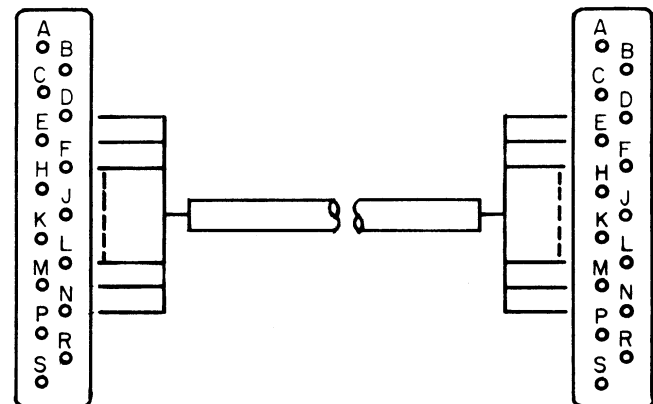


WIRING TABLE - BOTH PLUGS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
A	BLU	K	BLU-BRN
B	ORN	L	BLU-SL
C	GRN	M	ORN-WHT
D	BRN	N	ORN-GRN
E	SL	P	ORN-BRN
F	BLK-WHT	R	ORN-SL
H	BLU-ORN	S	GRN-WHT
J	BLU-GRN		

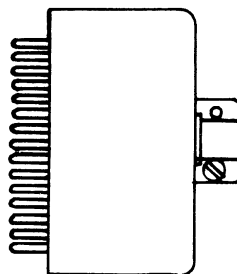

FD-1003-AF

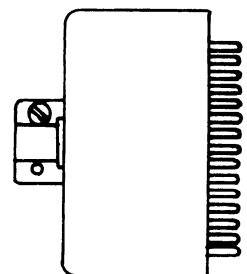


FD-1003-AF

- (1) 15 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:
- (1) H-881958-3 CORD BLANK
 - (2) FD-1003-AF PLUG AND CAP

H-881958-2

SAME AS H-881958-1 EXCEPT USES H-881958-4
CORD BLANK.

H-881958-3

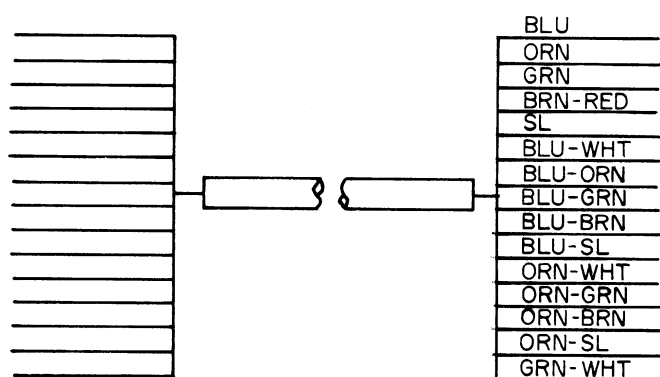


- (1) 15 CONDUCTOR CORD BLANK CONSISTING OF:
- (15) 1'-6" LENGTHS OF 10/32 22 AWG WIRE OF THE COLORS SHOWN
- (1) BLACK COTTON BRAID

H-881958-4


SAME AS H-881958-3 EXCEPT CORDAGE IS 5'-6" LONG.

H-881958-6

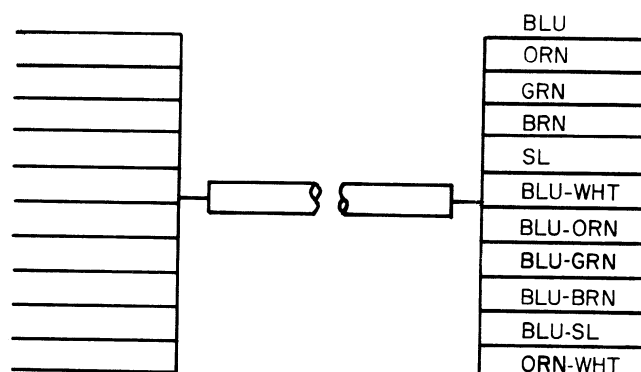


- (1) 11 CONDUCTOR CORD BLANK CONSISTING OF:
- (11) 2'- 7-1/4" LENGTHS OF 10/32 22 AWG WIRE IN THE COLORS SHOWN
- (1) BLACK NYLON BRAID

H-881958-5

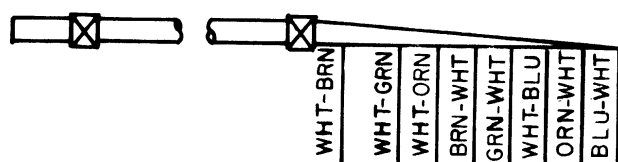

- (1) 8 CONDUCTOR FORMED CORD BLANK CONSISTING OF:
- (1) 2'-6" LENGTH OF D-910000-A CORDAGE

H-881958-7

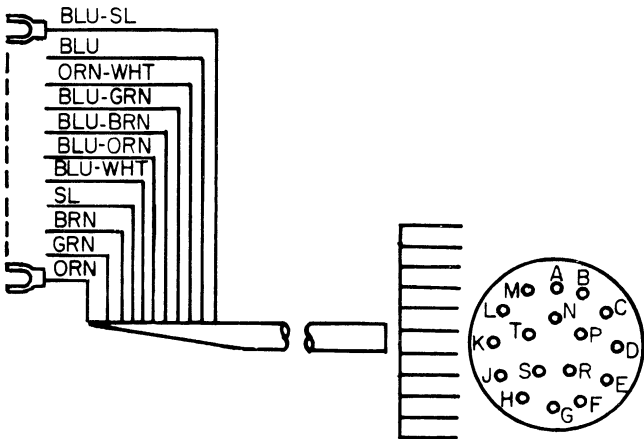


WIRING TABLE

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
A	ORN	K	BLU-BRN
B	GRN	L	—
C	BRN	M	—
D	SL	N	—
E	BLU-WHT	P	BLU-SL
F	ORN-WHT	R	BLU
G	BLU-GRN	S	—
H	BLU-ORN	T	—
J	—		




D-15444-A

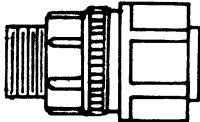

FD-1006-AR


- (1) 11 CONDUCTOR CORD AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) H-881958-6 CORD BLANK
 - (1) FD-1006-AR RECEPTACLE
 - (11) D-15444-A TERMINAL

H-881899-1

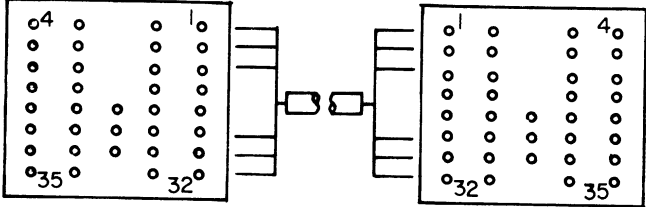


TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BLU	19	BRN-SL
2	ORN	20	GRN-WHT
3	GRN	21	RED-BLU
4	BRN	22	RED-ORN
5	SL	23	RED-GRN
6	BLU-WHT	24	RED-BRN
7	BLU-ORN	25	RED-SL
8	BLU-GRN	26	RED-BLU-WHT
9	BLU-BRN	27	RED-BLU-ORN
10	BLU-SL	28	RED-BLU-GRN
11	ORN-WHT	29	RED-BLU-BRN
12	ORN-GRN	30	RED-BLU-SL
13	ORN-BRN	31	RED-ORN-WHT
14	ORN-SL	32	RED-ORN-GRN
15	GRN-WHT	33	RED-ORN-BRN
16	GRN-BRN	34	RED-ORN-SL
17	GRN-SL	35	RED-GRN-WHT
18	BRN-WHT	—	—

D-150122-A

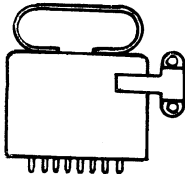


FD-1003-AK

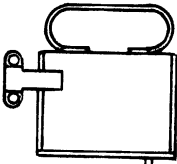

FD-1006-AG

- (1) 35 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 1'-4" LENGTH OF H-882057-1 CORDAGE
 - (1) FD-1003-AK PLUG AND CAP
 - (1) FD-1006-AG RECEPTACLE AND CAP
 - (35) D-150122-A TERMINAL


H-881899-2

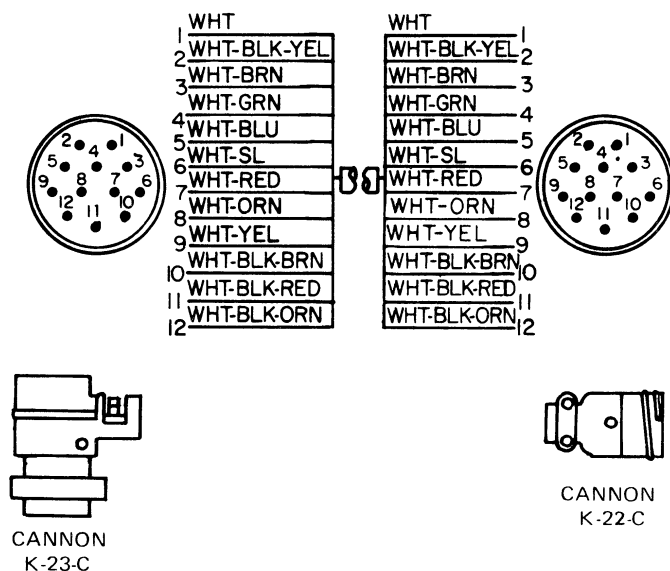



(1) 12 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:

- (1) 22'-0" LENGTH OF H-881712-1 CORDAGE
- (1) K-23-C PLUG (CANNON ELECTRIC CO.)
- (1) K-22-C PLUG (CANNON ELECTRIC CO.)

H-881899-6

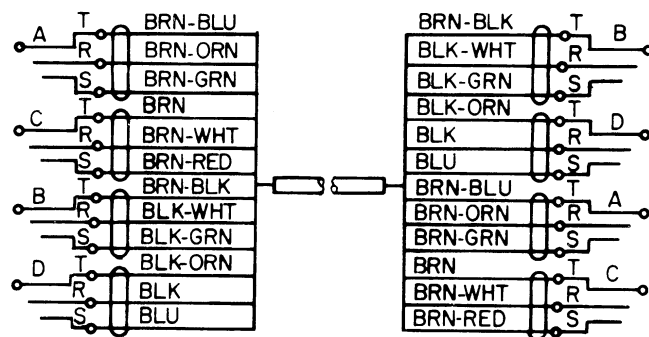


H-881899-5

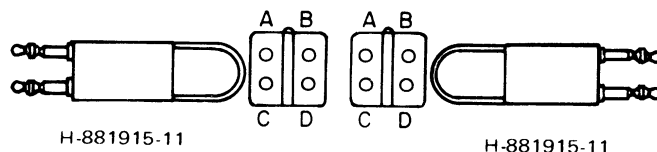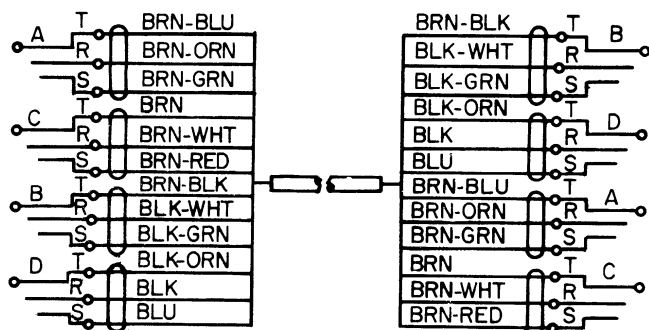

(1) 12 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:


- (1) H-881915-8 CORD ASSEMBLY (2'-10" LONG)
- (2) H-881915-11 PLUG ASSEMBLY

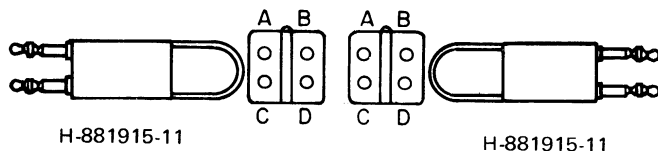

(1) 12 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:


- (1) H-881915-7 CORD ASSEMBLY (5'-8" LONG)
- (2) H-881915-11 PLUG ASSEMBLY

H-882144-1

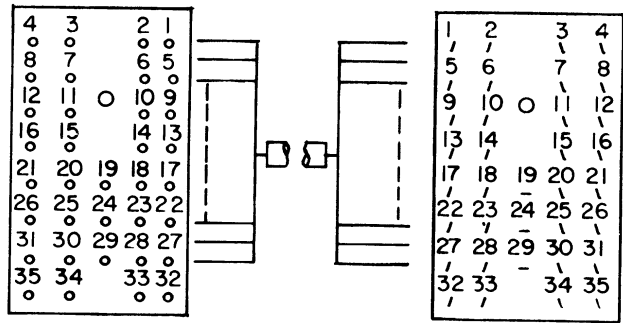


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	BLU	19	BRN-SL
2	ORN	20	SL-WHT
3	GRN	21	RED-BLU
4	BRN	22	RED-ORN
5	SL	23	RED-GRN
6	BLU-WHT	24	RED-BRN
7	BLU-ORN	25	RED-SL
8	BLU-GRN	26	RED-BLU-WHT
9	BLU-BRN	27	RED-BLU-ORN
10	BLU-SL	28	RED-BLU-GRN
11	ORN-WHT	29	RED-BLU-BRN
12	ORN-GRN	30	RED-BLU-SL
13	ORN-BRN	31	RED-ORN-WHT
14	ORN-SL	32	RED-ORN-GRN
15	GRN-WHT	33	RED-ORN-BRN
16	GRN-BRN	34	RED-ORN-SL
17	GRN-SL	35	RED-GRN-WHT
18	BRN-WHT		

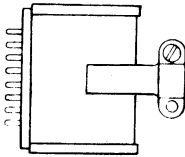

FD-1003-AJ

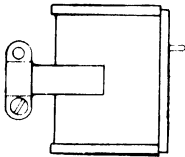


FD-1006-AE

- (1) 35 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:


- (1) 6'- 4-1/2" LENGTH OF H-882057-1 CORDAGE
- (1) FD-1003-AJ PLUG AND CAP
- (1) FD-1006-AE RECEPTACLE AND CAP

H-882146-1

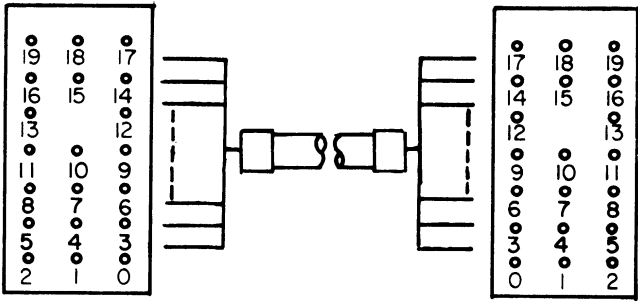


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
0	BLU	10	ORN-WHT
1	ORN	11	ORN-GRN
2	GRN	12	ORN-BRN
3	BRN	13	ORN-SL
4	SL	14	GRN-WHT
5	BLU-WHT	15	GRN-BRN
6	BLU-ORN	16	GRN-SL
7	BLU-GRN	17	BRN-WHT
8	BLU-BRN	18	BRN-SL
9	BLU-SL	19	SL-WHT

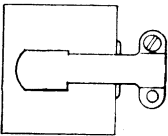

14256-A

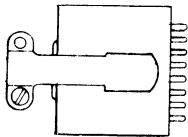


14586

- (1) 20 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:


- (1) 6'-4 -1/2" LENGTH OF H-882056-1 CORDAGE
- (1) 14256-A RECEPTACLE (CINCH MFG. CORP.)
- (1) 14586 PLUG (CINCH MFG. CORP.)

H-882596-1

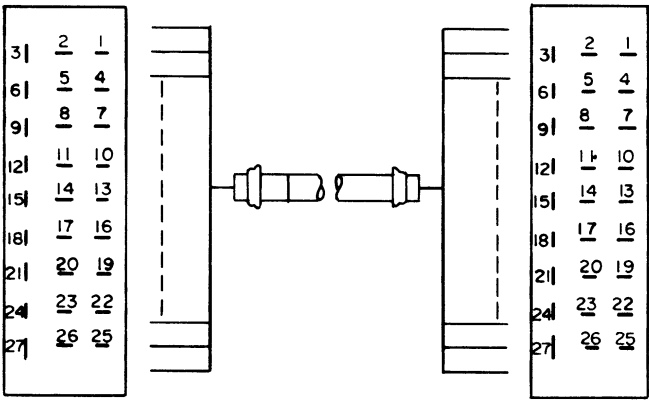


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	14	RED-YEL
2	GRN	15	RED-BLK
3	YEL	16	RED-BLU
4	BLK	17	RED-WHT
5	BLU	18	BLK-WHT
6	WHT	19	GRN-BLK
7	BRN-RED	20	GRN-BLU
8	BRN-GRN	21	GRN-WHT
9	BRN-YEL	22	SL-YEL
10	BRN-BLK	23	GRN-YEL
11	BRN-BLU	24	SL-WHT
12	BRN-WHT	25	BLK-BLU
13	RED-GRN		

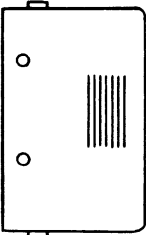

FD-1006-AL

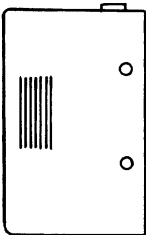

FD-1006-AL

- (1) 25 CONDUCTOR CORD AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 5'-4" LENGTH OF D-543285-J CORDAGE
 - (2) FD-1006-AL RECEPTACLE AND CAP

H-882596-2

SAME AS H-882596-1 EXCEPT CORDAGE IS 10'-4" LONG.


H-882596-3

SAME AS H-882596-1 EXCEPT CORDAGE IS 15'-4" LONG.

H-882596-4


SAME AS H-882596-1 EXCEPT CORDAGE IS 20'-4" LONG.

H-882619-1

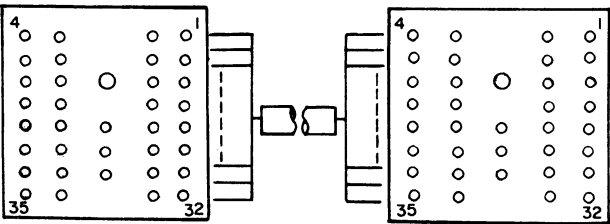


WIRING TABLE - BOTH ENDS


TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	SL-YEL
2	GRN	20	SL-BLK
3	YEL	21	SL-BLU
4	BLK	22	GRN-WHT
5	BLU	23	-
6	WHT	24	-
7	BRN-RED	25	-
8	BRN-GRN	26	-
9	BRN-YEL	27	-
10	BRN-BLK	28	-
11	BRN-BLU	29	-
12	BRN-WHT	30	-
13	RED-GRN	31	-
14	RED-YEL	32	-
15	RED-BLK	33	-
16	-	34	-
17	RED-BLU	35	-
18	-		




D-150122-A



D-150122-A

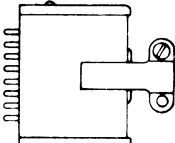

FD-1003-AJ


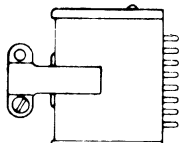


FD-1003-AJ

- (1) 20 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 8'-6" LENGTH OF D-543285-J CORDAGE
 - (40) D-150122-A TERMINAL
 - (2) FD-1003-AJ PLUG AND CAP



H-882619-3

H-882619-2

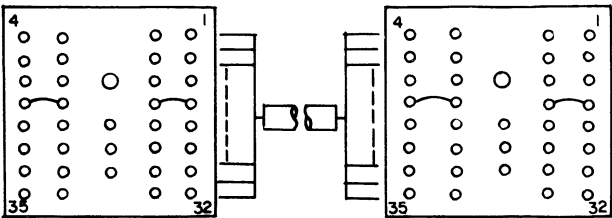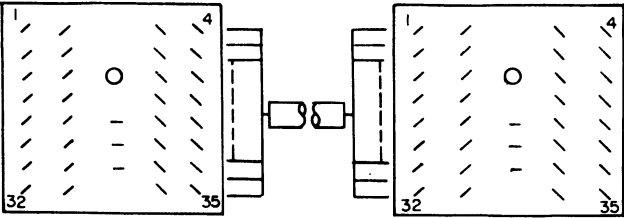

WIRING TABLE - BOTH ENDS





TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	GRN-BLK
2	GRN	20	GRN-BLU
3	YEL	21	GRN-WHT
4	BLK	22	YEL-BLK
5	BLU	23	YEL-BLU
6	WHT	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	BLU-WHT
10	BRN-BLK	28	SL
11	BRN-BLU	29	--
12	BRN-WHT	30	SL-YEL
13	RED-GRN	31	SL-BLK
14	RED-YEL	32	SL-BLU
15	RED-BLK	33	SL-WHT
16	RED-BLU	34	--
17	RED-WHT	35	--
18	GRN-YEL		

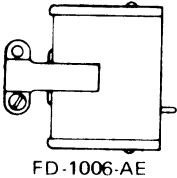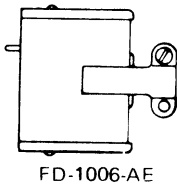

- (1) 32 CONDUCTOR CORD AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 8'-6" LENGTH OF D-543285-J CORDAGE
 - (2) FD-1006-AE RECEPTACLE AND CAP


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	BLK-BLU
2	GRN	20	BLK-WHT
3	YEL	21	--
4	BLK	22	--
5	BLU	23	--
6	WHT	24	--
7	BRN-RED	25	--
8	BRN-GRN	26	--
9	BRN-YEL	27	--
10	BRN-BLK	28	--
11	BRN-BLU	29	--
12	BRN-WHT	30	--
13	*RED-GRN	31	--
14	*RED-YEL	32	--
15	*RED-BLK	33	--
16	*RED-BLU	34	--
17	GRN-WHT	35	--
18	YEL-BLK		

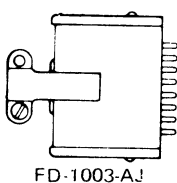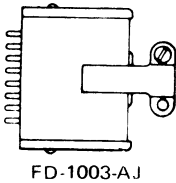


- (1) 20 CONDUCTOR CORD AND PLUG ASSEMBLY CONSISTING OF:
- (1) 15'-6" LENGTH OF D-543285-J CORDAGE
 - (40) D-150122-A TERMINAL
 - (2) FD-1003-AJ PLUG AND CAP

H-882619-4

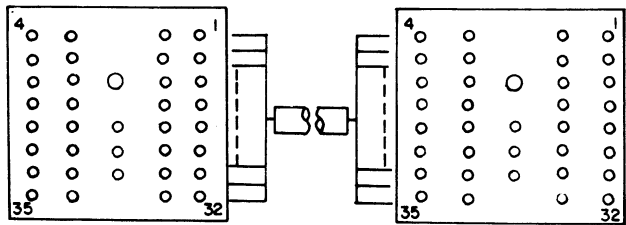

WIRING TABLE - BOTH ENDS


TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
1	RED	19	GRN-BLK
2	GRN	20	GRN-BLU
3	YEL	21	GRN-WHT
4	BLK	22	YEL-BLK
5	BLU	23	YEL-BLU
6	WHT	24	YEL-WHT
7	BRN-RED	25	BLK-BLU
8	BRN-GRN	26	BLK-WHT
9	BRN-YEL	27	BLU-WHT
10	BRN-BLK	28	SL
11	BRN-BLU	29	SL-YEL
12	BRN-WHT	30	SL-BLK
13	RED-GRN	31	SL-BLU
14	RED-YEL	32	SL-WHT
15	RED-BLK	33	SL-BRN
16	RED-BLU	34	BRN
17	RED-WHT	35	ORN-RED
18	GRN-YEL		




D-150122-A



D-150122-A

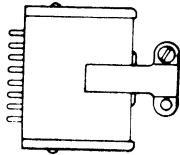

FD-1003-AJ

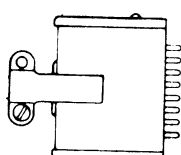


FD-1003-AJ

- (1) 35 CONDUCTOR CORD AND PLUG ASSEMBLY
CONSISTING OF:


- (1) 8'-6" LENGTH OF D-543285-AE CORDAGE
- (70) D-150122-A TERMINAL
- (2) FD-1003-AJ PLUG AND CAP

H-883178-1

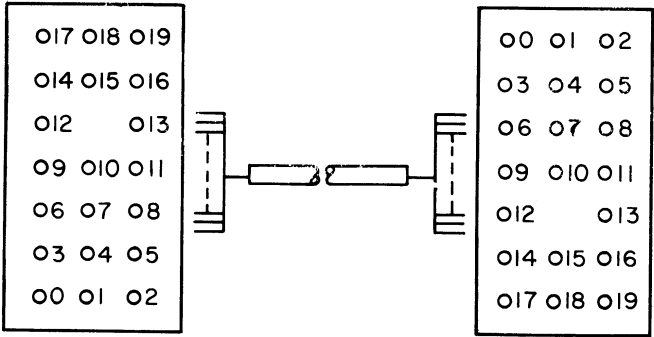


WIRING TABLE - BOTH ENDS

TERM- INAL	CONDUCTOR COLOR	TERM- INAL	CONDUCTOR COLOR
0	BLU	10	ORN-WHT
1	ORN	11	ORN-GRN
2	GRN	12	ORN-BRN
3	BRN	13	ORN-SL
4	SL	14	GRN-WHT
5	BLU-WHT	15	GRN-BRN
6	BLU-ORN	16	GRN-SL
7	BLU-GRN	17	BRN-WHT
8	BLU-BRN	18	BRN-SL
9	BLU-SL	19	SL-WHT

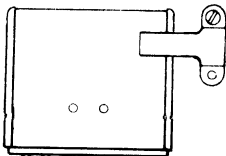

FD-1003-AH

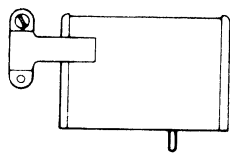


FD-1006-AC

- (1) 20 CONDUCTOR CORD, PLUG, AND RECEPTACLE
ASSEMBLY CONSISTING OF:


- (1) 8'- 4-1/2" LENGTH OF H-882056-1 CORDAGE
- (1) FD-1003-AH PLUG AND CAP
- (1) FD-1006-AC RECEPTACLE AND CAP

H-883179-1

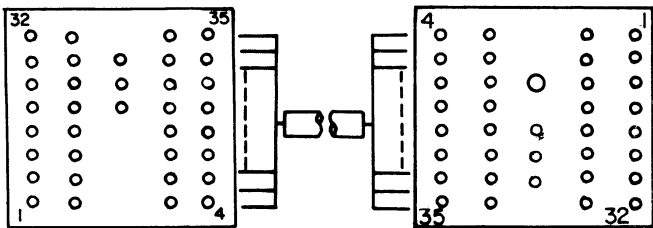


WIRING TABLE - BOTH ENDS

TER-MINAL	CONDUCTOR COLOR	TER-MINAL	CONDUCTOR COLOR
1	BLU	19	BRN-SL
2	ORN	20	SL-WHT
3	GRN	21	RED-BLU
4	BRN	22	RED-ORN
5	SL	23	RED-GRN
6	BLU-WHT	24	RED-BRN
7	BLU-ORN	25	RED-SL
8	BLU-GRN	26	RED-BLU-WHT
9	BLU-BRN	27	RED-BLU-ORN
10	BLU-SL	28	RED-BLU-GRN
11	ORN-WHT	29	RED-BLU-BRN
12	ORN-GRN	30	RED-BLU-SL
13	ORN-BRN	31	RED-ORN-WHT
14	ORN-SL	32	RED-ORN-GRN
15	GRN-WHT	33	RED-ORN-BRN
16	GRN-BRN	34	RED-ORN-SL
17	GRN-SL	35	RED-GRN-WHT
18	BRN-WHT		

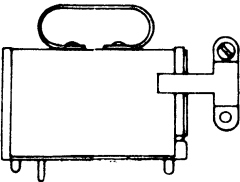


FD-1006-AG

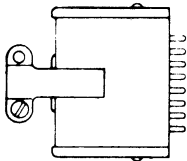

FD-1003-AJ


- (1) 35 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) 8'- 4-1/2" LENGTH OF H-882057-1 CORDAGE
 - (1) FD-1006-AG RECEPTACLE AND CAP
 - (1) FD-1006-AJ PLUG AND CAP

H-885593-1

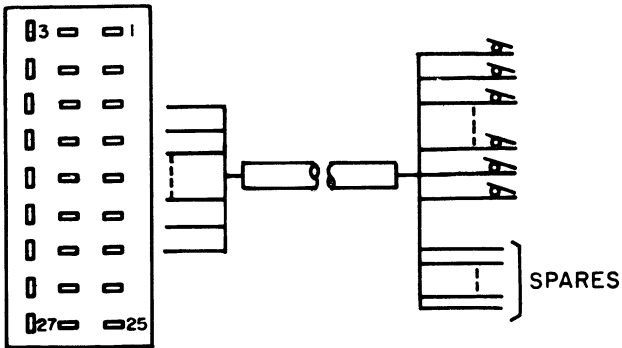


WIRING TABLE

TER-MINAL	CONDUCTOR COLOR	TER-MINAL	CONDUCTOR COLOR
1	BLK	15	RED-GRN
2	BRN	16	RED-YEL
3	RED	17	RED-BLU
4	YEL	18	BLK-BLU
5	GRN	19	BLK-WHT
6	BLU	20	GRN-WHT
7	WHT	21	BLK-SL
8	YEL-SL	22	BLU-SL
9	GRN-BRN	23	SL-WHT
10	RED-BRN	24	BRN-SL
11	BRN-YEL	25	RED-WHT
12	BLK-BRN	26	-
13	BLU-BRN	27	-
14	BRN-WHT		

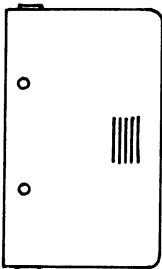

FD-1006-AL



D-150152-B




FD-1015-AA

- (1) 25 CONDUCTOR CORD, RECEPTACLE AND TEST CLIP ASSEMBLY CONSISTING OF:
- (1) 15'-0" OF D-543285-J CORDAGE
 - (1) FD-1006-AL RECEPTACLE AND CAP
 - (25) D-150152-B TERMINAL
 - (25) FD-1015-AA TEST CLIP

H-885593-2


SAME AS H-885593-1 LESS THE FD-1015-AA TEST CLIPS.

P-60754-A

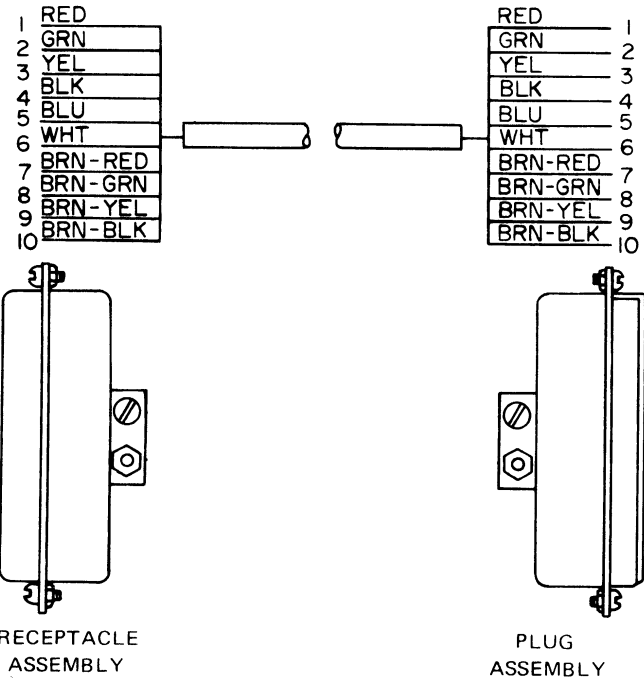

- (1) 10 CONDUCTOR CORD, PLUG, AND RECEPTACLE ASSEMBLY CONSISTING OF:
- (1) P-60754-B CORD BLANK
 - (1) RECEPTACLE ASSEMBLY CONSISTING OF:
 - (1) FD-1004-GC RECEPTACLE
 - (1) FD-1038-CG JUNCTION SHELL
 - (1) PLUG ASSEMBLY CONSISTING OF:
 - (1) FD-1005-CH PLUG
 - (1) FD-1038-CG JUNCTION SHELL

P-60754-B

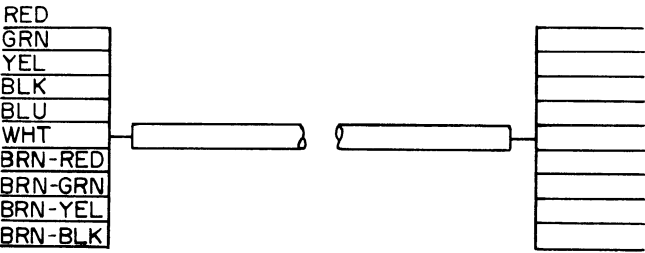

- (1) 10 CONDUCTOR CORD BLANK CONSISTING OF:
- (1) 6'- 1-1/2" LENGTH OF D-543285-A CORDAGE