

P.O. TYPE 19 RELAY

Maintenance

1. Contents.

GENERAL

Introduction	2
Coding	3
Labelling	4
Tolerances and adjustment	5
Spring-set action	6
Spring numbering	7
Coil tag numbering	8

ADJUSTMENT

Armature and residual adjustments ..	9
Spring-set adjustments	10
Return spring and current tests	11

MISCELLANEOUS

Tools	12
Replacement parts	13

GENERAL

2. Introduction.—This Instruction describes the maintenance of the P.O. Type 19 relay which is a reverse action comb operated pulsing relay. A typical relay is shown in Fig. 1.

3. Coding.—The relays are coded 'Relay No. 19/...', the number immediately following the 19/ being used to differentiate between individual designs.

4. Labelling.—The manner of labelling of the relay is the same as for 3000-type relays which is described in B 5144.

5. Tolerances and adjustment.—The relay is a 'red label' relay, i.e. a current adjusted relay. Details of adjustment values for each individual relay should be obtained from the relevant relay-adjustment card.

6. Spring-set action.

(a) The relay is comb operated reverse action using stiff stationary springs as shown in Fig. 2.

(b) Moving springs which 'make' when the armature operates are tensioned away from the armature against the comb. When the armature operates moving the comb, these springs move under their own tension and make on their associated stationary springs.

(c) Moving springs which 'break' when the armature operates are tensioned towards the armature. When the armature operates, these springs are moved directly by the comb.

(d) Spring-sets consist of only make and break units which can be combined by a metal spacer to provide a change-over or a make-before-break

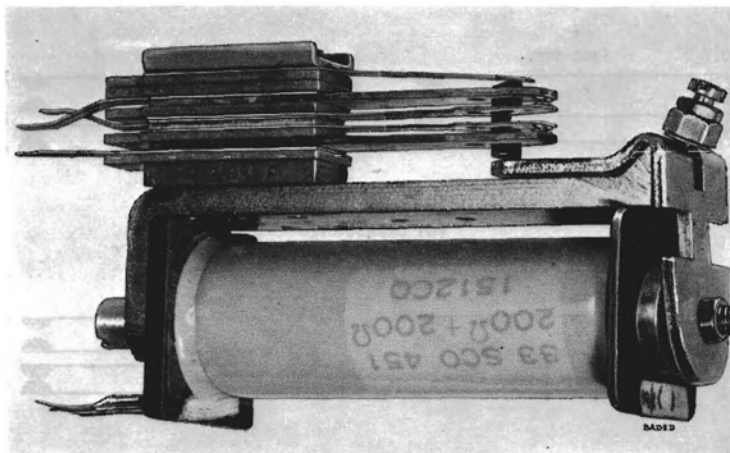



FIG. 1

contact unit as shown in Fig. 2. The connexion to the two moving springs is by a single tag.


For a change-over contact unit the stationary springs are set during manufacture so that the break spring 'breaks' before the make spring 'makes'. For a make-before-break contact unit the stationary springs are set during manufacture so that the make spring 'makes' before the break

spring 'breaks'.

For a make-before-break contact unit to maintain the numbering arrangements of the tags to conform with a 3000-type contact unit so direct replacement can take place without altering the wiring, a crank is put in the lead-out tag of the moving springs and the make spring, as shown in Fig. 3 (b).

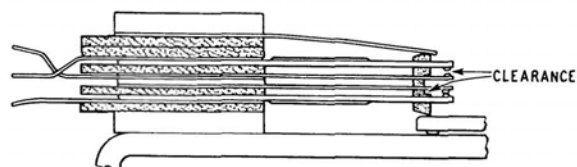

(a) ARMATURE RELEASED

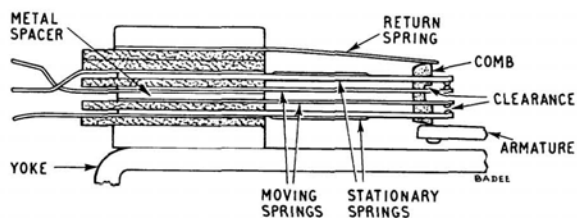


(b) ARMATURE OPERATED

FIG. 2



(a) CHANGE-OVER

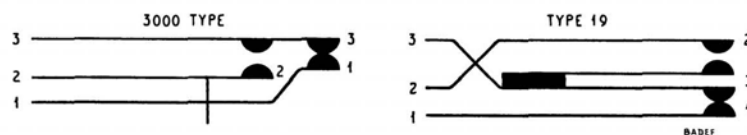

(b) MAKE-BEFORE-BREAK

FIG. 3

7. Spring numbering.

(a) For make and break contact units the numbering is the same as for 3000-type relays, i.e. spring No. 1 is nearest the armature on the left-hand side and spring No. 21 is nearest the armature on the right-hand side when viewed from the front of the relay as shown in Fig. 4 (a).

(b) For change-over contact units the unit is made up of a break contact unit and a make contact unit with the two moving springs joined electrically. The two moving springs are, therefore, given only one number as electrically they act as one spring. Other than this a change-over unit is numbered in the same way as a 3000-type relay. This is shown in Figs. 3 (a) and 4 (b).

(c) For make-before-break contact units a crank is made in the lead-out tag of the moving springs and the make spring, because of this, the springs number 1, 3, 2 on the left-hand side and 21, 23, 22 on the right-hand side counting upwards from the armature when viewed from the front. This is shown in Figs. 3 (b) and 4 (c).

8. Coil tag numbering.—The coil tags are designated 'a' to 'e' from left to right when viewed from the rear of the relay.

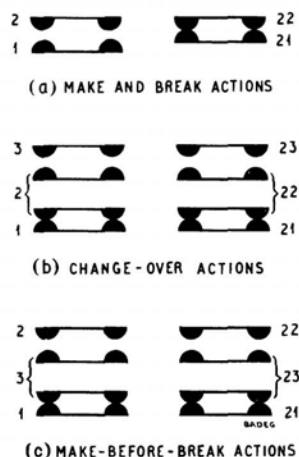


FIG. 4

ADJUSTMENT

9. Armature and residual adjustments.—The method of adjustment of the armature-fixing screw, armature travel and residual air gap for the type 19 relay are the same as those specified for the 3000-type relay (see B 5144).

10. Spring-set adjustment.

(a) The methods of adjusting moving springs are the same as for the 3000-type relay (see B 5144).

(b) Twin contacts should make or break simultaneously as judged by eye.

(c) The moving springs should be straight or slightly bowed throughout their length.

(d) *Moving spring tensions.*

(i) With the armature released, a break spring should have a contact pressure against its associated stationary spring of 10–16 gm test, 11–15 gm readjust.

(ii) With the armature operated, a make spring should have a contact pressure against its stationary spring of 10–16 gm test, 11–15 gm readjust.

(e) *Comb clearance and contact clearance and sequence.* This is shown in Fig. 2.

(i) For make springs on operate, and break springs on release, the comb should continue to move after the contacts have made so that there is a clearance between the moving spring and the comb step.

(ii) For change-over contact units the break spring should lift from the lower stationary spring before the make spring 'makes' on the upper stationary spring.

(iii) For make-before-break contact units, when the make spring 'makes' on the upper stationary spring there should still be a clearance between the step of the comb and the break spring.

(iv) The contact clearance should be 10 mil minimum unless stated otherwise on the relay-adjustment card.

(v) If the conditions above are not met, adjust the stationary springs as detailed in (f).

(f) *Stationary springs.* Set the stationary springs from their roots with Pliers, Adjusting, No. 1 or No. 2 to give the correct comb and contact clearance and correct contact sequence.

11. Return spring and current tests.—As some of the moving springs are tensioned away from the armature a return spring is provided in order to restore the armature and spring-sets on release of the relay.

Adjust the return spring tension so that the relay will pass the current tests stated on the relay-adjustment card.

Obtain the required return spring tension by bowing and setting from the root with Adjuster, Spring, No. 1 or Pliers, Adjusting, No. 1 or No. 2.

General information on carrying out current tests is contained in B 5144.

MISCELLANEOUS

12. Tools.—The tools listed in B 5144 for the 3000-

type relay are adequate for the adjustment of the type 19 relay.

13. Replacement parts.—With the exception of the armature-fixing screw (Part No. 1/DSC/398) individual parts of these relays are not available. If any part requires changing, the complete relay should be changed.

Reference:—B 5144
(TPM2/3)

E N D