REFERENCE

220A HAND TELEPHONE SET AC1 AND AD1 TELEPHONE BASES

1. GENERAL

1.01 This section provides identification, installation, maintenance, and connection information for the 220A hand telephone set, and the associated AC1 and AD1 telephone bases. This information was previously contained in Sections 502-320-100, 502-321-100, and 502-321-400 which are hereby canceled.

2. IDENTIFICATION

- 2.01 The 220A hand telephone set (Fig. 1) is a component of the dial-in-handset TRIMLINE® telephone set. The hand telephone set is a complete telephone set except for the handset cord, ringer, and line switch which are housed in either a AD1 (Fig. 2) or a AC1 telephone base (Fig. 6).
- 2.02 The AC1 telephone base is used for wall mounted installations while the AD1 base is used for desk type installations.

Ordering Guide

2.03 Basic Telephone Sets and Components:

- Set, Telephone, Hand, 220A-*
- Base, Telephone, AC1-*
- Base, Telephone, AD1-*
- Cord, Handset, H4DB-*
- Cord, Handset, H5AA-* (required when providing tip identifying ground)
- Cord, Handset, H5AD-* (equipped with message waiting lamp, 5 feet, 6 inches only) Optional.

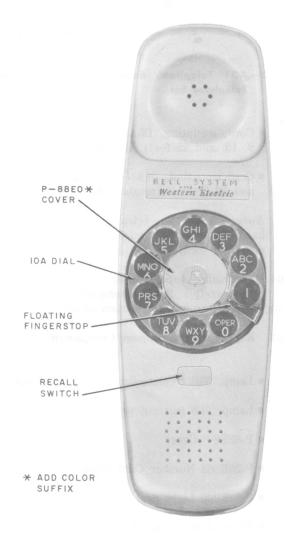


Fig. 1—220A Hand Telephone Set



Fig. 2—AD1 Telephone Base With 220A Hand Telephone Set

- Cord, mounting, D5AL-* (5 feet 6 inches, 9, 13, and 25 feet) AD1 base.
- Cord mounting, D5AN-* (5 feet 6 inches, 9 and 13 feet, retractable) AD1 base.

Note: A complete telephone set consist of a hand telephone set, base, handset cord, and mounting cord, all of which must be ordered.

2.04 Associated Apparatus or Equipment (order separately): 2012A Transformer (for other suitable transformers, see section on transformers)

2.05 Replaceable Common Components:

- Lamp, 53B (replacement for all handsets)
- Lamp, 51B (current production sets)
- P-82E8-* Cover
- P-25E803 Number Card Retainer
- P-28E320 Light Seal
- Form, E5002A (number card)
- Ringer, P1A
- *Refer to Table A for color suffix.

2.06 A customer instruction booklet (GN-2426) is shipped loose with the hand telephone set and should be left with the customer.

TABLE A
COLOR ORDERING GUIDE

STANDARD COLOR*	SUFFIX
Black	-03
Ivory	-50
Green	-51
Red	—53
Yellow	-56
White	—58
Rose Pink	—59
Lt. Beige	60
Lt. Gray	-61
Aqua Blue	-62
Turquoise	-64

^{*}Refer to Section 500-120-100 for promoted colors.

Design Features

2.07 220A Hand Telephone Set:

• Illuminated dial

Note: Early production handsets will have the lamp in a vertical position, current production handsets have the lamp in horizontal position.

- Dial is equipped with a "floating" finger stop
- Equipped with a recall switch
- P-82E800 type cover or number card and associated retainer can be used to conceal housing screws and lamp
- Equipped with jack (Fig. 3) to accommodate a plug ended handset cord (Fig. 4)

2.08 AC1 and AD1 Telephone Base:

- Factory-wired for individual or bridged service
- Adjustable ringer volume control

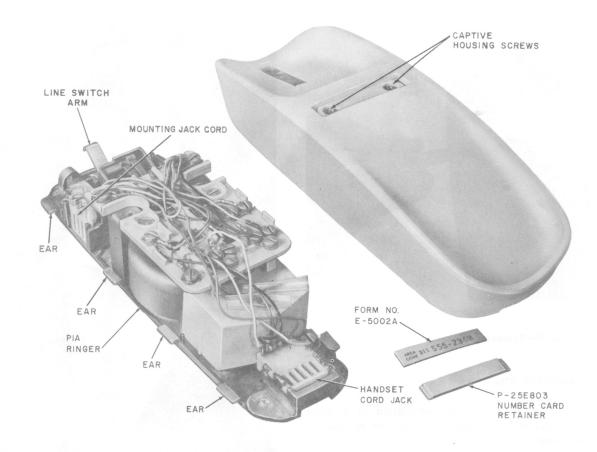


Fig. 3—Interior of AD1 Telephone Base

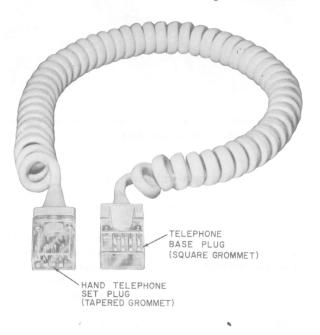


Fig. 4-H4DB Cord

- AC1 base (for vertical mounting)—jack equipped to receive plug-ended handset cord
- AD1 base (for horizontal mounting)—jack equipped to receive plug-ended handset and mounting cords
- A lead control (optional)
- 4-party full selective or 8-party semiselective ringing by adding 426N diode (optional)
- Space provided on bases for number card and associated number card retainer (Fig. 5)
- AC1 telephone base designed to permit hanging up handset without going to on-hook position (Fig. 6)

2.09 The hand telephone set with base can be used on CO or PBX lines or can be modified for use with 1A1, 1A2, or 6A key telephone systems.

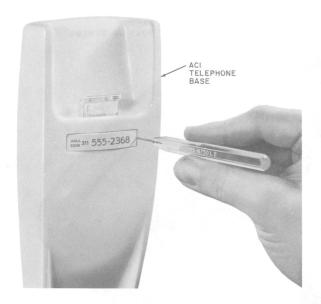


Fig. 5—Removing Number Plate Retainer

3. INSTALLATION

- **3.01** When planning the installation of a hand telephone set together with its companion base, consider the following:
 - Safety for yourself, customer, and maintenance personnel
 - Location—desk, table, wall, etc.
 - Availability of power outlet for hand telephone set dial light transformer
 - Space requirements
 - General appearance of installation
- bases are secured by captive housing screws located behind the number card and number card retainer. To remove the housing from either base assembly use a KS-16750 type releaser or equivalent to remove the number card retainer. Be careful not to damage the housing. Loosen the two captive screws, which are now exposed, and lift the housing off.

Note: 220-type telephone sets may be found in the field with a number card or cover used to conceal the screws in the handset. Current

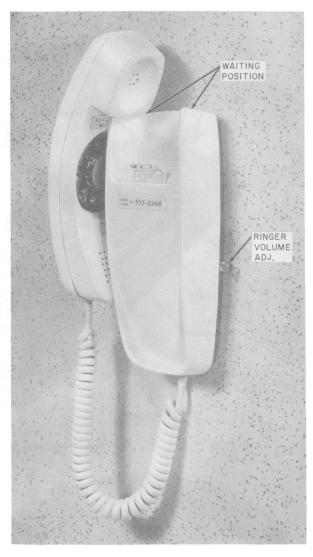


Fig. 6—220A Hand Telephone Set in Waiting Position on AC1 Telephone Base

production sets will have the number card in the base since this is a more convenient location for the customer.

- 3.03 The AC1 base may be mounted directly to a firm vertical surface. If necessary, use a 155-type adapter or 182-type backboard. Refer to appropriate section in Division 463 for additional information on adapters and backboards.
- 3.04 When inside wire to the AC1 (wall) telephone base is exposed, terminate the line and transformer wiring at a common bridging point,

such as a 42A connecting block. Run one quad station wire from the connecting block to the telephone base. Wiring may enter from the opening at the bottom, top, or through the backplate.

3.05 In cases where an inside wire is already in place through a wall, an exposed wire run may be necessary between the dial light transformer and the base.

3.06 To replace the housing on the AC1 base, lift and hold the line switch plunger while housing is placed on the backplate. Release plunger so it will rest properly on the line switch arm of the base assembly. Tighten the captive housing screws and replace the number card and number card retainer.

3.07 Insert the plug end of the D5AL or D5AN mounting cord (Fig. 7) into the jack located on the underside of the base assembly. Make sure that the spring clip of the plug snaps into place to secure the plug. Lay the cord in the cord channel and slide the cord retainer over the cord.

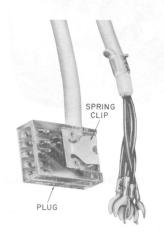


Fig. 7—D5AL Mounting Cord

3.08 Connect the 220A hand telephone set to a telephone base by plugging an H4DB or H5AA (tip party identifying ground) cord in the jacks on each component.

3.09 If tip party identification is required, an H5AA cord must be used. Check under P-82E800 cover to see that screw used in tip party

identification switch is tightened down. The absence of a screw or screw hole, in the identification switch position (Fig. 8) indicates that the connection has been made in the network at the factory.

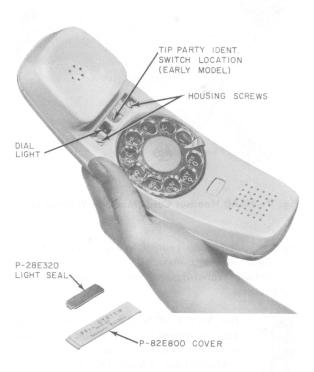


Fig. 8—220A Hand Telephone Set, Cover and Light Seal Removed

3.10 If message waiting lamp feature is required, an H5AD cord must be used (Fig. 9) the lamp equipped end of the cord plugs into the hand telephone set.



When using push-in-lock type plugs make sure the contacts are in proper position to make electrical connection with the mating contacts, and that the plug is placed in the proper receptacle. Either error will cause circuitry problems and extreme difficulty in removing the plug.

3.11 Where a single dial light is involved, use a 2012A transformer. Select a 105-120 volt ac receptacle not controlled by a switch. Use a 2A clamp to secure transformer to the outlet if transformer is not a current production model

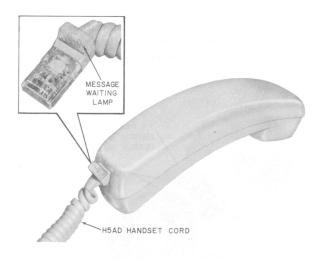


Fig. 9—H5AD Handset Cord (Message Waiting Lamp)

having folded-blade prongs. Where two or more dial light sets are installed, refer to the section on station transformers for use with multiple installations.



DO NOT USE 2012B TRANSFORMER. The illumination of the dial diminishes with increased cord lengths. In installations where the illumination is considered inadequate, replace 51B or 53B lamps with their respective 51A or 53A lamps provided the lamp power is supplied by a 2012A transformer and the combined length of mounting and handset cords exceed 15 feet. Refer to Part 5 Maintenance, for dial lamp replacement.

3.12 When the hand telephone set is used in conjuction with a key telephone system, the dial lamp can be powered from the 10 volt tap of a 101G or equivalent power supply of the key system. If a 10 volt power supply is used, replace 51B or 53B lamps with 51A or 53A lamps.

3.13 Ringing and/or identification ground, where required, is common to the lamp circuit. Damage to the transformer may result if there is sufficient ground potential difference between power and telephone grounds. Refer to appropriate section on bonding to power grounds in Division 460.

3.14 A 426N diode must be installed in either the AC1 or AD1 base assembly when connecting for 4-party full selective or 8-party semiselective ringing. The two leads from the diode are designated No. 1 and No 2. Lead No. 1 extends from the flanged (gold) base of the diode; lead No. 2 extends from the housing tip of the diode. Place the diode in the opening provided in the terminal board (Fig. 10). Dress the leads to the appropriate terminal board terminals, refer to Table E for connections.

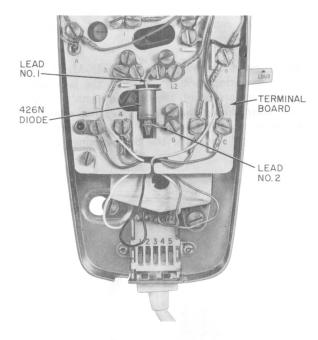


Fig. 10-426N Diode Installed

3.15 Where extreme noise induction conditions exist, the 426N diode will not be used. Instead, a cold-cathode tube or a ringer isolator installed on a 74A connecting block may be used. See section on inductive noise for connection information.

3.16 For portable installations of the AD1 telephone base, terminate the line and transformer wiring to 550A jacks or equivalent. Connect the spade-tipped leads of the D5AL or D5AN mounting cord to a 505A plug. Connect other end of mounting cord to AD1 base in normal manner.



On 2-party tip stations requiring ground identification, be sure that the jacks and plugs are installed in accordance with the section on jacks and plugs.

4. OPERATION

- **4.01** Instruct the customer on the necessary operating features.
- 4.02 Recall Switch (Fig. 1): Point out recall switch and explain advantages of switch. Example: If a person receives busy tone at conclusion of dialing a number, he may depress the recall switch for a few seconds; then release. Dial tone will again be heard. This is done in place of depressing line switch plunger on the telephone base.

Caution: If the recall switch is depressed during conversation or dialing, central office equipment may be disconnected.

4.03 "Floating" Finger Stop: Demonstrate moveable finger stop by dialing a digit. Then depress recall switch.

Note: When demonstrating finger stop, be guided by local instructions in choosing digits to dial. Some digits (i.e., 1 or 9) may be used as special access numbers for services such as DDD in ANI offices.

- **4.04** To prevent dialing errors, every digit dialed requires rotation of fingerwheel until finger is stopped by the moveable finger stop.
- **4.05** Demonstrate the three-step ringer volume control. Caution the customer about ringer cutoff if the screw is removed to provide this feature.

5. MAINTENANCE

- **5.01** Maintenance of the AC1 and AD1 telephone bases is limited to ringer bias adjustment, burnishing or adjusting contacts, and replacement of defective components.
- **5.02** For adjustments and ringer cutoff feature of the P1A ringer, refer to the appropriate ringer section in Division 501.
- 5.03 In areas where RF suppression is required, replace the hand telephone set with a set

that has been modified by the local distributing house. Modified sets will not be recoded but will be stamped "RF Suppressed See Section 500-150-100". Stamp is located adjacent to handset cord jack where the set code is stamped.

- 5.04 Field maintenance of the 220A hand telephone set is limited to the following:
 - Dial lamp
 - P-25E803 number card retainer
 - P-28E320 light seal
 - Form E-5002A number card
 - Handset cords
 - P-82E800 cover
- hand telephone set, removing cover or number card retainer, and light-seal plate. Current production hand telephone sets have the lamp in a horizontal position, and a KS-6320 orange stick can be used to remove the lamp. Exercise caution to prevent the lamp from flying out of the socket in a dangerous manner. In early production hand telephone sets use a 553A tool to remove the lamp from its vertical position (Fig. 11).



Lamps carried for maintenance reasons should be of the 53B-type since both early and current production handsets accommodate this type.

5.06 To replace a plug ended handset cord (Fig. 12) use a KS-16750 type releaser. Insert tool in space provided and apply pressure against spring clip toward body of plug. When spring clip has been depressed, pull plug out of jack.



If transmission troubles are experienced or the dial is inoperative, replace the hand telephone set.

- **5.07** To test hand telephone set procede as follows:
 - (a) Make sure all connections are correct and secure.

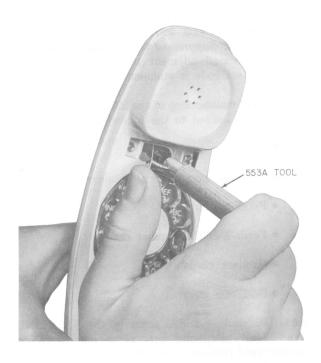


Fig. 11—Replacing Dial Lamp in Early Production TRIMLINE Hand Telephone Set

- (b) Listen to set receiver for presence of dial tone.
 - (1) If dial tone is heard, dial any digit or digits prescribed by local instructions to break dial tone. If dial tone can be broken, depress and release recall button.
 - (2) If dial tone is not heard, in set receiver, connect dial hand test set at connecting block. If dial tone is heard with test set, remove the handset cord at the hand telephone set and move the test set leads to the (G) and (R) conductors at the cord plug. If dial tone is now heard, replace the hand telephone set. If dial tone is not heard, test both handset cord and telephone set base.

6. CONNECTIONS

6.01 To restrict the dial on the 220A handset place a strap between the pulsing contacts as shown in Fig. 13 and 14. The dial will remain in the handset.

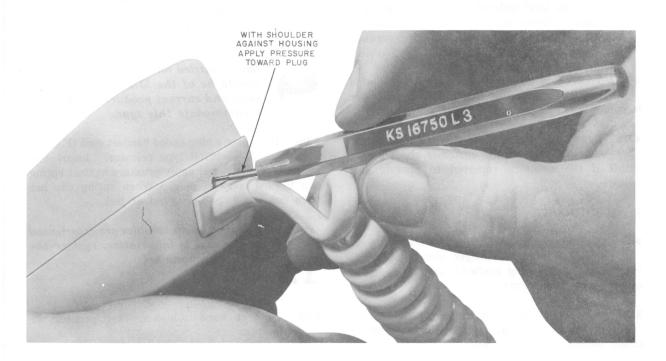


Fig. 12—Removing Cord From 220A Hand Telephone Set

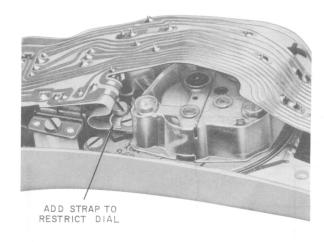


Fig. 13—Restricting Dial of 220A Hand Telephone
Set

TABLE B CONVERSION FOR USE WITH 1A1, 1A2, AND 6A KTS

LEAD		20100	TERMINAL BOARD		
		COLOR	FROM	то	
Line Swite		BR S Y	C A L2	G L2 3	
Ringer	AC1 AD1	BK BK	L1 G	C C	
Mtg Cord or IW		R	L2	С	
Capaci Stra		BK	A	L1	

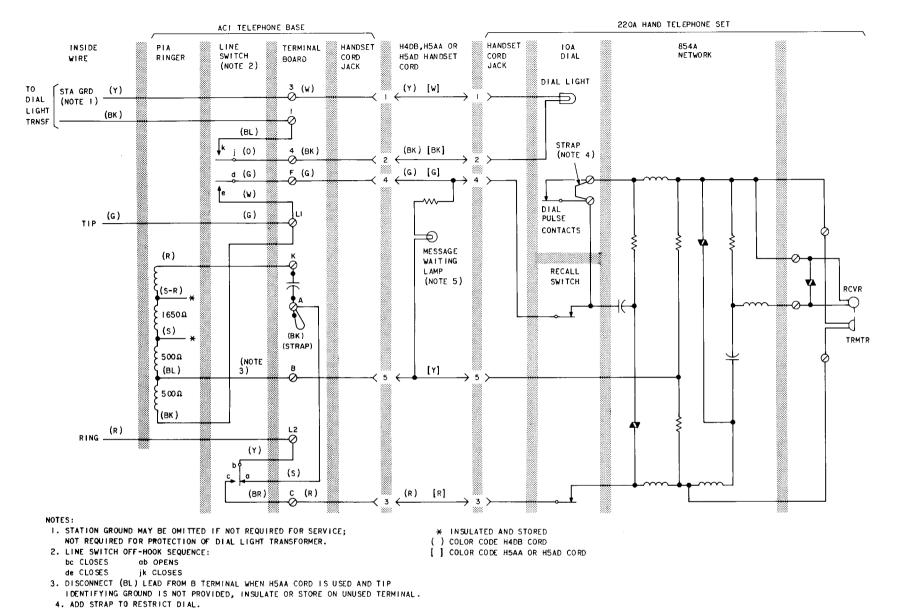


Fig. 14—220A Hand Telephone Set and AC1 Telephone Base, Wiring Diagram

5. LAMP AND RESISTOR ARE PART OF H5AD CORD ONLY FOR MESSAGE WAITING

FEATURE. [Y] LEAD IS NOT TERMINATED IN SET PLUG.


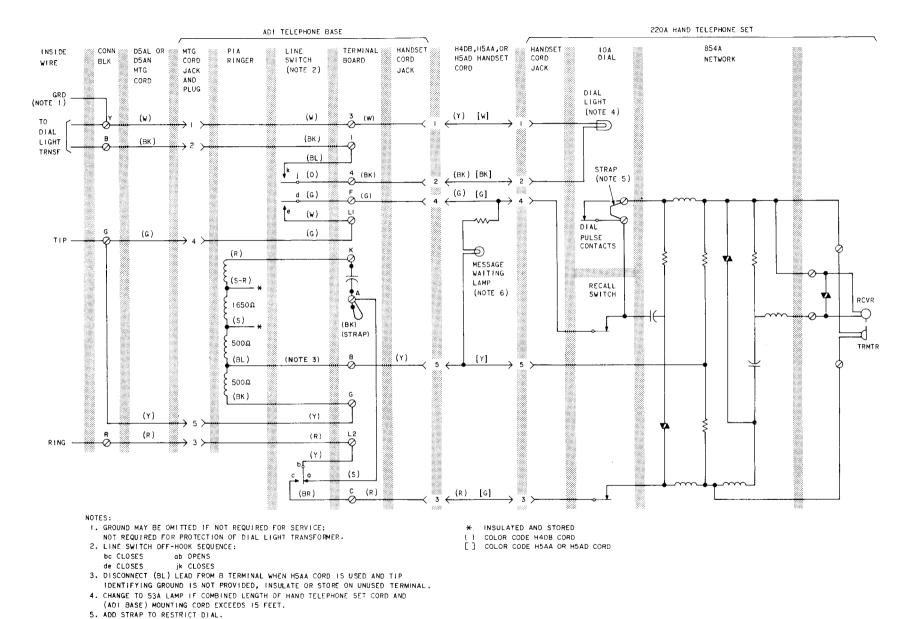


Fig. 15—220A Hand Telephone Set and AD1 Telephone Base, Wiring Diagram

6. LAMP AND RESISTOR ARE PART OF HSAD CORD ONLY FOR MESSAGE WAITING FEATURE. [Y] LEAD IS NOT TERMINATED IN HANDSET PLUG.

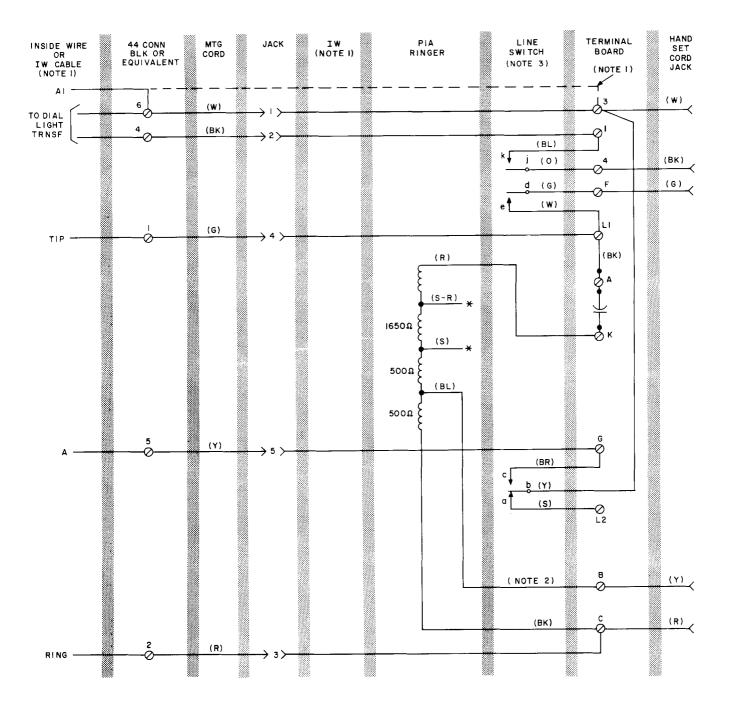

NOTES:

- I. RUN INSIDE WIRE DIRECTLY TO TERMINAL BOARD. WHEN ACT BASE IS USED AND TO CONNECTING BLOCK WHEN ADT BASE IS USED.
- 2. DISCONNECT (BL) LEAD FROM TERMINAL B WHEN H5AA CORD IS USED, INSULATE OR STORE ON UNUSED TERMINAL.
- 3. LINE SWITCH OFF-HOOK SEQUENCE
 - b-c CLOSES
 - d-e CLOSES
 - a-b OPENS
 - j-k CLOSES
- * INSULATED AND STORED

Fig. 16—AC1 and AD1 Telephone Bases, Connections For 1A1, 1A2, and 6A Key Telephone System

TABLE C

AC1 (WALL) TELEPHONE BASE, RINGER CONNECTIONS

				TIP PARTY		
	WIRE OR LEAD		RING PARTY	NO IDENT GROUND	WITH IDENT GROUND (NOTE 1)	
Inside Wire	Ring Tip GRD TRNSF	R G Y BK	L2† L1† 3 1	L1 L2 3 1	L1 L2 3 1	
Ringer Leads (Note 2)		R BK BL*	К 3 В	К 3 В	K 3 B	

Notes:

- 1. Same connections used for either 1000 or 2650 ohm Central Offices. For tip party identifying ground 1000Ω or 2650Ω H5AA cord must be used.
- 2. To permanently silence ringer; move (R) ringer lead from K to G on terminal board. For tip party identification (BK) ringer lead must remain on 3 of terminal board.
- *Disconnect (BL) lead from terminal B when H5AA cord is used and tip identifying ground is not provided, insulate or store on unused terminal.
- †Reverse ring and tip for tip party service without identifying ground.

TABLE D

AD1 (DESK) TELEPHONE BASE, RINGER
CONNECTIONS

WIRE OR LEAD				TIP PARTY			
		COLOR	RING PARTY	NO IDENT GROUND	WITH IDENT GROUND (NOTE 1)		
Inside Wire at Conn Block	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$		R G Y Y B	R G Y Y B			
Co	Mtg Cord at Conn Block		R† G† Y B	G R Y B	G R Y B		
Mtg Cord in Tel Base		R G Y BK W	L2 L1 G 1	L2 L1 G 1	L2 L1 G 1		
Ringer Leads (Note 2)		R BK BL*	K G B	K G B	K G B		

Notes:

- 1. Same connections used for either 1000 or 2650 ohm Central Offices. For tip party identifying ground— 1000Ω or 2650Ω H5AA cord must be used.
- 2. To permanently silence ringer; move (R) ringer lead from K to G on terminal board. For tip party identification (BK) ringer lead must remain on G of terminal board.
- *Disconnect (BL) lead from terminal B when H5AA cord is used and tip identifying ground is not provided, insulate or store on unused terminal.
- †Reverse ring and tip for tip party service without identifying ground.

TABLE E
CONNECTIONS FOR 4-PARTY FULL SELECTIVE OR 8-PARTY SEMISELECTIVE RINGING USING 426N DIODE

PARTY		LEADS OR COLOR	— RING	—TIP		+RING	G +TIP	
Line Wire Conn at	Ring	R	R	R		R	R	
	Tip	G	G	G		G	G	
Conn Block	GRD	Y	Y	7	Y	Y	Y	
Dial Light		1	Y	Y		Y	Y	
Transformer	· Leads	2	В	1	3	В	В	
		R	R	(3	R	G	
Mtg Coi	rd.	G	G	R		G	R	
at		Y	Y	7	Y	Y	7	7
Conn Bl	Conn Block		Y	7	Y	Y	Y	
		BK	В	I	3	В	I	3
			L2	L2	L1*	L2	L2	L1*
Mtg Co	rd	G	L1	L1	L2*	L1	L1	L2*
or Inside	Wire	Y	3	3		3	3	
at Term. 1	Board	W	3	3		3	3	
		BK	1	-	1	1	1	
496N Die	426N Diode †		L2	L2		3	3	
420N DIC	ide i	2	G	(G	G	G	
		BK	K	K		K	K	
		R	3	3		L2	L2	
Ringer Leads		S	‡		‡	‡	‡	
	S-R	G	(7	G	G		
		BL	В	В		В	В	
Strap Fro	m A	BK	3	3		L2	L2	
Line Swi	itch	eh S ‡ ‡		‡	† †			

^{*} Connections for AC1 base (Wall)

^{† 1} Flanged (Gold) base installed in enlarged part of opening, see Fig. 10.

² Knob end (housing tip).

[‡] Insulate and store.